

## WEEE declaration

Your product is designed and manufactured with materials and components of high quality, which are recyclable and can be reused. The symbol means that your product should be disposed of separately from household waste when it reaches its end of life. Please dispose of this equipment at your local collection point or recycling center. Please help to protect the environment in which we all live.

All specifications and appearances are subject to change without notice. All information was correct at time of printing. Musikhaus Kirstein GmbH does not guarantee for the accuracy or completeness of any description, photograph or statement contained in this manual. Printed colors and specifications may vary slightly from product. Products from Musikhaus Kirstein GmbH are only sold through authorized dealer. Distributors and dealers are not agents of Musikhaus Kirstein GmbH and have no authority to bind Musikhaus Kirstein GmbH legally in any way. This manual is protected by copyright. Any copying or reprint, even in excerpts, is only allowed with written consent of Musikhaus Kirstein GmbH. The same applies to reproduction or copying of images, even in altered form.



**Musikhaus Kirstein GmbH**  
Bernbeurerstr. 11  
86956 Schongau  
Germany

Telefon/Phone: 0049-8861-909494-0  
Telefax/Fax: 0049-8861-909494-19

[www.kirstein.de](http://www.kirstein.de)

# FUNKEY

## Funkey 61 Edition / Edition Pro



## User manual

00038124/00038126/00038127/00038128  
Version 05/2020

## Caution

The following requirements shall be observed to avoid hurting yourself Or anybody else as well as damaging of peripheral devices. The intensions will include (but not limited to) the followings:

### Cautions

#### AC/DC adapter:

- Please use specified AC/DC Adapter, otherwise fault adapter may cause damage of your electronic organ.
- Do not place AC adapter or power cord near heating source such as central heating or heat radiator.
- Do not overbend wire and place heavy matters on wire or wind wire with other matters to avoid damaging wire.
- Regularly check power plug and clean surface dirt. Do not pull out power plug with wet hand.

#### Do not open the casing of electronic organ:

- Do not open the casing of electronic organ and try to disassemble any part of it, nor make any change to it. Should any abnormal function occur in use, please stop operating it immediately and send it for repair by qualified servicemen.

#### Location of placing electronic organ:

- Do not place the electronic organ in an environment of dusty, vibrating, low or high temperature (such as exposed to direct sunshine, near central heat or in the car exposed under sunshine) to avoid damaging appearance or internal part.
- Do not put the electronic organ in an unstable place to avoid falling. Do not put any vessel holding liquid on the electronic organ to avoid liquid flowing in it and impairing internal part.

#### Maintenance:

- To clean the body of the electronic organ, wipe it with dry soft cloth. Do not use paint, dope, organic solvent or chemically impregnated cloth.

#### Connection of peripheral device:

- In order to prevent speaker from damaging, please adjust the volume of peripheral device to the lowest and after music is gradually played, adjust to appropriate volume.

#### Caution in operation:

- Do not perform the organ with the loudest or uncomfortable volume to avoid decline in hearing.
- Do not place heavy matters on the electronic organ, nor press keyboard, switch and socket With heavy force.
- The package shall be opened by adult to avoid the danger of suffocating infant or children. Please properly store or dispose the plastic package after unpacking. The matters contained are not suitable for using by the children under 3 years old.

### Notice

- Specifications are subject to change without notice.
- Should any description of product function be not specified in detail or some typing error occur, Please forgive us.
- This company retains the right which needs to revise because of the duty and finally interpretation.

## Appendix V. Technical specifications

### ■ Carried Standard

- GB8898-2011 GB17625.1-2012
- GB13837-2012

### ■ Display

- LED display/LCD display

### ■ Tone

- 300 kinds of tones

### ■ Rhythm

- 300 kinds of world well-chosen auto accompaniment

### ■ Demo

- 40 demo songs

### ■ Effect control

- Sustain, vibrato, double voice, keyboard split, transpose, beat, Intro/ending, drum

### ■ Record and program

- Record, play, program

### ■ Other function

- Panel percussion/MP3 function

### ■ Accompaniment control

- Start/stop, sync, fill in, tempo

### ■ Chord control

- Single chord, finger chord, chord clear, chord volume

### ■ Intelligent teaching

- Teaching function

### ■ Other control

- Power switch, master volume control, rhythm volume control

### ■ External jack

- DC12V power input, headphone output, MIDI output, microphone input, MP3 jack

### ■ Diapason

- C2~C7

### ■ Intonation

- $\leq 3$  cents

### ■ Format

- 948x315x105 (mm)

### ■ Net weight

- 5.0Kg

### ■ Power adapter

- AC220V, DC 9V 500mA

### ■ DC input

- DC 9V

### ■ Output power

- 6W×2

### ■ Quiescent current

- 150mA

### ■ Random accessories

- Adapter, song sheet holder, manual

| Number | The name of song    | Number | The name of song     | Number | The name of song       |
|--------|---------------------|--------|----------------------|--------|------------------------|
| 00     | Turkey March        | 14     | Chong Erfei          | 28     | In rain                |
| 01     | Red River Valley    | 15     | Minuet in G major    | 29     | long time ago          |
| 02     | American Patrol     | 16     | Spanish Matador      | 30     | Magic Flute Overture   |
| 03     | Susanna             | 17     | Serenade - Haydn     | 31     | Silent Night           |
| 04     | Mozart Piano Sinata | 18     | Yankee Doodle        | 32     | Hungary Dance          |
| 05     | Mariage d'amour     | 19     | Waltz                | 33     | Western is gone        |
| 06     | Waterside Adi Lina  | 20     | Minuet               | 34     | Fountain               |
| 07     | Smile Polka         | 21     | Rain Melody          | 35     | Mary had a little lamb |
| 08     | Jingle Beus         | 22     | Frosty               | 36     | Music Box Dance        |
| 09     | Lardesik March      | 23     | Old French           | 37     | Four Seasons           |
| 10     | Mozart No.40        | 24     | Blue Danube          | 38     | Concerto Of Love       |
| 11     | Clapping song       | 25     | A small brown bottle | 39     | Destiny                |
| 12     | Fur Elise           | 26     | Hawthorn             |        |                        |
| 13     | Katyusha            | 27     | River Of Babylon     |        |                        |

## Appendix IV.Faults and exclusion

| Faults                                                                                   | Possible causes/resolution                                                                                                                                             |
|------------------------------------------------------------------------------------------|------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| When you turn on the keyboard, it will be some noise.                                    | Do not worry, it's the normal phenomenon.                                                                                                                              |
| When turn on the power switch, play with the keyboard, it's no voice at all.             | Check the main volume button if it is in the proper position and headphone jack was connected with other equipments, so that the built-in speaker system cut off.      |
| Distortion sound or interruption, or even can not work at all.                           | Use unqualified power adapter or the electric power of the battery is not enough, pls use the power adapter that equipped with this keyboard or replace the batteries. |
| The note and the timbre of the note has the slight difference in a tone.                 | This is normal phenomenon caused by different tone sample diapason.                                                                                                    |
| When use the function of sustain, some tone has long sustain but some has short sustain. | This is normal phenomenon because the best length of the sustain of the different tone has been set.                                                                   |
| The main volume and the accompaniment volume is abnormal.                                | Check the main volume and the accompaniment volume are set at the proper position.                                                                                     |
| In sync function, but the auto accompaniment does not work.                              | Check whether single chord or finger chord were set. At this situation, play 19 keys in the left of the keyboard.                                                      |
| When use the external adapter, put on the power switch, no sound, LCD or LED no display. | Check whether power socket has the electricity, and the power adapter was well inserted, the power jack has the poor contact or the voltage is not enough.             |
| When use the batteries, the keyboard is no sound when put on LED/LCD has no display.     | Check whether batteries polarity was correct and the batteries has run out.                                                                                            |
| The pitch of note is not correct.                                                        | Check whether the parameter of transposes is "00".                                                                                                                     |
| When use the mobilphone, the                                                             | Mobilphone can disturb the keyboard, to avoid the noise, pls turn off the mobil or use it in far place.                                                                |

## Contents

 
|                                             |     |
|---------------------------------------------|-----|
| <b>I. panel control and external jack</b>   | 1-2 |
| 1. panel control                            | 1   |
| LED Graphic display                         | 2   |
| LCD Graphic display                         | 2   |
| 2. external jack                            | 2   |
| <b>II. preparation before performance</b>   | 2-3 |
| <b>Power requirements</b>                   | 2   |
| 1. use power adapter                        | 2   |
| 2. use battery                              | 3   |
| <b>Appendix jack</b>                        | 3   |
| 1. use headphone                            | 3   |
| 2. MIDI function                            | 3   |
| 3. MP3 function                             | 3   |
| 4. External microphone                      | 3   |
| <b>III. Basic method of operation</b>       | 4-7 |
| <b>Basic operations</b>                     | 4   |
| 1. turn on the power                        | 4   |
| 2. master volume control                    | 4   |
| <b>Tone</b>                                 | 4   |
| 1. tone selection                           | 4   |
| <b>Effects and control</b>                  | 4-6 |
| 1. sustain function                         | 4   |
| 2. vibrato function                         | 4   |
| 3. double voice                             | 5   |
| 4. keyboard split                           | 5   |
| 5. drum                                     | 5   |
| 6. transpose function                       | 5   |
| 7. beat                                     | 5   |
| 8. tempo                                    | 5   |
| 9. panel percussion                         | 6   |
| <b>Rhythm and rhythm related function</b>   | 6-7 |
| 1. rhythm select                            | 6   |
| 2. start/stop                               | 6   |
| 3. sync function                            | 6   |
| 4. fill in function                         | 6   |
| 5. intro/ending                             | 7   |
| 6. rhythm volume                            | 7   |
| <b>Chord</b>                                | 7   |
| 1. single chord                             | 7   |
| 2. finger chord                             | 7   |
| 3. chord clear                              | 7   |
| 4. chord volume                             | 7   |
| <b>Recprd function</b>                      | 8   |
| <b>Teaching function</b>                    | 8   |
| <b>Sleep function</b>                       | 8   |
| <b>Appendix I. tone list</b>                | 9   |
| <b>Appendix II. rhythm list</b>             | 10  |
| <b>Appendix III. demo songs chart</b>       | 11  |
| <b>Appendix IV. faults and exclusion</b>    | 11  |
| <b>Appendix V. technical specifications</b> | 12  |

1

## I.Panel control and external jack


## Panel control

## LED display

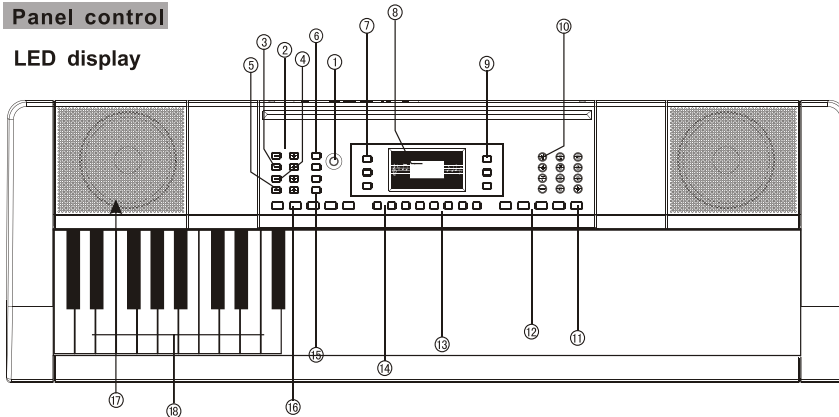

1. Power switch
2. Master volume+, -
3. Rhythm volume+, -
4. Chord volume+, -
5. Tempo+, -
6. Play/record/program
7. Single chord/finger chord /chord clear
8. LED display
9. Demo/rhythm/tone
10. Number0-9/+, -
11. Drum
12. Sustain/vibrato/double voice /keyboard split
13. Panel percussion/MP3 function
14. Transpose+, -
15. beat
16. Sync/start/stop/fill in/ intro/ending/teaching
17. Speaker
18. chord region

## LCD display

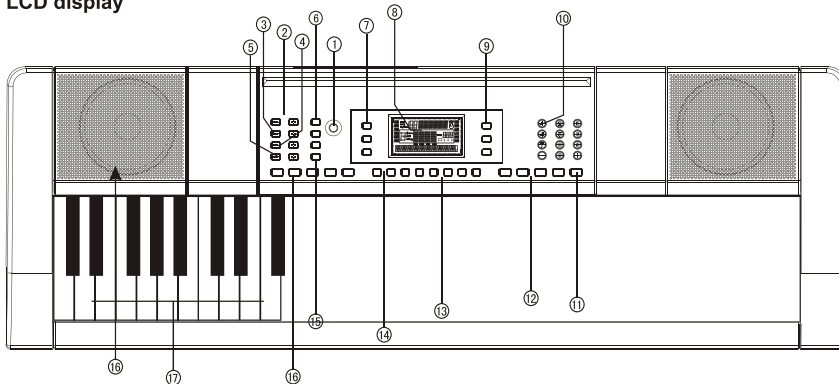 


1. Power switch
2. Master volume+, -
3. Rhythm volume+, -
4. Chord volume+, -
5. Tempo+, -
6. Play/record/program
7. Single chord/finger chord /chord clear
8. LCD display
9. Demo/rhythm/tone
10. Number0-9/+, -
11. Drum
12. Sustain/vibrato/double voice /keyboard split
13. Panel percussion/MP3 function
14. Transpose+, -
15. beat
16. Sync/start/stop/fill in/ intro/ending/teaching
17. Speaker
18. chord region

| NO. | Name of rhythm | NO. | Name of rhythm | NO. | Name of rhythm    | NO. | Name of rhythm      | NO. | Name of rhythm       |
|-----|----------------|-----|----------------|-----|-------------------|-----|---------------------|-----|----------------------|
| 00  | Soul 1         | 60  | Swing 4        | 120 | Waltz 2           | 180 | Japanese Folk Music | 240 | CountryDance2        |
| 01  | Soul 2         | 61  | Swing 5        | 121 | Waltz 3           | 181 | Trip Hop1           | 241 | CountryDance3        |
| 02  | Soul 3         | 62  | Swing 6        | 122 | Waltz 4           | 182 | Trip Hop2           | 242 | World Fusion         |
| 03  | Soul 4         | 63  | Baiao          | 123 | Jazz Waltz 1      | 183 | Chamber pop1        | 243 | Chinese traditional1 |
| 04  | Soul 5         | 64  | Bolero         | 124 | Jazz Waltz 2      | 184 | Chamber pop12       | 244 | Chinese traditional2 |
| 05  | Soul 6         | 65  | Bossanova 1    | 125 | Jazz Waltz 3      | 185 | PopSwing1           | 245 | Chinese traditional3 |
| 06  | Soul 7         | 66  | Bossanova 2    | 126 | Country Waltz 1   | 186 | PopSwing2           | 246 | Thailand Rhythm      |
| 07  | Soul 8         | 67  | Bossanova 3    | 127 | Country Waltz 2   | 187 | PopSwing3           | 247 | ModernWaltz1         |
| 08  | Slow Soul 1    | 68  | Bossanova 4    | 128 | JazzSoul1         | 188 | PopSwing4           | 248 | ModernWaltz2         |
| 09  | Slow Soul 2    | 69  | Bossanova 5    | 129 | JazzSoul2         | 189 | PopSwing5           | 249 | ModernWaltz3         |
| 10  | Slow Soul 3    | 70  | Calypso        | 130 | JazzSoul3         | 190 | PopSwing6           | 250 | ModernWaltz4         |
| 11  | Slow Soul 4    | 71  | Habanera       | 131 | JazzSoul4         | 191 | Celtic Pop          | 251 | Britpopwaltz1        |
| 12  | Slow Soul 5    | 72  | Reggae 1       | 132 | JazzSoul5         | 192 | Hawaiian Pop        | 252 | Britpopwaltz2        |
| 13  | Funkey soul 1  | 73  | Reggae 2       | 133 | JazzSoul6         | 193 | SoftBossanova1      | 253 | Britpopwaltz3        |
| 14  | Funkey soul 2  | 74  | Jorpo          | 134 | JazzSoul7         | 194 | SoftBossanova2      | 254 | Contemporary Waltz1  |
| 15  | Funkey soul 3  | 75  | Tango 1        | 135 | JazzSoul8         | 195 | SoftBossanova3      | 255 | Contemporary Waltz2  |
| 16  | Funkey soul 4  | 76  | Tango 2        | 136 | Light Beat 1      | 196 | SoftBossanova4      | 256 | ModernSoul1          |
| 17  | Funkey soul 5  | 77  | Tango 3        | 137 | Light Beat 2      | 197 | SoftBossanova5      | 257 | ModernSoul2          |
| 18  | Funkey soul 6  | 78  | Manbo 1        | 138 | Light Beat 3      | 198 | Mento               | 258 | ModernSoul3          |
| 19  | Funkey soul 7  | 79  | Manbo 2        | 139 | Light Beat 4      | 199 | Shima Uta           | 259 | ModernSoul4          |
| 20  | Funkey soul 8  | 80  | Rhumba 1       | 140 | Light Beat 5      | 200 | Reggae-Pop1         | 260 | ModernSoul5          |
| 21  | West Coast     | 81  | Rhumba 2       | 141 | SoulPsychedelic 1 | 201 | Reggae-Pop2         | 261 | ModernSoul6          |
| 22  | Euro Soul      | 82  | Rhumba 3       | 142 | SoulPsychedelic 2 | 202 | European Traditions | 262 | ModernSoul7          |
| 23  | 16 AOR 1       | 83  | Rhumba 4       | 143 | SoulPsychedelic 3 | 203 | TangoPop1           | 263 | ModernSoul8          |
| 24  | 16 AOR 2       | 84  | Rhumba 5       | 144 | SoulPsychedelic 4 | 204 | TangoPop2           | 264 | Classical Soul 1     |
| 25  | 16 Beat 1      | 85  | Bequine        | 145 | SoulPsychedelic 5 | 205 | TangoPop3           | 265 | Classical Soul 2     |
| 26  | 16 Beat 2      | 86  | Salsa          | 146 | SoulPsychedelic 6 | 206 | Rhythm Mambo 1      | 266 | Classical Soul 3     |
| 27  | 16 Beat 3      | 87  | Merengue 1     | 147 | SoulPsychedelic 7 | 207 | Rhythm Mambo 2      | 267 | Classical Soul 4     |
| 28  | 16 Ballad 1    | 88  | Merengue 2     | 148 | SoulPsychedelic 8 | 208 | BritRhumba 1        | 268 | Classical Soul 5     |
| 29  | 16 Ballad 2    | 89  | Valentao       | 149 | Goth Psychedelic  | 209 | BritRhumba 2        | 269 | Contemporary R&b1    |
| 30  | Pop Dance 1    | 90  | Plena          | 150 | Psychedelic swing | 210 | BritRhumba 3        | 270 | Contemporary R&b2    |
| 31  | Pop Dance 2    | 91  | Lambada        | 151 | Folkrock1         | 211 | BritRhumba 4        | 271 | Contemporary R&b3    |
| 32  | Pop Dance 3    | 92  | Bachata 1      | 152 | Folkrock2         | 212 | BritRhumba 5        | 272 | Contemporary R&b4    |
| 33  | Shuffle 1      | 93  | Bachata 2      | 153 | New century1      | 213 | SoulBeguinte        | 273 | Contemporary R&b5    |
| 34  | Shuffle 2      | 94  | Bachata 3      | 154 | New century2      | 214 | Chamber pop         | 274 | Contemporary R&b6    |
| 35  | 8 Shuffle      | 95  | Samba 1        | 155 | New century3      | 215 | Neo-Merengue1       | 275 | Contemporary R&b7    |
| 36  | Hard Rock      | 96  | Samba 2        | 156 | 16 Pop 1          | 216 | Neo-Merengue2       | 276 | Contemporary R&b8    |
| 37  | Slow Rock 1    | 97  | Pop Samba 1    | 157 | 16 Pop 2          | 217 | Big Beat            | 277 | Deep Funk            |
| 38  | Slow Rock 2    | 98  | Pop Samba 2    | 158 | Modern dance1     | 218 | PlenaBeat           | 278 | European Jazz        |
| 39  | Pop Classic    | 99  | Pop Samba 3    | 159 | Modern dance2     | 219 | Downtempo           | 279 | 70' Rock             |
| 40  | Blues          | 100 | Jazz Samba     | 160 | Modern dance3     | 220 | ElectricBachata 1   | 280 | 80' Rock             |
| 41  | Twist          | 101 | March 1        | 161 | Modern dance4     | 221 | ElectricBachata 2   | 281 | 16 SoftRock 1        |
| 42  | Hard 3 Beat    | 102 | March 2        | 162 | Modern dance5     | 222 | ElectricBachata 3   | 282 | 16 SoftRock 2        |
| 43  | Love Ballad 1  | 103 | March 3        | 163 | 8 Post Rock       | 223 | FolkSamba1          | 283 | 16 SoftRock 3        |
| 44  | Love Ballad 2  | 104 | March 4        | 164 | ClassicRock       | 224 | FolkSamba2          | 284 |                      |
| 45  | Love Ballad 3  | 105 | Polkal 1       | 165 | JazzRock1         | 225 | Jump Samba 1        | 285 | 16 BalladRock        |
| 46  | Love Ballad 4  | 106 | Polkal 2       | 166 | JazzRock2         | 226 | Jump Samba 2        | 286 | Afro Dance 1         |
| 47  | Euro Beat      | 107 | Polkal 3       | 167 | Traditional Pop   | 227 | Jump Samba 3        | 287 | Afro Dance 2         |
| 48  | House 1        | 108 | C&W 1          | 168 | Country Blues     | 228 | Afro Samba          | 288 | Afro Dance 3         |
| 49  | House 2        | 109 | C&W 2          | 169 | Indian Pop        | 229 | Rock March1         | 289 | JazzShuffle1         |
| 50  | Swing Beat     | 110 | Bluegrass      | 170 | Hard 3 Rock       | 230 | Rock March2         | 290 | JazzShuffle2         |
| 51  | 8 Ballad       | 111 | Country 1      | 171 | Classical ballad1 | 231 | Rock March3         | 291 | 8 JazzShuffle        |
| 52  | Step           | 112 | Country 2      | 172 | Classical ballad2 | 232 | Rock March4         | 292 | Heavy metal rock     |
| 53  | Big Band 1     | 113 | Country 3      | 173 | Classical ballad3 | 233 | PolkaBlues1         | 293 | RockDance1           |
| 54  | Big Band 2     | 114 | Middle East    | 174 | Classical ballad4 | 234 | PolkaBlues2         | 294 | RockDance2           |
| 55  | Conbmo 1       | 115 | China 1        | 175 | Light Ballad      | 235 | PolkaBlues3         | 295 | Middle East Pop      |
| 56  | Conbmo 2       | 116 | China 2        | 176 | Deep House        | 236 | CountryRock1        | 296 | Soul Blues           |
| 57  | Swing 1        | 117 | China 3        | 177 | Hard House        | 237 | CountryRock2        | 297 | Glam Rock            |
| 58  | Swing 2        | 118 | Thailand       | 178 | House dance       | 238 | Jazz Blues          | 298 | Hard House           |
| 59  | Swing 3        | 119 | Waltz 1        | 179 | 8 Pop             | 239 | CountryDance1       | 299 | Light Ballad         |

| NO. | Name of tone            | NO. | Name of tone          | NO. | Name of tone                | NO. | Name of tone              | NO. | Name of tone               |
|-----|-------------------------|-----|-----------------------|-----|-----------------------------|-----|---------------------------|-----|----------------------------|
| 00  | Acoustic Grand Piano    | 60  | French Horn           | 120 | Guitar Fret Noise           | 180 | Bright Violin             | 240 | Psychedelic Synth Lead     |
| 01  | Bright Acoustic Piano   | 61  | Brass Section         | 121 | Breath Noise                | 181 | Stringed violin           | 241 | Vibraphone Synth Lead      |
| 02  | Electric Grand Piano    | 62  | Synth Brass 1         | 122 | Seashore                    | 182 | Trill violin              | 242 | Marimba Synth Lead         |
| 03  | Honky-tonk Piano        | 63  | Synth Brass 2         | 123 | Bird Tweet                  | 183 | Electronic violin         | 243 | Metal FX                   |
| 04  | Rhodes Piano            | 64  | Soprano Sax           | 124 | Telephone Ring              | 184 | Large violin              | 244 | Electronic FX              |
| 05  | Chorused Piano          | 65  | Alto Sax              | 125 | Helicopter                  | 185 | rhythm Orchestra          | 245 | Electronic String Ensemble |
| 06  | Harpsichord             | 66  | Tenor Sax             | 126 | Applause                    | 186 | Pizzicato Violin          | 246 | Wind FX                    |
| 07  | Clavichord              | 67  | Baritone Sax          | 127 | Gunshot                     | 187 | Pizzicato Ensemble 1      | 247 | Clarinet FX                |
| 08  | Celesta                 | 68  | Oboe                  | 128 | Percussion                  | 188 | Pizzicato Ensemble 2      | 248 | Organ FX                   |
| 09  | Glockenspiel            | 69  | English Horn          | 129 | Rhythm electric Piano       | 189 | Percussion band           | 249 | Crystal FX                 |
| 10  | Music box               | 70  | Bassoon               | 130 | Baritone Xylophone          | 190 | Baritone Synth Contrabass | 250 | Synth Shamisen             |
| 11  | Vibraphone              | 71  | Clarinet              | 131 | Clean Piano                 | 191 | Bass Flute                | 251 | Electronic Shamisen        |
| 12  | Marimba                 | 72  | Piccolo               | 132 | Bright Dulcimer             | 192 | Distortion Contrabass     | 252 | Bright Sitar               |
| 13  | Xylophone               | 73  | Flute                 | 133 | Rhythm Grand Piano          | 193 | Contrabass Lead           | 253 | Whistle Accord             |
| 14  | Tubular Bells           | 74  | Recorder              | 134 | Traditional Piano           | 194 | Violin Lead               | 254 | rhythm Nation              |
| 15  | Dulcimer                | 75  | Pan Flute             | 135 | Aluminium jean              | 195 | Cello Lead                | 255 | Bright Koto                |
| 16  | Hammond Organ           | 76  | Bottle Blow           | 136 | Rock Grand Piano            | 196 | Pizzicato rhythm          | 256 | Koto Lead                  |
| 17  | Percussive Organ        | 77  | Shakuhachi            | 137 | Electronic organ            | 197 | high Harp                 | 257 | Diplophonia Koto           |
| 18  | Rock Organ              | 78  | Whistle               | 138 | Psychedelic electronic      | 198 | Harp ensemble             | 258 | Baritone Koto              |
| 19  | Church Organ            | 79  | Ocarina               | 139 | Water jean                  | 199 | Synth Harp                | 259 | Synth Koto                 |
| 20  | Reed Organ              | 80  | Lead 1 (square)       | 140 | Bright Guitar               | 200 | Baritone Trumpet          | 260 | Environmental Lead         |
| 21  | Accordion               | 81  | Lead 2 (sawtooth)     | 141 | Orchestra piccolo           | 201 | Trumpet ensemble          | 261 | Metal Lead                 |
| 22  | Harmonica               | 82  | Lead 3 (caliope lead) | 142 | Heavy metal guitar          | 202 | rhythm Trumpet            | 262 | Orchestra Lead             |
| 23  | Tango Accordion         | 83  | Lead 4 (chiff lead)   | 143 | Crystal guitar              | 203 | high Trumpet              | 263 | Glockenspiel Lead          |
| 24  | Acoustic Guitar (nylon) | 84  | Lead 5 (charang)      | 144 | Queer electric Piano        | 204 | Synth Trumpet             | 264 | Bass Lead                  |
| 25  | Acoustic Guitar (steel) | 85  | Lead 6 (voice)        | 145 | Bright bass                 | 205 | Baritone Trombone         | 265 | Fifths Lead                |
| 26  | Electric Guitar (jazz)  | 86  | Lead 7 (fifths)       | 146 | Rock Electric Bass          | 206 | Trombone ensemble         | 266 | Wind Lead                  |
| 27  | Electric Guitar (clean) | 87  | Lead 8 (bass+lead)    | 147 | Rhythm Electric Bass        | 207 | rhythm Trombone           | 267 | Atmosphere Lead            |
| 28  | Electric Guitar (muted) | 88  | Pad 1 (new age)       | 148 | Psychedelic Bass            | 208 | rhythm Trombone           | 268 | Sharp Lead                 |
| 29  | Overdriven Guitar       | 89  | Pad 2 (warm)          | 149 | Heavy metal bass            | 209 | baritone Trombone         | 269 | Bright Lead                |
| 30  | Distortion Guitar       | 90  | Pad 3 (polysynth)     | 150 | Magic electronic            | 210 | Synth Trombone            | 270 | East Nation Pad            |
| 31  | Guitar Harmonics        | 91  | Pad 4 (choir)         | 151 | Bright violin               | 211 | Violin French Horn        | 271 | Atmosphere Pad             |
| 32  | Acoustic Bass           | 92  | Pad 5 (bowed)         | 152 | Atonic violin               | 212 | French Horn ensemble      | 272 | Electric bass Pad          |
| 33  | Electric Bass(finger)   | 93  | Pad 6 (metallic)      | 153 | Heavy bass orchestra        | 213 | Electronic French Horn    | 273 | electric Piano Pad         |
| 34  | Electric Bass (pick)    | 94  | Pad 7 (halo)          | 154 | Synth clarinet              | 214 | Synth French Horn         | 274 | Clean Guitar Pad           |
| 35  | Fretless Bass           | 95  | Pad 8 (sweep)         | 155 | Interactive Lead            | 215 | Psychedelic Synth Brass   | 275 | Western Pad                |
| 36  | Slap Bass 1             | 96  | FX 1 (rain)           | 156 | For the keyboard            | 216 | Distortion Synth Brass    | 276 | Sci-fi Pad                 |
| 37  | Slap Bass 2             | 97  | FX 2 (soundtrack)     | 157 | Bagpipes                    | 217 | Vibraphone Synth Brass    | 277 | Metal Sci-fi Pad           |
| 38  | Synth Bass 1            | 98  | FX 3 (crystal)        | 158 | Suona                       | 218 | Synth Muted Trumpet       | 278 | Clarinet Pad               |
| 39  | Synth Bass 2            | 99  | FX 4 (atmosphere)     | 159 | Pipa                        | 219 | Rock Synth Brass          | 279 | Electronic dance Pad       |
| 40  | Violin                  | 100 | FX 5 (brightness)     | 160 | Church Piano                | 220 | Soprano Sax ensemble      | 280 | Double Kalimba             |
| 41  | Viola                   | 101 | FX 6 (goblins)        | 161 | Church electric Piano       | 221 | rhythm Soprano Sax        | 281 | Bright Kalimba             |
| 42  | Cello                   | 102 | FX 7 (echoes)         | 162 | Synth Piano                 | 222 | Synth Soprano Sax         | 282 | Crystal Kalimba            |
| 43  | Contrabass              | 103 | FX 8 (sci-fi)         | 163 | Baritone Piano              | 223 | National Sax              | 283 | Synth Kalimba              |
| 44  | Tremolo Strings         | 104 | Sitar                 | 164 | Piano PAD                   | 224 | Metal Sax                 | 284 | Electronic Bagpipe         |
| 45  | Pizzicato Strings       | 105 | Banjo                 | 165 | String Piano                | 225 | Baritone Sax ensemble     | 285 | Wind Bagpipe               |
| 46  | Orchestral Harp         | 106 | Shamisen              | 166 | Metal Piano                 | 226 | Crystal Sax               | 286 | high Bagpipe               |
| 47  | Timpani                 | 107 | Koto                  | 167 | Light rhythm Piano          | 227 | Soft Baritone Sax         | 287 | Bright Bagpipe             |
| 48  | String Ensemble 1       | 108 | Kalimba               | 168 | electric Piano Pad          | 228 | Synth Baritone Sax        | 288 | Orchestra Bagpipe          |
| 49  | String Ensemble 2       | 109 | Bagpipe               | 169 | Classical piano             | 229 | Heavy metal Sax           | 289 | Baritone Bagpipe           |
| 50  | Synth Strings 1         | 110 | Fiddle                | 170 | Guitar organ                | 230 | Church Oboe               | 290 | Environmental Shanai       |
| 51  | Synth Strings 2         | 111 | Shanai                | 171 | An electric guitar          | 231 | Bass Oboe                 | 291 | Baritone Shanai            |
| 52  | Choir Aahs              | 112 | Tinkle Bell           | 172 | synthesis Nylon Guitar      | 232 | Oboe ensemble             | 292 | Tenor Shanai               |
| 53  | Voice Oohs              | 113 | Agogo                 | 173 | Synthetic electronic guitar | 233 | Bright Oboe               | 293 | high Shanai                |
| 54  | Synth Voice             | 114 | Steel Drums           | 174 | Bright clean Guitar         | 234 | distortio oboe            | 294 | Synth Shanai               |
| 55  | Orchestra Hit           | 115 | Woodblock             | 175 | Orchestra Guitar            | 235 | English Horn ensemble     | 295 | Bright Steel Drums         |
| 56  | Trumpet                 | 116 | Taiko Drum            | 176 | Psychedelic Guitar          | 236 | Pizzicato English Horn    | 296 | Steel Drums Lead           |
| 57  | Trombone                | 117 | Melodic Tom           | 177 | Bright organ                | 237 | Diplophonia English Horn  | 297 | Lyric Steel Drums          |
| 58  | Tuba                    | 118 | Synth Drum            | 178 | Pick organ                  | 238 | Bright English Horn       | 298 | Orchestra Steel Drums      |
| 59  | Muted Trumpet           | 119 | Reverse Cymbal        | 179 | Synth accordion             | 239 | Synth English Horn        | 299 | Synth Steel Drums          |


## II.Preparation before performance
 
### LCD graphic display

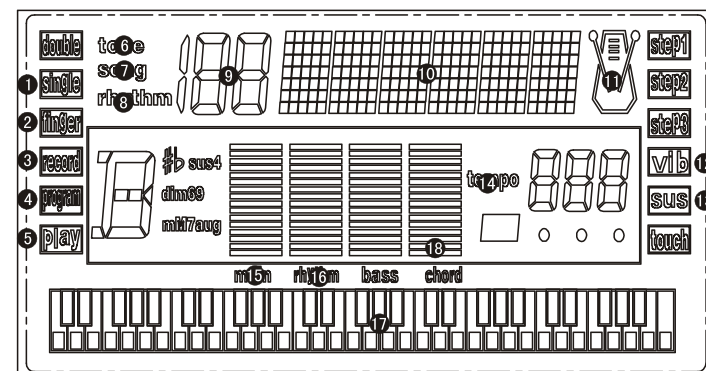

1. Single chord
2. Finger chord
3. Record
4. Program
5. Play
6. Tone
7. Demo
8. Rhythm
9. LCD display
10. Character display area
11. Beat
12. Vibrato
13. Sustain
14. Tempo
15. Master volume
16. Rhythm volume
17. B/W key display
18. Chord volume

### External jack

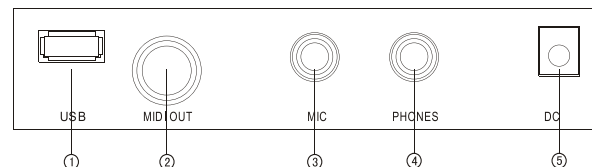 


1. USB jack
2. MID/output
3. Microphone jack
4. Earphone jack
5. DC 9V power input

## II.Preparation before performance
 
### Power requirement

#### 1. Using AC/DC power adaptor

Please use the special power adaptor was equipped with this electronic keyboard or the power adaptor with DC 9V out voltage . 500mA out current and cental anode plug. Insert the DC plug of power adaptor into the DC 9V power jack in the rear panel of electronic keyboard, then, insert the other end into Mains socket. (Notice: The input voltage of power adaptor must conform to the voltage of Mains) ,finally turn on power switch and start performance.

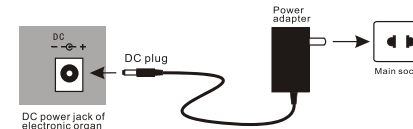


## II.Preparation before performance

Caution:When you don't use this electronic keyboard, you should unplug the plug of power adaptor from power socket safely to avoid the parts trouble or other accident for long-term charging

### 2.Using batteries

 Open the battery lid at the bottom of electronic keyboard and load 6pcs AA size batteries , ensure the polarity of the batteries should conform to the anode and cathode direction of batteries marked on battery lid. Cover the battery lid after the installation.




Caution : Don't use different kinds of batteries at the same time and mix new and old batteries for use.The volume will go down and the timbre will be bad if the electrical quantity of batteries isn't enough,you have to replace the new batteries now.Please take out the batteries as to avoid possible damage caused by the batteries leakage if you don't use the electronic keyboard for long time.

### Accessories ports

 
#### 1.Headphone use

Insert headphone plug into [HEADPHONES] port in back of electronic keyboard. Now, the internal speaker system of electronic keyboard cuts off automatically.Using headphone doesn't interfere with others during performance,it is special for personal monitor and exercising at night.



#### 2.MIDI output

 
By linking MIDI line,you can connect MIDI OUT jack to another MIDI compatible device to transfer MIDI data to the electronic keyboard.When play a note,the corresponding MIDI data will be transferred.You may also control other MIDI devices by transferring program changing data.

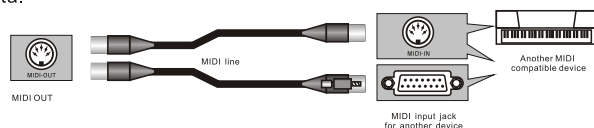

**Notice:** the additional device in above, you need to purchase by yourself ,not include by the keyboard,pls understand.

#### 3.MP3 function

 Mp3 jack: the keyboard support USB play.you may use the usb jack to play Mp3 songs. to change the button as follow can adjust the Mp3 function.




#### 4.Use of microphone

Insert the microphone can playing accompaniment.

## III.Basic operation method

### 4.chord volume

 The default value of the chord volume is "07",and you can adjust 9 levels(0-9) of the chord volume by press the CHORD VOLUME "+/-"button .By the way,the LED or LCD display has the corresponding displaying when you adjust. The system will return to the default chord volume if you press CHORD VOLUME "+/-" at the same time .



### Record function

1.Press the "record" button to start the recording,at this time press any key can record in the keyboard.The max not can be record is 110 for this keyboard.When the recording is full ,the display will show you "full" that you can not record any more.At the recording status,press any key can clear the music for last time to start a new one.



2.Press "play" button,can play the recording music.



3.Press "program" button to start programming.to press 8 kinds of panel percussion or keyboard to program a rhythm.This edited rhythm can record 32 pcs of percussion sound at the most.Press the "play" button to play the rhythm to become a new rhythm . And to press "+/-"to get the perfect effects. Press this button will be clear last memory to start a new programming.



### Teach function

Press "teach" button to start teaching function. You must press the key ,the teaching music can play,else,the music will stop.after press this song,you can be repeat it .To press "song" button to choose the song for learning.And press the same button "teach"to withdraw the teaching function .



 
### Dormancy function

When you do not press the key more than 5 mins,the keyboard will come to dormancy and to press any key can wake up the keyboard.

## III.Basic operation method


### 5.Intro/ending

Press "Intro/ending" button to start play the prelude, then turn to regular rhythm to continu. During the play of the rhythm, press the "Intro/ending" button, to start playing a code for ending.



### 6. Rhythm volume

 
There are 9 levels for rhythm volume, the default rhythm is 07. To press the "+/-" button to adjust the rhythm volume and the LED or LCD will show it. Repress the "+/-" button the keyboard will return back to the default volume for the rhythm.



### Auto bass chord


#### Single chord

 When the rhythm is start, to press the "single chord" to enter the single chord function. At this time, in the chord area (1-19key), press any key, can heard different chord rhythm. Press the "start/stop" to withdraw this function.

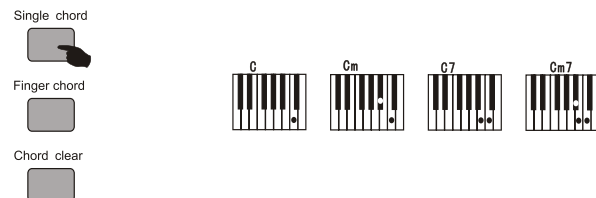

#### Finger chord

 When the rhythm is start, to press the "finger chord" to enter the finger chord function. At this time, in the chord area (1-19key), press any key, can heard different chord rhythm. Press the "start/stop" to withdraw this function.

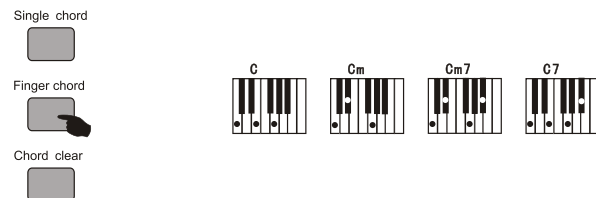

#### Chord clear

After the chord is start, press the "chord clear" button, the chord rhythm is stop. But the other rhythm is still play.



## III.Basic operation method

### Basic operation

 
#### 1.Turn on power

After power adapter was connected or batteries were installed correctly, press "on/off" to start the playing and press "on/off" to close the power of keyboard.



#### 2.Master volume control


This keyboard has 9 levels volume from 00-08. The default value of the main volume is 07. Press the "+" and "-", the main volume will increase or decrease correspondingly. And press "+" together with "-" the main volume will recover the default value automatically.



### Tone

#### 1.Tone selection

 
The keyboard has 300 tones. To press "tone" button to start to choose another tones, you can press the 0~9 number to change it or press "+/-" to change it.

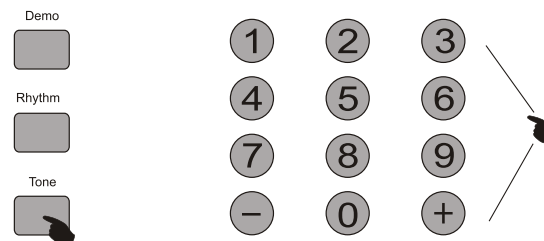

### Effects and control


#### 1.Sustain function

 Press "sustain" to start sustain function. The prolonged effect note will occur when play with white and black keyboard. And press "sustain" again to withdraw this function.



#### 2.Vibrato function

 
Press "vibrato" to start vibrato function. The trembling effect note will occur when play with white and black keyboard. And press "vibrato" again to withdraw this function.



### III.Basic operation method


#### Double voice

 Press "dual voice" button to start dual voice function, the performed tone is the tone that composed of two kinds of tone. Now the displaying tone name is the latter tone. The previous tone is the tone before you press this button, press this button again to exist the dual voice function




#### Keyboard split

 Press "dual keyboard" to start the dual keyboard function. The keyboard was separate two keyboards from the 24th keys in left. Press the number button can adjust the right key. Repress the "dual keyboard" will withdraw this function.




#### Drum

 Press "drum" button, at this time the keyboard turn to the percussion keyboard every key instead of one kind of percussion, repress the "drum" button again, the keyboard turn to regular.



#### Transpose

 Press transpose "+/-" button, the corresponding musical scale can go up or goes down for one note when you play with the black and white keys. you can adjust the musical scale for 6 levels upwards and downwards. Press "+" and "-" together, the system will recover the default keyboard tone automatically.




#### Beat

Press "beat" button to start metronome, the tick-tock beat sound will be occur. There is 4 kinds of metronome to choose, the beat effect will be added when you perform.



#### Tempo

 
Press "+/-" can adjust the tempo of rhythm, beat, demo, the default value of the beat tempo is 120. And the adjustment area is 30-240.



### III.Basic operation method

#### Panel percussion

 Press the panel percussion, the total is 6 kinds of percussion. You can insert the percussion if you need.




#### Panel percussion list

|            |      |        |            |         |        |
|------------|------|--------|------------|---------|--------|
|            |      |        |            |         |        |
| Snare drum | Clap | Cymbal | Tambourine | Timpani | Claves |

#### Rhythm and rhythm related function

##### Rhythm selection

 The keyboard has 300 rhythm, and the rhythm list pls following as the appendix of rhythm list. to press "rhythm" button to start to choosing another rhythm, you can press the 0~9 number to change it or press "+/-" to change it. All the LED/LCD will display it.

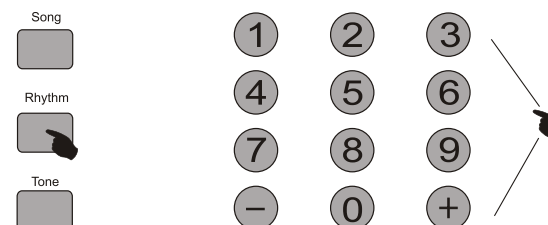

##### Start/stop function

Press "start/stop" button to play the rhythm, and repress this button to withdraw this function.



 
##### Sync function

 
 
 
Press "sync" button to enter the sync function before the rhythm was played. Now press any key of 19 keys in left hand to start rhythm playback. The beat point shines on the LCD the characters displaying area displays the current tone or rhythm. If the chord function has started, press the corresponding key in 19 keys in chord area, the auto chord starts.



##### Fill in function

You can fill in a length of interlude to enhance the performance effect if you press "fill in" button during the rhythm playback, then the rhythm will continue to perform based on the original rhythm.



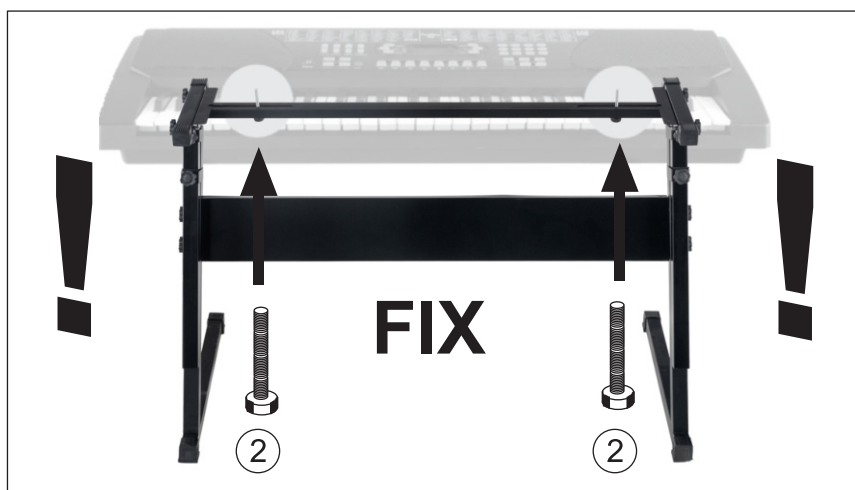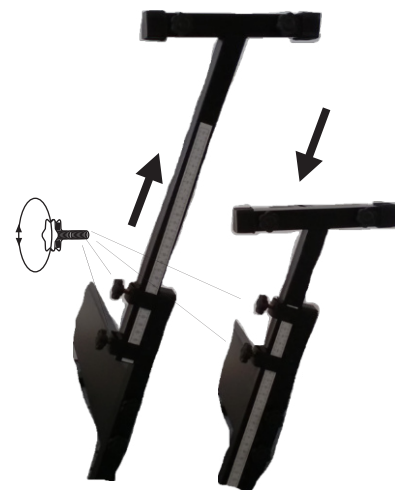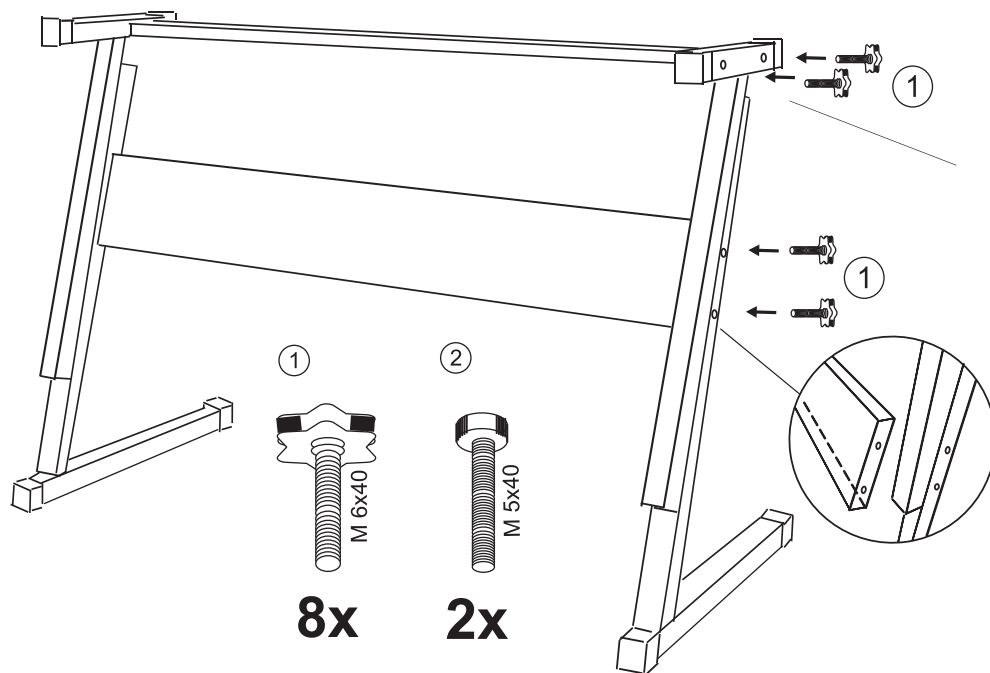

**VORSICHTSMASSNAHMEN (BITTE SORGFÄLTIG DURCHLESEN)** Kinder sollten beaufsichtigt werden, um sicherzustellen, dass sie dieses Produkt nicht als Spielzeug verwenden. Lassen Sie Kinder niemals unbeaufsichtigt mit dem Verpackungsmaterial spielen. Warnhinweise: Stellen Sie das Produkt stets auf eine geeignete Oberfläche ab, um ein Wackeln oder Umfallen zu verhindern. Vorsichtsmaßnahmen: Um Schäden am Produkt zu vermeiden, stellen Sie es nicht an Plätze mit hohen Temperaturen oder viel Staub, stellen Sie es nicht direkt neben eine Klimaanlage und vermeiden Sie direkte Sonneneinstrahlung. Wenden Sie im Umgang mit dem Produkt keinerlei Gewalt an und stellen Sie keine zu schweren Gegenstände darauf. Ort: Setzen Sie das Produkt nicht den folgenden Bedingungen aus, um Verformungen, Verfärbungen oder größere Schäden zu vermeiden: Direktes Sonnenlicht, extreme Temperatur oder Luftfeuchtigkeit, übermäßig staubiger oder schmutziger Ort, starke Vibrationen oder Stöße. Reinigung: Reinigen Sie das Produkt nur mit einem weichen, trockenen Tuch. Verwenden Sie keine Farbverdünner, Lösungsmittel, Reinigungsflüssigkeiten oder chemisch imprägnierte Wischtücher. Handhabung: Üben Sie keine übermäßige Kraft auf Bedienelemente wie z.B. Schalter, Knöpfe, Tasten aus. Technische Änderungen und Änderungen im Erscheinungsbild sind vorbehalten. Alle Angaben entsprechen dem Stand bei Drucklegung. Für die Richtigkeit und Vollständigkeit der enthaltenen Beschreibungen, Abbildungen und Angaben übernimmt Musikhaus Kirstein GmbH keinerlei Gewähr. Abgebildete Farben und Spezifikationen können geringfügig vom Produkt abweichen. Musikhaus Kirstein GmbH - Produkte sind nur über autorisierte Händler erhältlich. Distributoren und Händler sind keine Handlungsbevollmächtigten von Musikhaus Kirstein GmbH und haben keinerlei Befugnis, die Musikhaus Kirstein GmbH in irgendeiner Weise, sei es ausdrücklich oder durch schlüssiges Handeln, rechtlich zu binden. Diese Bedienungsanleitung ist urheberrechtlich geschützt. Jede Vervielfältigung, bzw. jeder Nachdruck, auch auszugsweise, und jede Wiedergabe der Abbildungen, auch in verändertem Zustand, ist nur mit schriftlicher Zustimmung der Firma Musikhaus Kirstein GmbH gestattet.

**PRECAUTIONS (PLEASE READ CAREFULLY)** Children should be supervised to ensure that they do not use this product as a toy. Never let children play with the packaging material unsupervised. Warning: Always place the product on a suitable surface to prevent it from wobbling or falling over. Precautions: To avoid damage to the product, do not place it in places with high temperatures or a lot of dust, do not place it directly next to an air conditioner and avoid direct sunlight. Do not use force when handling the product and do not place objects that are too heavy on it. Location Do not expose the product to the following conditions to avoid warping, discoloration, or major damage: direct sunlight, extreme temperature or humidity, excessively dusty or dirty location, strong vibration or shock. Cleaning: Only clean the product with a soft, dry cloth. Do not use paint thinners, solvents, cleaning fluids, or chemically impregnated wipes. Handling: Do not exert excessive force on controls such as Switches, buttons, buttons off. Technical changes and changes in appearance are reserved. All information corresponds to the status at the time of printing. Musikhaus Kirstein GmbH assumes no liability for the correctness and completeness of the descriptions, illustrations and information contained. Shown colors and specifications may differ slightly from the product. Musikhaus Kirstein GmbH - Products are only available through authorized dealers. Distributors and dealers are not authorized representatives of Musikhaus Kirstein GmbH and have no authority to bind Musikhaus Kirstein GmbH legally in any way, be it expressly or through coherent action. This manual is protected by copyright. Any duplication or reprint, even in part, and any reproduction of the images, even in a modified state, is only permitted with the written consent of Musikhaus Kirstein GmbH.