



Beatfoxx GT-25 Chuck Turntable

Item No.: 00065927



Operating Manual

Revision: *-01-2020

© 2020

This manual is protected by copyright. Any copying or reprint, even in excerpts, is only allowed with written consent of Musikhaus Kirstein GmbH. The same applies to reproduction or copying of images, even in altered form.

Contents

Intended purpose	2
SAFETY	2
Connections	2
Product Description	3
Power Supply	4
PREPARATION FOR USE	4
ASSEMBLY	4
WALL MOUNTING VERTICAL	5
TURNTABLE OPERATION	6
BLUETOOTH FUNCTION OPERATION	6
LINE OUT OPERATION	7
MAINTENANCE	8
WEEE Declaration (Waste of Electrical and Electronic Equipment)	8

Thank you for purchasing this product. To ensure you will be completely satisfied with this product, read and understand this manual carefully before use. Keep the manual in a safe place. The Operating Manual must be passed on to all subsequent users.



Follow the Operating Manual!

⚠ WARNING

The signal word **WARNING** identifies hazards, which can result without precautions in serious injury.

⚠ NOTE

The signal word **NOTE** indicates general precautions, which should be observed in handling the product.

⚠ NOTE

Images used in this manual may differ slightly from the actual product, as long as it has no adverse effect on the properties and safety of the product.

⚠ NOTE

All personal formulations in these instructions are to be considered gender neutral.

These operating instructions apply to persons who have been supervised or instructed in the operation of the unit by a person responsible for their safety and who have proven to be able to handle the unit.

⚠ WARNING

Children should be supervised to ensure that they do not play with the unit. Do not leave the children unattended.

All information contained in this Operating Manual is accurate to the best of our knowledge and belief. Neither the author nor the publisher, however, can be held liable for damages or losses that arise in connection with the use of this Operating Manual.

Other product, brand or company designations specified in this document are possibly the trademarks of their respective owners. Compliance with all applicable copyright laws is the responsibility of the user of this document.

Intended purpose

This device is designed for indoor use. The guarantee does not apply to devices that are used for professional use.

SAFETY



Make sure that the unit is positioned so that no one can trip over the power cord.

- Do not use this product near water (e.g. near a bathtub, washbasin, kitchen sink, in a damp basement or near a swimming pool, etc.);
- Do not place this product near heat sources such as radiators, vents or other devices (including amplifiers) that generate heat;
- Do not open this product. In the event of a malfunction, contact a qualified service technician or the dealer;
- Do not leave this product plugged in when not in use for a long time;
- Do not place any objects on the product.
- Clean only with a dry cloth.
- Do not block any ventilation openings.
- Protect the power cord from being kinked, in particular where the plug is fitted and at the point where it exits from the apparatus.
- Only use attachments/ accessories specified by the manufacturer.
- Refer all servicing to qualified service personnel. Servicing is required when the apparatus has been damaged in any way, such as power supply cord or plug is damaged, liquid has been spilled or objects have fallen into the apparatus, the apparatus has been exposed to rain or moisture, does not operate normally, or has been dropped.

Connections

Do not overload the wall power outlet. Use only power source as indicated.

Product Description

	<p>1. Cartridge & Stylus;</p>
	<p>2. Tonearm;</p>
	<p>3. Turntable;</p>
	<p>4. Magnetic Record Holder;</p>
	<p>5. Tonearm lever;</p>
	<p>6. Speakers;</p>
	<p>7. Phono Speed Selector;</p>
	<p>8. On/Off and Volume-Knob;</p>
	<p>9. Power Jack;</p>
	<p>10. RCA-Line Out and AUX-In Jacks</p>
	<p>11. AC Adapter.</p>

Power Supply

This product is designed for use with a 12 V 1AAC DC adapter. Attempting to operate this product from a different power source may damage the product. Such damage is not covered by your warranty.



This product is equipped with a standard household plug. If this plug does not fit your outlet, you probably have an outdated, non-polarized outlet. You should have your electrical outlet replaced by a qualified electrician.

PREPARATION FOR USE

1. Carefully remove the unit from carton and remove all packing material from the unit.
2. Unwind the AC power cord and extend it to its full length.
3. Place the unit on a stable, level surface, convenient to an AC outlet, out of a strong magnetic field.
4. Connect the plug to your AC outlet.
5. Remove the white plastic stylus cover from the phonograph stylus by sliding it in the direction of the arrow.




When removing the stylus cover, pay attention to the stylus as the stylus damage is not covered by the warranty.

ASSEMBLY

1. Slide the handle of the guitar into the opening on the top of the guitar body.
2. Insert the black mounting screw into the mounting hole on the back of the guitar body and screw it tight.

WALL MOUNTING VERTICAL

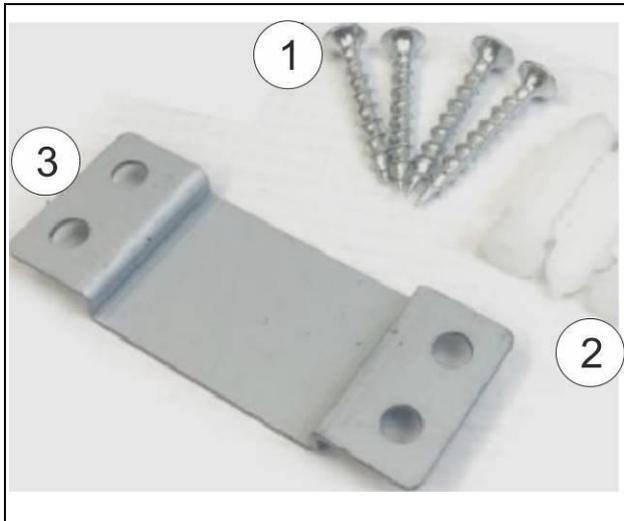	1. Wall Screws;+2 longer black screws for neck fixation at Guitarhousieng
	2. Wall Inserts (dowels);
	3. Wall Bracket;

- 1.** Hold the turntable against the wall where you want to place it.
- 2.** Mark the middle of the turntable at the top with adhesive tape and set the turntable aside.
- 3.** Place a mark 5.25" (13.3 cm) down from the adhesive tape.
- 4.** Hold the wall bracket so that the top edge of the wall bracket is on the mark.
- 5.** Mark the locations for the holes on the wall. The markings should correspond to the openings on the wall bracket.
- 6.** Drill the holes at the marked locations on the wall (1 /4" drill).
- 7.** Insert the four dowels into the holes. The open end of the dowels must be flush with the wall surface.
- 8.** Tighten the wall bracket with four wall screws.
- 9.** Use the 2 longer black screws to fixate the neck at the backside of the Guitar-housing
- 10.** Hang the turntable vertically on the mounted wall bracket.

TURNTABLE OPERATION

1. Turn the On/Off-Knob to switch on the device.
2. Turn the Phono Speed Selector to the correct speed (33 1/3, 45 or 78 rpm) for the selected record size.
3. Take out the Magnetic Record Holder, place a record lightly on the Turntable and put the Magnetic Record Holder back in place to fix the record.
4. Remove the stylus protector.
5. Release the Tonarm lock and lift the Tonearm with the lever.
6. Move the Tonearm over the record to where you want it to start playing.
7. Move the Tonearm Lever to the lower position. The Tonearm slowly lowers onto the record automatically.
8. Turn the Volume-Knob to adjust the desired volume.



The Tonearm stops automatically at the end of the recording.

 
BLUETOOTH FUNCTION OPERATION

1. Turn on the turntable and turn the Volume-Knob to the desired volume level.



The Bluetooth function is set to receive mode when the turntable is switched on. Make sure the tonearm is in the resting position. A short Bluetooth start tone can be heard.

2. Turn on your Bluetooth device. It will appear as "Beatfoxx GT-25" when it is recognized by Bluetooth on your turntable.
3. If you are asked for a password enter the password "0000" to pair the turntable and the Bluetooth device



When the turntable is paired with your Bluetooth device, you will hear a short ton from the speakers.

4. Operate your Bluetooth device as usual and the sound is played through your turntable. Enjoy the music.




- A. Make sure your Bluetooth device and this unit is within 33ft
- B. Check and see if there are other Bluetooth devices nearby interfering the signal and connection.
- C. This unit is could be paired by multiple different Bluetooth devices, but could only be connected and played by one of them at a time. Make sure no others device is actively connected to it already when you are trying to connect the one you are working on.

LINE OUT AND AUX-OPERATION

The RCA-Line Out jacks are great for connecting your Vertical Turntable to a stereo system or recording device. Using an RCA-cable, you just plug into the left and right outputs from your Vertical Turntable to the Phono or other input on your stereo system. Using an RCA to headphone jack cable you can connect to other systems that have a headphone jack input.

By plugging an 3,5mm jack cable to the AUX-IN jack you can use your devices like Smartphones, Tablets or MP3-Players as external music player.

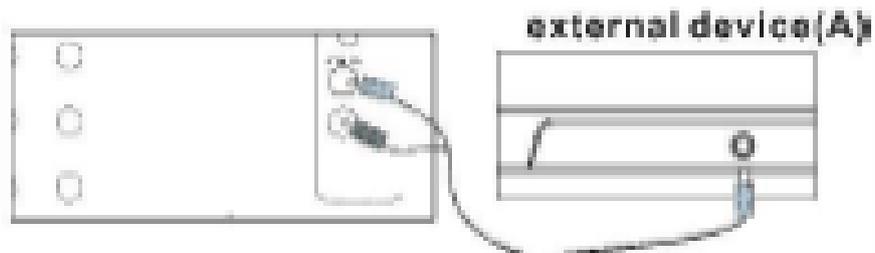

MAINTENANCE

Your unit does not require any particular maintenance. However, in the event of a malfunction, **contact an Approved Service Center** or the retailer you bought from.

WEEE Declaration (Waste of Electrical and Electronic Equipment)

Your product has been designed and manufactured using quality materials and components that are recyclable and reusable. The symbol means that your product must be disposed separately from household waste at the end of its service life.

Dispose of this equipment at your local collection point or recycling center.

Please help to protect the environment in which we all live.

CE conformity

SIMPLIFIED EU DECLARATION OF CONFORMITY

Herewith Musikhaus Kirstein GmbH declares that the radio equipment type [Beatfoxx Chuck GT-25] complies with Directive 2014/53 / EU. The full text of the EU declaration of conformity is available at the following Internet address:

http://www.kirstein.de/docs/Konformitaetserklaerung/CE_Konformitaetserklaerung_00065927.pdf

All specifications and appearances are subject to change without notice. All information was correct at time of printing. Musikhaus Kirstein GmbH does not guarantee for the accuracy or completeness of any description, photograph or statement contained in this manual. Printed colors and specifications may vary slightly from product. Products from Musikhaus Kirstein GmbH are only sold through authorized dealer. Distributors and dealers are not agents of Musikhaus Kirstein GmbH and have no authority to bind Musikhaus Kirstein GmbH legally in any way.

 **KIRSTEIN.de**

Musikhaus Kirstein GmbH

Bernbeurener Str. 11

86956 Schongau – Germany

Telefon/Phone: 0049-8861-909494-0

Telefax/Fax: 0049-8861-909494-19

