



CT/GT-1 tuner

Dear Customer:


Thank you for choosing CT/GT-1 series digital tuner. Please carefully read the user's manual before using the product and operate the product according to the manual. Please keep the manual for later reference.

Notices


- The tuner may have malfunction if using or keeping in the following environment:
 - Expose in the sun for long time.
 - High temperature or humid environment.
 - Dirty environment.
 - Close to strong magnetic environment.
- The tuner's power supply is battery. The battery comes together with the product. Please use two AAA Size batteries (3V) for replacement. When the product is not working properly, please take out the battery and put in again after several seconds. If it is still not working, please replace the battery.
- Please don't push the button or operate the battery cover with too much force to avoid damaging the product.
- Please use clean, soft and dry cloth to clean the product. Never use water or other chemical liquid to clean.

Battery Installation

- Please install the battery according to the following steps:
 - lightly press the battery cover located on the back of the product, and slide it a little and rotate it in the direction shown.
 - install two AAA Size batteries.
 - close the battery cover.

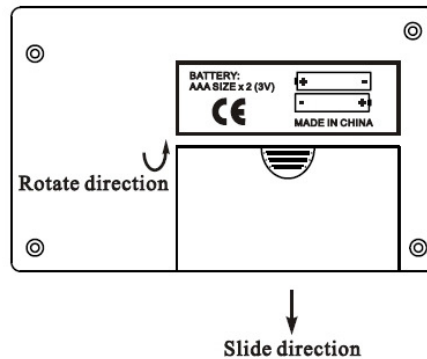


Panel and Functions

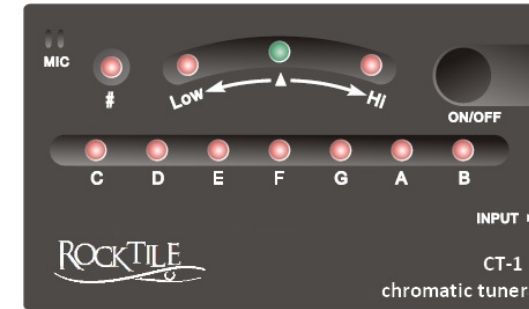

Rocktile CT-1 tuner

- Turn on or off the tuner by press the ON/OFF button. When turning on, the LED light flash from C to B. When turning off, the LED light flash from B to C. The tuner will turn off automatically after about 10 minutes without any sound input.

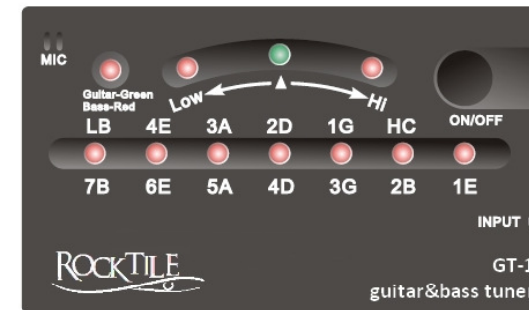

Rocktile GT-1 tuner

- Turn on/off or change the tuning mode by press the ON/OFF button. When turning on, the LED light flash from 7B to 1E, the tuning mode is Guitar and the green light will flash. When press the button again, the tuning mode changes to Bass mode and the red light will flash. Press the button once again, the tuner will be turned off and the LED light flash from 1E to 7B. The tuner will turn off automatically after about 10 minutes without any sound input.

Tuning

1. The sound of the music instrument can be picked up from the internal mic (MIC) or the input jack (Ø6.3mm). When the jack is plugged, the MIC will not work.
2. Tuning result indication:
When tuning, the LED light will be on to indicate the note and the accuracy. When the difference of the note is less than 5 cents, the upper central green light will be on. If the difference of the note is more than 5 cents, the upper side red light will begin to light on together with the central green light. The lighting degree of the upper light will change as the note difference changes. When the note difference is more than 30 cents, the upper central green light will be off and the side red light will be on for the strongest degree.

Specifications

1. Power supply : Size AAA x 2 (3V)
2. Size (mm) : 92 x 57 x 15
3. Weight(g) : 60 (including batteries)
4. Tuning range : C1 (32.7Hz) ~ B7 (3951Hz)
5. Tolerance : +/- 1cent
6. LED indication : LED indicating the tuning result
7. Power off : Automatically power off

Remarks

1. Chromatic notes table:

C	C#	D	D#	E	F	F#	G	G#	A	A#	B
---	----	---	----	---	---	----	---	----	---	----	---

2. Guitar notes table:

7B	6E	5A	4D	3G	2B	1E
----	----	----	----	----	----	----

3. Bass notes table:

LB	4E	3A	2D	1G	HC
----	----	----	----	----	----



Musikhaus Kirstein GmbH
Bernbeurenerstr. 11
86956 Schongau
Germany
www.kirstein.de

