

SLS-15 Paar Tischstative



VORSICHTSMASSNAHMEN (BITTE SORGFÄLTIG DURCHLESEN) Kinder sollten beaufsichtigt werden, um sicherzustellen, dass sie dieses Produkt nicht als Spielzeug verwenden. Lassen Sie Kinder niemals unbeaufsichtigt mit dem Verpackungsmaterial spielen. Warnhinweise: Stellen Sie das Produkt stets auf eine geeignete Oberfläche ab, um ein Wackeln oder Umfallen zu verhindern. Vorsichtsmaßnahmen: Um Schäden am Produkt zu vermeiden, stellen Sie es nicht an Plätze mit hohen Temperaturen oder viel Staub, sehr niedriger oder hoher Luftfeuchtigkeit, stellen Sie es nicht direkt neben eine Klimaanlage und vermeiden Sie direkte Sonneneinstrahlung. Wenden Sie im Umgang mit dem Produkt keinerlei Gewalt an und stellen Sie keine zu schweren Gegenstände darauf. Ort: Setzen Sie das Produkt nicht den folgenden Bedingungen aus, um Verformungen, Verfärbungen oder größere Schäden zu vermeiden: Direktes Sonnenlicht, extreme Temperatur oder Luftfeuchtigkeit, übermäßig staubiger oder schmutziger Ort. Reinigung: Reinigen Sie das Produkt nur mit einem weichen, trockenen Tuch. Verwenden Sie keine Farbverdünner, Lösungsmittel, Reinigungsflüssigkeiten oder chemisch imprägnierte Wischtücher. Handhabung: Üben Sie keine übermäßige Kraft auf Bedienelemente wie z.B. Schalter, Schrauben, Knöpfe, Tasten aus. Technische Änderungen und Änderungen im Erscheinungsbild sind vorbehalten. Alle Angaben entsprechen dem Stand bei Drucklegung. Für die Richtigkeit und Vollständigkeit der enthaltenen Beschreibungen, Abbildungen und Angaben übernimmt Musikhaus Kirstein GmbH keinerlei Gewähr. Abgebildete Farben und Spezifikationen können geringfügig vom Produkt abweichen. Musikhaus Kirstein GmbH - Produkte sind nur über autorisierte Händler erhältlich. Distributoren und Händler sind keine Handlungsbevollmächtigten von Musikhaus Kirstein GmbH und haben keinerlei Befugnis, die Musikhaus Kirstein GmbH in irgendeiner Weise, sei es ausdrücklich oder durch schlüssiges Handeln, rechtlich zu binden. Diese Bedienungsanleitung ist urheberrechtlich geschützt. Jede Vervielfältigung, bzw. jeder Nachdruck, auch auszugsweise, und jede Wiedergabe der Abbildungen, auch in verändertem Zustand, ist nur mit schriftlicher Zustimmung der Firma Musikhaus Kirstein GmbH gestattet.

PRECAUTIONS (PLEASE READ CAREFULLY) Children should be supervised to ensure that they do not use this product as a toy. Never allow children to play with the packaging material unsupervised. Warnings: Always place the product on a suitable surface to prevent it from wobbling or falling over. Precautions: To prevent damage to the product, do not place it in places with high temperatures or a lot of dust, very low or high humidity, do not place it directly next to an air conditioner and avoid direct sunlight. Do not use force when handling the product and do not place heavy objects on it. Location: Do not expose the product to the following conditions to avoid deformation, discoloration or major damage: Direct sunlight, extreme temperature or humidity, excessively dusty or dirty place. Cleaning: Only clean the product with a soft, dry cloth. Do not use paint thinners, solvents, cleaning fluids or chemically impregnated wipes. Handling: Do not exert excessive force on operating elements such as switches, screws, knobs or buttons. We reserve the right to make technical changes and changes in appearance. All information is correct at the time of printing. Musikhaus Kirstein GmbH accepts no liability for the accuracy and completeness of the descriptions, illustrations and information contained herein. Colors and specifications shown may differ slightly from the product. Musikhaus Kirstein GmbH products are only available through authorized dealers. Distributors and dealers are not authorized agents of Musikhaus Kirstein GmbH and have no authority to legally bind Musikhaus Kirstein GmbH in any way, whether expressly or by implication. These operating instructions are protected by copyright. Any duplication or reprinting, even in part, and any reproduction of the illustrations, even in modified form, is only permitted with the written consent of Musikhaus Kirstein GmbH.

M-AUDIO®

BX5BT

User Guide



(1.0) INTRODUCTION	3
(1.1) Box Contents	3
(1.2) Support	3
(2.0) SETUP	4
(2.1) Connection Diagram	4
(2.2) Precautions.....	5
(2.3) Configuration.....	5
(2.3.1) TRS Balanced/Unbalanced Connection	5
(2.3.2) Connecting to Preamp or Computer Outputs	5
(2.3.3) Using Isolation Pads	5
(2.3.4) Speaker Placement.....	6
(2.3.5) Speaker Height.....	6
(2.3.6) Speaker Orientation	6
(3.0) FEATURES.....	7
(3.1) Front Panel	7
(3.2) Rear Panel	8
(4.0) OPERATION.....	9
(4.1) Pairing a Bluetooth® Device.....	9
(4.2) App Control	9
(5.0) TROUBLESHOOTING.....	10
(6.0) APPENDIX.....	11
(6.1) Technical Specifications.....	11
(6.2) Trademarks & Licenses	11

Thank you for purchasing the BX5BT speakers. At M-Audio, performance and reliability mean as much to us as they do to you. We design our equipment with only one thing in mind—to make your sound the best it can be.

BX5BT speakers are designed to be versatile. Meeting your needs for music production, live streaming, or podcasting, they are focused on delivering precise sonic imaging. The BX5BT speakers are self-powered, accepting a line-level signal from a variety of sources. You can also use the M-Audio Studio Control App to create custom EQ curves to further shape the sound or adjust for the speaker position in your acoustic space.

(1.1) Box Contents

BX5BT Speakers
Speaker Interconnect Cable
Isolation Pads (2)
Power Cable
Quickstart Guide
Safety & Warranty Manual


(1.2) Support

For the latest information about this product (system requirements, compatibility information, etc.) and product registration, visit m-audio.com.

For additional product support, visit m-audio.com/support.

(2.1) Connection Diagram

Items not listed under the [\(1.1\) Box Contents](#) are sold separately.

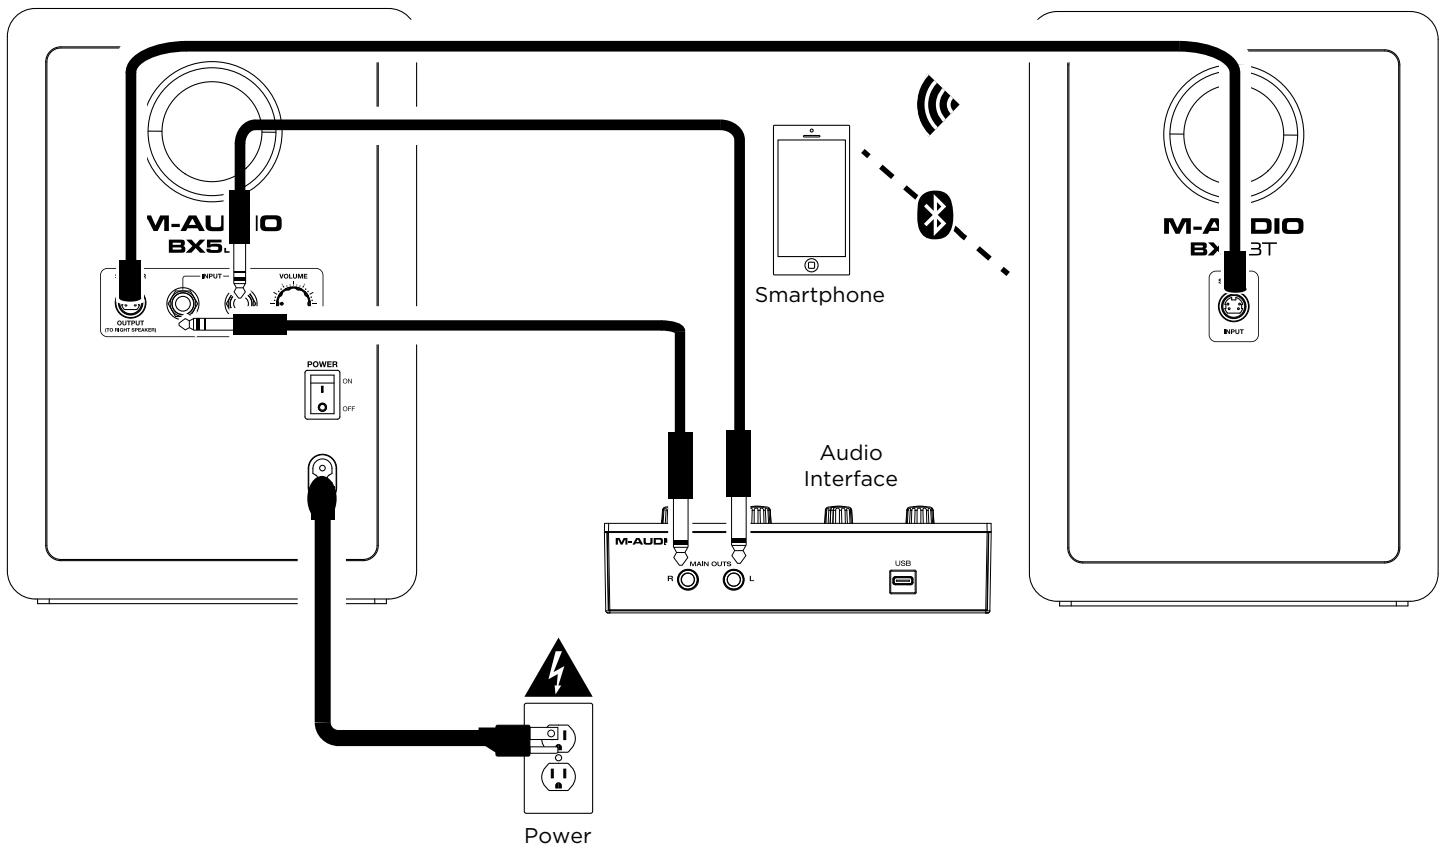

1. Position speakers vertically, aligning them to form a triangle with the listener, having the top of the woofers level with your ears. Do not block the Bass Port.
2. Connect included power cable to BX5BT's active speaker.
3. Connect the included 4-pin Speaker Interconnect cable from the active speaker's **Speaker Output** to the passive speaker's **Speaker Input**.
4. Connect a line-level source to the 1/4" TRS inputs.
5. Power on BX5BT using the **Power Switch**.
6. (Optional) Pair your Bluetooth device (see [\(4.1\) Pairing a Bluetooth® Device](#)).
7. Adjust the **Volume Knob** to control volume for the 1/4" inputs. For your Bluetooth device, adjust the source's own volume control.

(2.2) Precautions

- **Handling:** Please do not touch the speaker cone. The speaker is packaged in the box tightly, so your attention is required when taking the monitor out of the box. To avoid possible damage to the speaker unit, hold both sides of the monitor in order to pull it out of the box. The speaker cone should not be touched in order to avoid damage even after it is out of the box.
- **Correct Power Operation:** Since the speaker contains its own amplifier, it must be connected to a power outlet using the detachable AC cable provided.

Note: This product does not have a standby/low-power mode.

- **Connections:** You can connect a TRS balanced/unbalanced cable from the input of the speaker to your corresponding preamp, computer, mixer, or game console outputs. We recommend that you use high-quality balanced or unbalanced cables for input connections. Also, ALWAYS turn off the power of the speaker and turn the volume of the speaker down to a minimum before making the necessary connections.

Note: When using an unbalanced cable there is a greater chance of experiencing noise issues. If you are using an unbalanced cable and you are experiencing noise issues, try connecting a balanced TRS cable.

(2.3) Configuration

The arrangement and placement of your BX5BT speaker on speaker stands or your desktop workstation may affect the performance of the speakers. Use the following tips to achieve the best performance out of your speakers.

(2.3.1) TRS Balanced/Unbalanced Connection

Assure that the power switch of the speaker is turned to off and that the volume control of the speaker is turned down to a minimum. Connect the male end of a TRS balanced or TS unbalanced cable to the TRS input of the speaker.

(2.3.2) Connecting to Preamp or Computer Outputs

Before connecting, make sure the output device's power has been turned off. Plug the TRS balanced or TS unbalanced cable to the corresponding output connectors of a pre-amplifier, audio interface, mixer, computer, or game console.

(2.3.3) Using Isolation Pads

If possible, place your speakers on speaker stands instead of your desktop. Desks tend to resonate sympathetically at low frequencies and may adversely affect the bass response of your monitors. If speaker stands are not possible due to space restrictions and you notice a buildup in bass, use the included foam isolation pad to isolate the speaker from the surface and the room environment to prevent vibrations. The isolation pad improves the sound quality and makes your listening experience more enjoyable. The isolation pad will also keep your setup stable, protecting the speakers from slipping or falling.


(2.3.4) Speaker Placement

The placement of your speakers has a huge impact on how well they will perform in your studio. Although nearfield studio monitors are designed to be more forgiving when it comes to placement, you should do your best to make sure they form an equilateral triangle relative to your head. In other words, make sure that each speaker is equally distant from both your head as well as the other speaker. Once each speaker has been placed, rotate the speakers slightly so that the drivers are pointing toward the listener.

Take a look at the diagram on the right. Notice that the distance from the listener's head to each speaker is the same as the distance between the left and right speakers. Also note that the speakers are turned slightly so that the drivers are facing the listener.

Additionally, placing your speaker close to a wall may result in unwanted low-end reflections. Placing a speaker in a corner may increase these reflections even more. For best results, position speakers away from walls and corners, and if you are still experiencing excess low end, use the M-Audio Studio Control App to create your own custom EQ voicing to attenuate the lower frequencies. See the [\(4.2\) App Control](#) section for more details.


This is an ideal setup but if it is not practical (or possible) to do this, try to match this setup as closely as possible.

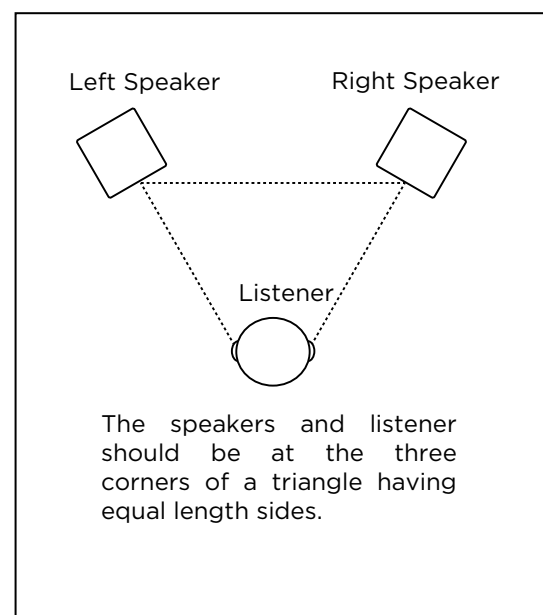

(2.3.5) Speaker Height


The ideal height for speaker is so that the speaker is parallel to the ground and that the midpoint of the woofer and tweeter is at ear height.

The diagram to the right demonstrates the ideal placement height of the speakers relative to the listener. Notice that the listener's ears are directly between the woofer and tweeter.

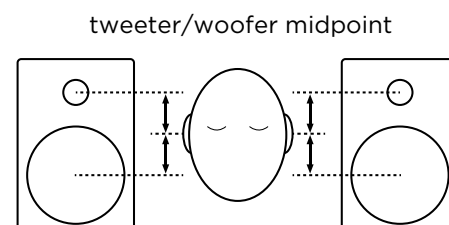

(2.3.6) Speaker Orientation

If possible, place the speakers in their upright position and avoid laying the speakers on their sides. The woofer and tweeter are vertically aligned and will provide the best performance when the speakers are placed upright. Placing them on their sides may create strong reflections from nearby surfaces resulting in spectrally unbalanced sound.

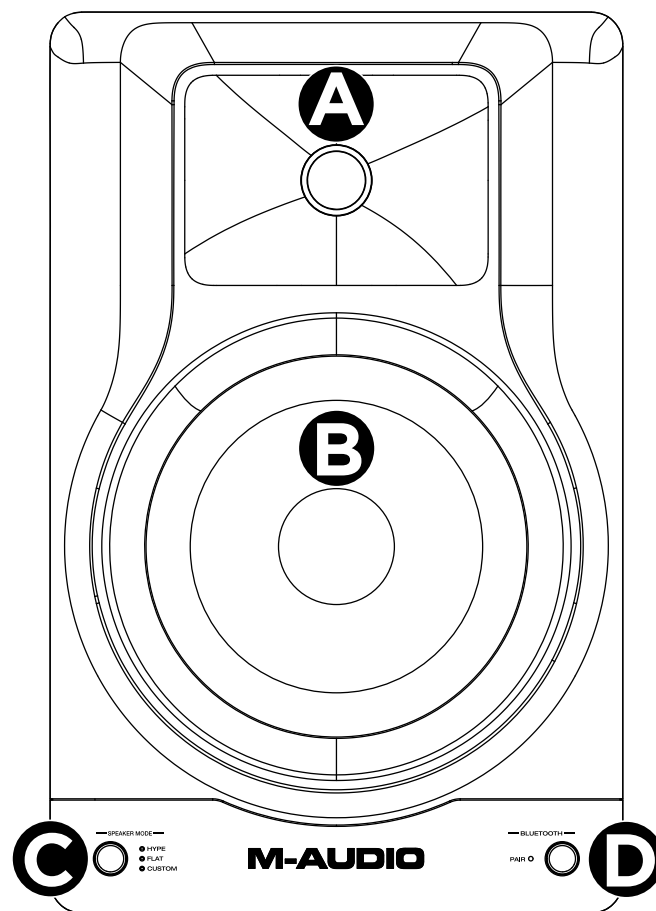(3.1) Front Panel**A. HF Driver**

The tweeter outputs the high frequencies.

B. LF Driver

The woofer outputs the low frequencies.

C. Speaker Mode

Press to toggle between different EQ voicings.

Quickly press and release the **Speaker Mode** button to cycle through different EQ voicings (see below). Use the M-Audio Studio Control App to select or create your own Custom EQ voicing.

- **Flat:** This gives a relatively flat frequency response for transparent mixing of audio.
- **Hype:** The bass response is maximized and high frequency shelving or “sizzle” is increased.
- **Custom:** The frequency response is “flat” by default but adjustable via the M-Audio Studio Control App. See [\(4.2\) App Control](#) for more information.


Press and hold the **Speaker Mode** button to mute the speaker. Press and hold again to unmute.

To turn off front panel LEDs, press and hold the **Speaker Mode** button and **Bluetooth** button. Press and hold these buttons again to turn on the front panel LEDs.

D. Bluetooth

Use this button to pair to your Bluetooth device. See [\(4.1\) Pairing a Bluetooth Device®](#) for more information.

(3.2) Rear Panel

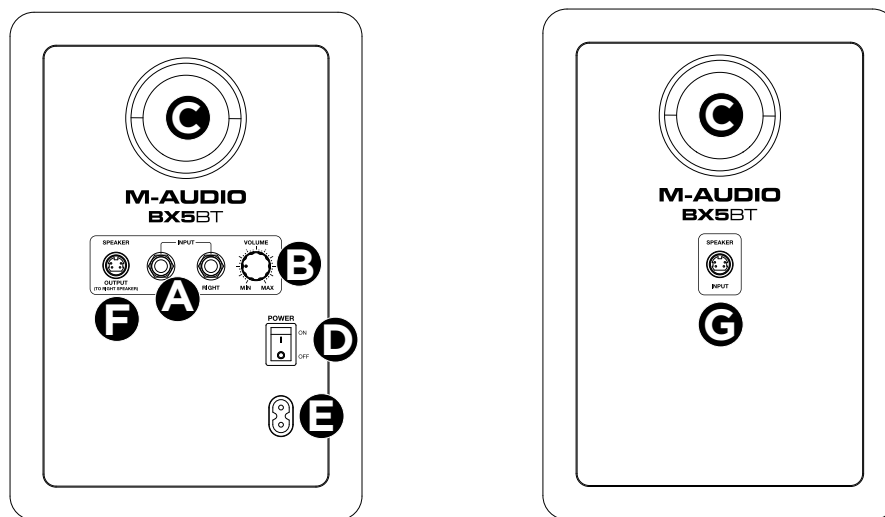

A. TRS Inputs

These stereo L/R jacks accept 1/4" (6.35 mm) connections with either balanced or unbalanced wiring. For balanced wiring, a three-conductor TRS plug is necessary. The input wiring of a TRS connector should be as follows:

- TRS Tip: signal positive (+)
- TRS Ring: signal negative (-)
- TRS Sleeve: signal ground (shield)

B. Volume

Use the volume control to set the speaker output level as needed.

C. Bass Port

This port aids in reproduction of very low frequencies by discharging frequencies below 60 Hz and acts as a cooling mechanism to prevent overheating. This port should not be blocked, and should be at least 2" away from the nearest wall.

D. Power Switch

Press to turn the speaker on or off.

Note: This product does not have a standby/low-power mode.

E. Power Input

Connect the included power cable here.

F. Speaker Output (to Passive Speaker)


Use the included Speaker Interconnect cable to connect this speaker's output to the other speaker's input to send the incoming audio signal.

G. Speaker Input (from Active Speaker)

Use the included Speaker Interconnect cable to connect this speaker's input to the other speaker's input to receive the incoming audio signal.

(4.1) Pairing a Bluetooth® Device


1. Turn on your Bluetooth device.
2. Turn on the speaker using the **power switch**.
3. Press and release the **Bluetooth button**. The LED will blink white when pairing with no device connected.
4. Navigate to your Bluetooth device's setup screen, find the **BX5BT speaker**, and connect. Once a device has successfully connected, the LED will remain lit white to indicate that a device is paired.
5. Start playback from your Bluetooth device.
6. Make sure your Bluetooth device's volume is turned up.



Note: Bluetooth and Analog input sources will both be heard through the speakers simultaneously.

The speakers will automatically reconnect with previously paired devices when they are within range.

To disconnect, press and hold the **Bluetooth button** on the speaker or turn off Bluetooth in your device's Bluetooth settings.

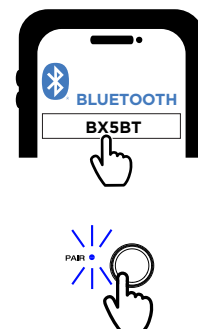

(4.2) App Control

IMPORTANT: To ensure the best possible experience with the app, use the most current Android OS or iOS on your device.

Follow these steps to download the free app on your device:

1. Open the Apple App Store or Google Play on your device. Then, search for the **M-Audio Studio Control App**.
2. Follow the on-screen instructions to download and install the app. Once downloaded, the **M-Audio App** will appear on your device's home screen.
3. Connect your device to speaker via Bluetooth. See the [\(4.1\) Pairing a Bluetooth® Device](#) to learn how to do this.
4. Open the **M-Audio Studio Control App**. If prompted, allow the app to access your device's Bluetooth and Location Services.
5. Follow directions in the app to connect the speaker.
6. Use the app to control various functions of the speaker such as:
 - Select EQ presets
 - Create a custom EQ setting
 - Compensate for the position of the speakers in your acoustic space

If the sound is distorted:

- Try lowering the volume control of your sound source.
- Move the phone away from the speakers to reduce interference.

I hear a hum when cables are connected:

- Disconnect cables from the input jacks to see if it's a faulty cable.
- Use balanced cabling connections whenever possible.
- Make sure the signal cables are not placed near power cables.
- Connect all audio equipment power cables to outlets which share a common ground.

I hear a buzz from the speakers when my phone is near them:

- Move the phone away from the speakers to reduce interference.

If there is too much bass:

- Try adjusting the EQ control in the M-Audio Studio Control App to lower the bass level. This will allow you to play the music louder before clipping (distortion) occurs.

If you cannot connect your audio device to your speaker via Bluetooth:

- Have your audio device (e.g., smartphone or tablet) and the speaker as close together as possible while trying to connect. Make sure both the audio device and the speaker are unobstructed by walls, furniture, etc.
- Reset the Bluetooth connection on the speaker to disconnect the speaker from any other audio device and restart the search process. If this does not work right away, power off the speaker and then power it back on.
- Reset the Bluetooth connection on your audio device by turning Bluetooth off and back on. You can find this under the Bluetooth menu in the Settings for your phone or other audio device.

If this does not work, and you have connected to the speaker before, find the speaker in the list of available or previously connected devices in your audio device's Bluetooth menu, tap the "gear" or "i" icon located next to it and then select **Unpair** or **Forget**. Turn the speaker off and back on and try pairing again once it reappears in your available devices list.

Note: If the speaker has been paired to another audio device recently that is still within range, you may need to repeat this process with that audio device to fully disconnect.

(6.1) Technical Specifications

Tweeter	1.0" / 25.4 mm
Woofer	5.0" / 127 mm
Frequency Response	49 Hz – 20 kHz (-10 dB)
Max SPL	109 dB
Coverage Pattern	120° x 90°
Enclosure	Ported Vinyl Wrapped MDF
Power Configuration	Bi-Amplified Class D
Power Amplification	120W total (2 x 50W LF / 2 x 10W HF)
Converter SNR	>120 dB
Line Inputs	Connectors: (2) 1/4" / 3.5 mm TRS
Wireless Technology	Bluetooth® – Classic Audio – Qualified against Bluetooth® Core 5.3 – Range: Up to 100 feet / 30.5 m – Maximum Radio-Frequency Power: <20 dBm (EIRP) – Transmitter Frequency Range: 2400 – 2483.5 MHz
Power	Connection: IEC Voltage: 100-240 VAC, 50/60 Hz Power Consumption: 150W
Dimensions (height x width x depth)	10" x 6.9" x 8.0" / 254 x 176 x 202 mm
Weight	15.74 lbs. / 7.1 kg

Specifications are subject to change without notice.

* Bluetooth and wireless reception and range are affected by walls, obstructions, and movement. For optimal performance, place the product in the center of the room so it is unobstructed by walls, furniture, etc. Battery life may vary based on temperature, age, and volume usage of product.

(6.2) Trademarks & Licenses

M-Audio is a trademark of inMusic Brands, Inc., registered in the U.S. and other countries.

App Store is a trademark of Apple Inc., registered in the U.S. and other countries.

Android and Google Play are registered trademarks of Google Inc. All other product names, company names, trademarks, or trade names are those of their respective owners.

The *Bluetooth* word mark and logos are owned by the Bluetooth SIG, Inc. and any use of such marks by M-Audio is under license.

All other product names, company names, trademarks, or trade names are those of their respective owners.

M-AUDIO®