


# CLASSIC CANTABILE

## MINI 37 Keyboard

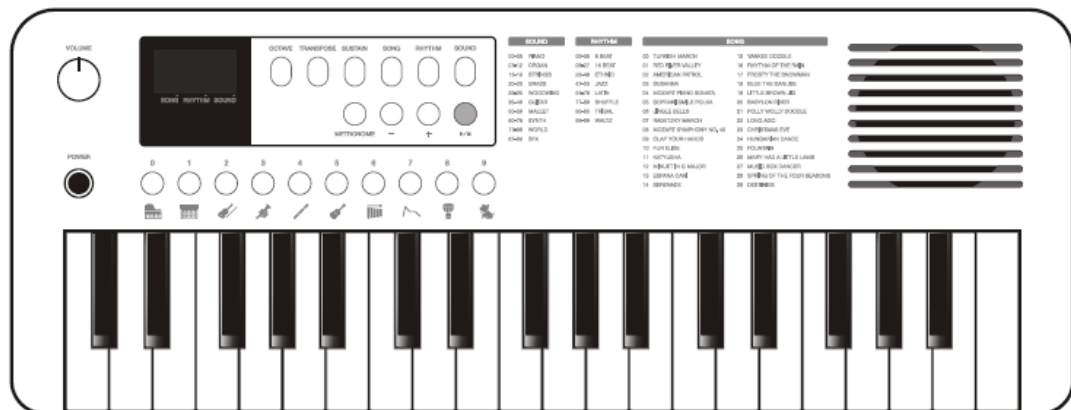

## Bedienungsanleitung / User Manual

Artikelnummer: 00078728, 00078730, 00078731  
Version: 11/2021

Vielen Dank, dass Sie sich für dieses Produkt entschieden haben. Um sicherzustellen, dass Sie mit diesem Produkt vollständig zufrieden sind, lesen und verstehen Sie dieses Handbuch sorgfältig.



## **BITTE SORGFÄLTIG DURCHLESEN**

Bitte bewahren Sie dieses Handbuch zum späteren Nachschlagen an einem sicheren Ort auf. Händigen Sie alle Unterlagen bei Weitergabe des Produkts an Dritte ebenfalls mit aus. Lassen Sie Kinder niemals unbeaufsichtigt mit dem Verpackungsmaterial. Bei in Plastiktüten verpackten Produkten besteht Erstickungsgefahr durch Verpackungsmaterialien. Das Produkt sollte nur unter Aufsicht von Erwachsenen verwendet werden. Verwenden Sie das Produkt nur, wenn es sich in einwandfreiem Zustand befindet. Verwenden Sie das Produkt nicht, wenn Schäden sichtbar sind oder vermutet werden. Wir haften nicht für Schäden die infolge der Nichtbeachtung der Sicherheitshinweise oder durch falsche oder zweckentfremdete Handhabung auftreten.



Bedienungsanleitung beachten!



**WARNUNG**

Mit dem Signalwort **WARNUNG** sind die Gefahren gekennzeichnet, die ohne Vorsichtsmaßnahmen zu schweren Verletzungen führen können.



**HINWEIS**

Mit dem Signalwort **HINWEIS** sind allgemeine Vorsichtsmaßnahmen gekennzeichnet, die im Umgang mit dem Produkt beachtet werden sollen.



**HINWEIS**

Bilder und Bildschirmdarstellungen in dieser Bedienungsanleitung können vom Erscheinungsbild des tatsächlichen Produkts geringfügig abweichen, solange dies keine negativen Auswirkungen auf die technischen Eigenschaften und Sicherheit des Produkts hat.



**HINWEIS**

Alle personenbezogenen Formulierungen in dieser Bedienungsanleitung sind geschlechtsneutral zu betrachten.

Diese Bedienungsanleitung gilt für mündige Nutzer und für Personen, die von einer für ihre Sicherheit verantwortlichen Person beaufsichtigt oder in die Bedienung des Gerätes eingewiesen wurden und nachgewiesen haben mit dem Gerät umgehen zu können.



**WARNUNG**

**Kinder sollten beaufsichtigt werden, um sicherzustellen, dass sie dieses Gerät nicht als Spielzeug verwenden. Lassen Sie Kinder niemals unbeaufsichtigt mit dem Verpackungsmaterial spielen.**



**WARNUNG**

**Gefahr der Sachbeschädigung! Wir haften nicht für Unfälle, die infolge der Nichtbeachtung der Sicherheitshinweise oder durch falsche Handhabung auftreten.**

Alle Informationen in dieser Bedienungsanleitung wurden nach bestem Wissen und Gewissen kontrolliert. Weder Autor noch Herausgeber können jedoch für Schäden haftbar gemacht werden, die in Zusammenhang mit der Verwendung dieser Bedienungsanleitung stehen.

Sonstige, in diesem Dokument aufgeführte Produkt-, Marken- und Unternehmensbezeichnungen können die Warenzeichen ihrer jeweiligen Eigentümer sein. Die Einhaltung sämtlicher anwendbarer Urheberrechtsgesetze liegt in der Verantwortung des Anwenders dieses Dokuments.

 **WARNUNG**

**Vorsicht**

Bitte beachten Sie folgende grundlegenden Hinweise um sich oder andere nicht zu gefährden und Schäden an externen Geräten zu vermeiden.

 **HINWEIS**

**Warnhinweise**

Bauen Sie das Produkt nicht auseinander und nehmen Sie keine Modifikationen daran vor. Dies könnte Verletzungen durch Stromschlag zur Folge haben.

Wenn Sie feststellen, dass das Stromkabel deutliche Gebrauchsspuren aufweist, das Gerät Fehlfunktionen aufweist, verbrannt riecht oder raucht, ziehen Sie umgehend den Stecker aus der Steckdose und betrauen Sie eine Fachwerkstatt mit eventuell nötigen Reparatur-, Service- und Wartungsarbeiten oder wenden Sie sich an Ihren Händler.

Bevor Sie das Produkt reinigen, sollten Sie es ausschalten und vom Strom trennen.

Stellen Sie das Produkt stets auf eine ebene, stabile Oberfläche ab, um einen sicheren Stand zu gewährleisten.

Benutzen Sie das Produkt, nicht in feuchter oder nasser Umgebung.

Stellen Sie keine Gefäße, die mit Flüssigkeiten gefüllt sind, wie z.B. Vasen, Gläser oder Flaschen auf das Produkt.

Legen Sie keine kleinen Gegenstände darauf, die hineinrutschen könnten, wie z.B. Haarnadeln, Nähnadeln oder Münzen.

 **HINWEIS**

**Vorsichtsmaßnahmen**

Um Schäden am Produkt zu vermeiden, stellen Sie es nicht an Plätze mit hohen Temperaturen oder viel Staub, stellen Sie es nicht direkt neben eine Klimaanlage und vermeiden Sie direkte Sonneneinstrahlung.

Stellen Sie den Artikel nicht in die Nähe von anderen elektrischen Geräten um Interferenzen zu vermeiden.

Wenden Sie im Umgang mit dem Produkt keinerlei Gewalt an und stellen Sie keine schweren Gegenstände darauf.

Trennen Sie die Verbindung zum Stromnetz, wenn Sie das Gerät für längere Zeit nicht benutzen. Um das Gerät vom Strom zu trennen, ziehen Sie bitte am Stecker, nicht am Kabel.

Gehen Sie bitte vorsichtig mit dem Stromkabel um. Es sollte nicht in der Nähe von Heizkörpern liegen, Sie sollten keine schweren Gegenstände daraufstellen und es so verlegen, dass keine Personen darauf treten oder darüber fallen könnten.

 **WARNUNG**

**Netzspannung**

Sollte für die Nutzung ein externes Netzteil notwendig sein, schließen Sie dieses an eine Steckdose mit der richtigen Spannung an.

Schließen Sie das Gerät nicht an eine andere Netzspannung an, als die, für die Ihr Produkt vorgesehen ist.

Ziehen Sie den Netzadapter aus der Steckdose, wenn Sie den Artikel nicht benutzen oder wenn es zu einem Gewitter kommt.



### **Batterie**

Achten Sie darauf, dass das Batteriefach immer sicher verschlossen ist. Beachten Sie beim Einlegen der Batterien die richtige Polung. **Batterien gehören nicht in den Hausmüll!** Entsorgen Sie leere Batterien bitte bei entsprechenden Sammelstellen oder kommunalen Entsorgungsstellen. Sollten Sie das Gerät für längere Zeit nicht benutzen, entnehmen Sie bitte die Batterien.



### **Ort**

Setzen Sie das Produkt nicht den folgenden Bedingungen aus, um Verformungen, Verfärbungen oder größere Schäden zu vermeiden:

Direktes Sonnenlicht, extreme Temperatur oder Luftfeuchtigkeit, übermäßig staubiger oder schmutziger Ort, starke Vibrationen oder Stöße, starken Magnetfeldern.



### **Reinigung**

Reinigen Sie das Produkt nur mit einem weichen, trockenen Tuch. Verwenden Sie keine Farbverdünner, Lösungsmittel, Reinigungsflüssigkeiten oder chemisch imprägnierte Wischtücher.



### **Handhabung**

Üben Sie keine übermäßige Kraft auf Bedienelemente wie z.B. Schalter, Knöpfe, Tasten, Befestigungsschrauben aus.

Bringen Sie kein Papier, Metall oder andere Gegenstände ins Innere ein. Ziehen Sie in diesem Fall den Netzadapter/ das Netzkabel aus der Steckdose. Lassen Sie das Gerät anschließend von qualifiziertem Servicepersonal überprüfen.


© 2021

Dieses Handbuch ist urheberrechtlich geschützt. Das Kopieren oder Nachdrucken, auch in Auszügen, ist nur mit Zustimmung der Musikhaus Kirstein GmbH gestattet. Gleiches gilt für die Reproduktion oder das Kopieren von Bildern, auch in veränderter Form.

## Inhalt

1. Bedienoberfläche und grundlegende Bedienung .....	5
2. Rückseitige Anschlüsse und Batteriebetrieb.....	7
3. Sonderfunktionen.....	8
4. Technische Daten.....	9
5. Appendix .....	10

## 1. Bedienoberfläche und grundlegende Bedienung

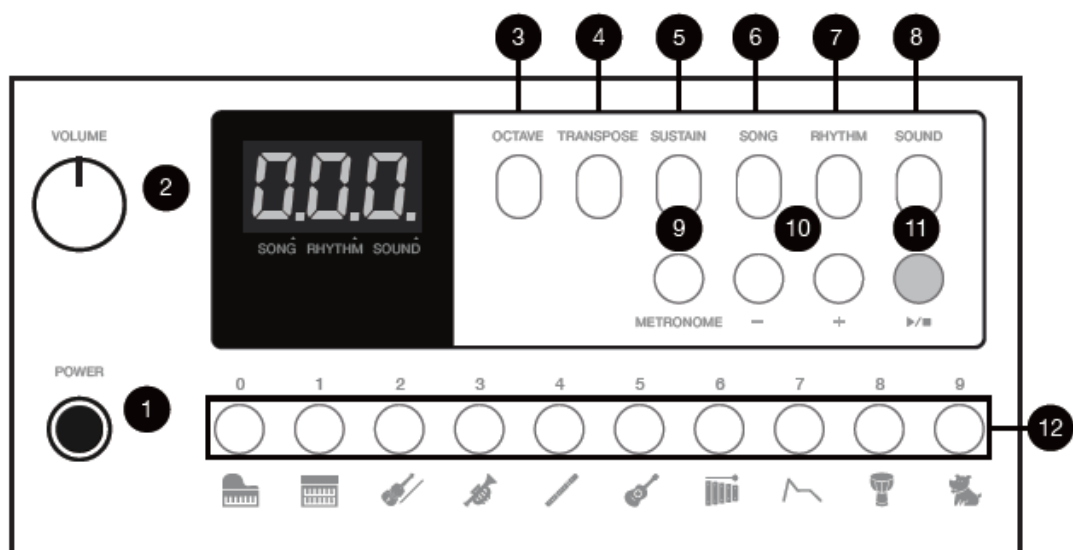

Drücken Sie die Taste POWER „1“, um die Stromversorgung ein- oder auszuschalten.

Hinweis: Um Energie zu sparen, schaltet sich das Gerät nach 30 Minuten Nichtbenutzung automatisch ab. Sie können die Energiesparfunktion im Funktionsmenü anpassen oder ausschalten.

Drehen Sie den VOLUME-Regler „2“ im Uhrzeigersinn, um die Ausgangslautstärke zu erhöhen, oder gegen den Uhrzeigersinn, um sie zu verringern.

Drücken Sie die Taste OCTAVE „3“ und verwenden Sie die Tasten + oder – „10“, um den Oktavbereich des Keyboards einzustellen.

Drücken Sie die Taste TRANSPOSE „4“ und verwenden Sie die Tasten + oder – „10“, um in Halbtonschritten nach oben oder unten zu Transponieren.

Drücken Sie die Taste SUSTAIN „5“, um die Sustain-Funktion ein- oder auszuschalten.

Drücken Sie die Taste SONG „6“, um in den Modus zur Song-Auswahl zu gelangen und verwenden Sie die Tasten + oder – „10“, um durch die Songs zu blättern.

Drücken Sie die Taste RHYTHM „7“, um in den Modus zur Rhythmus-Auswahl zu gelangen und verwenden Sie die Tasten + oder – „10“, um durch die Rhythmen zu blättern.

Drücken Sie die Taste SOUND „8“, um in den Modus zur Klangfarben-Auswahl zu gelangen und verwenden Sie die Tasten + oder – „10“, um durch die Sounds zu blättern.

Drücken Sie die Taste METRONOM „9“, um das Metronom zu starten oder zu stoppen.

Drücken Sie die Taste Play/Stop „11“, um den aktuell ausgewählten Rhythmus oder Song zu starten oder zu stoppen.


Die Sounds des Keyboards sind zum leichteren Zugriff in zehn Kategorien geordnet. Diese Kategorien können im Soundmodus durch Drücken der jeweiligen Zahlen/Symbol Taste „12“ direkt angewählt werden. Durch mehrmaligen Druck der Taste bewegen Sie sich durch die Soundauswahl der jeweiligen Kategorie. Die Symbole der Zahlen/Symbol Tasten „12“ stehen dabei für folgende Kategorien:



Im Rhythmus- oder Song-Modus arbeiten die Zahlen/Symbol Tasten „12“ als Zahleneingabetasten und ermöglichen Ihnen den direkten Zugriff auf den gewünschten Rhythmus- oder Song.

Hinweis: Wenn Sie eine ein- oder zweistellige Zahl eingeben, warten Sie nach der Eingabe einige Sekunden, bis diese übernommen wird.

## 2. Rückseitige Anschlüsse und Batteriebetrieb

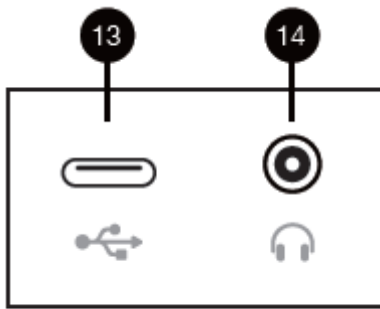


Die USB-C Buchse „13“ dient zur MIDI-Datenübermittlung zu einem PC und/oder zur Stromversorgung.

Verbinden Sie diese Buchse mit Hilfe des mitgelieferten USB-Kabels zu einer beliebigen 5V (min. 500mA) USB-Schnittstelle wie z.B. einem PC USB-Slot oder einem USB-Netzteil, um das Instrument mit Strom zu versorgen.

Verbinden Sie diese Buchse mit Hilfe des mitgelieferten USB-Kabels zu ihrem PC, um MIDI-Daten zu übertragen. Hierzu ist kein externer Treiber, jedoch eine MIDI-Fähige APP (nicht im Lieferumfang enthalten) erforderlich.

Nutzen Sie die 3,5mm Kopfhörerbuchse „14“, um das Gerät mit einem Kopfhörer oder einer externen Verstärkeranlage zu verbinden. Der interne Lautsprecher wird in diesem Falle deaktiviert.


Hinweis: Bitte beachten Sie, dass zu hohe Lautstärke oder zu lange Nutzungsdauer von Kopfhören zu Gehörschäden führen können. Drehen Sie den Lautstärkeregler vor dem Einstecken eines Kopfhörers auf die minimale Lautstärke und wählen Sie anschließend behutsam das gewünschte Level.

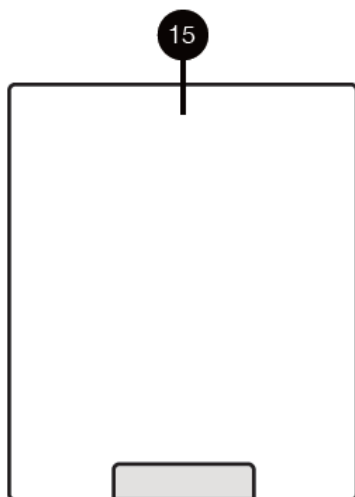

Das Instrument kann mit 4 x 1,5V AA-Batterien betrieben werden. Achten Sie darauf, dass das Batteriefach „15“ an der Unterseite des Instruments, immer sicher verschlossen ist. Beachten Sie beim Einlegen der Batterien die richtige Polung. Sollten Sie das Gerät für längere Zeit nicht benutzen, entnehmen Sie bitte die Batterien.

### 3. Sonderfunktionen

Drücken und halten Sie gleichzeitig die drei tiefsten Tasten der Klaviatur, um in den Funktions-Modus zu gelangen. Das Display zeigt „En9“. Drücken Sie nun die mit der gewünschten Funktion belegte Taste (siehe Grafik) und lassen Sie anschließend alle vier Tasten wieder los. Das Display zeigt nun den eingestellten Wert der jeweiligen Funktion. Ändern Sie diesen mit Hilfe der – und + Tasten. Das Instrument wechselt nach ca. 3 Sekunden selbständig in den Standardmodus zurück.

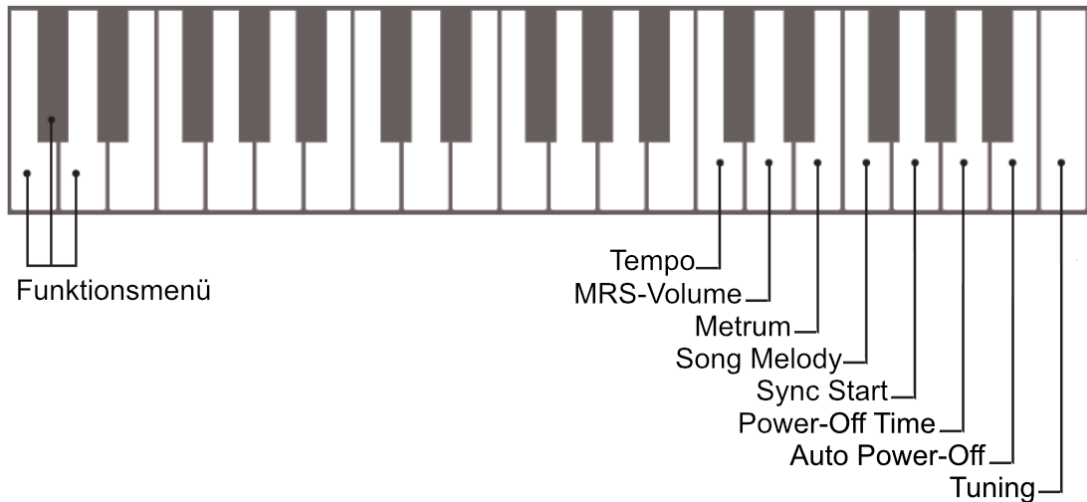

Funktion	Wert	Funktionsbeschreibung
Tempo	30 – 280 BPM	Wählen Sie hier das Tempo für das Metronom, die Rhythmus- und Song-Wiedergabe.
MRS-Volume	0 - 15	Wählen Sie hier die anteilige Lautstärke für das Metronom, die Rhythmus- und Song-Wiedergabe.
Metrum	0 - 16	Wählen Sie hier einen Akzent für die Metronomwiedergabe.
Song Melody	On, off	Schalten Sie hier die Hauptmelodie der Songwiedergabe ein bzw. aus. Nutzen Sie diese Funktion, um die Melodiestimme der eingespeicherten Songs zu üben und selbst zu spielen.
Sync Start	On, off	Aktivieren bzw. deaktivieren Sie hier die Sync Start Funktion. Bei aktiviertem Sync Start beginnt die Rhythmuswiedergabe simultan zu Ihrem Melodiespiel.

Power-Off Time	5, 10, 15, 30, 60, 120 Min.	Wählen Sie hier die Reaktionszeit der Auto Power-Off Funktion.
Auto Power-Off	On, off	Aktivieren bzw. deaktivieren Sie hier die Auto Power-Off Funktion.
Tuning	-50 - +50 Cent	Nutzen Sie diese Funktion, um die Stimmung des Instruments in Cent-Schritten nach Oben oder Unten anzupassen.

#### 4. Technische Daten

Artikelbezeichnung	Classic Cantabile MINI 37
Tastatur	37 Mini-Tasten
Display	LED
Polyphonie	32
Sound / Rhythm / Song	100 / 100 / 30
Stromversorgung	USB-C 5V/500mA oder 4x 1,5VAA
Verstärkerleistung	2W
Abmessungen (BxTxH in mm)	490 x 185 x 61
Gewicht (kg)	0,99

## 5. Appendix

Sound List	
<b>PIANO</b>	
0	Acoustic Grand Piano
1	Bright Acoustic Piano
2	Honky-tonk Piano
3	Chorused Piano
4	Harpichord
5	Clavichord
6	Metal Piano
<b>ORGAN</b>	
7	Hammond Organ
8	Percussive Organ
9	Church Organ
10	Reed Organ
11	Accordian
12	Harmonica
<b>STRINGS</b>	
13	Violin
14	Viola
15	Cello
16	Contrabass
17	Pizzicato Strings
18	Orchestral Harp
19	Electronic String Ensemble
<b>BRASS</b>	
20	Trumpet
21	Trombone
22	Tuba
23	Muted Trumpet
24	French Horn
25	Synth Brass 1
<b>WOODWIND</b>	
26	Sax
27	Oboe

28	English Horn
29	Bassoon
30	Clarinet
31	Piccolo
32	Flute
33	Bottle Blow
34	Ocarina
35	Bass Oboe
<b>GIUITAR</b>	
36	Acoustic Guitar (nylon)
37	Acoustic Guitar (steel)
38	Electric Guitar (jazz)
39	Electric Guitar (clean)
40	Overdriven Guitar
41	Guitar Harmonics
42	Acoustic Bass
43	Electric Bass (finger)
44	Electric Bass (pick)
45	Fretless Bass
46	Slap Bass 1
47	Slap Bass 2
48	Synth Bass 1
49	Synth Bass 2
<b>MALLET</b>	
50	Celesta
51	Glockenspiel
52	Music box
53	Vibraphone
54	Marimba
55	Xylophone
56	Tubular Bells
57	Tinkle Bell
58	Agogo
59	Woodblock

SYNTH	
60	Choir Aahs
61	Voice Oohs
62	Lead 1
63	Lead 2
64	Pad 1
65	Pad 2
66	Lead 3
67	Psychedelic Synth Lead
68	Vibraphone Synth Lead
69	Marimba Synth Lead
70	Wind FX
71	Clarinet FX
72	Crystal FX
73	Environmental Lead
74	Orchestra Lead
75	Bass Lead
76	East Nation Pad
<b>WORLD</b>	
77	Dulcimer
78	Shakuhachi
79	Sitar
80	Banjo
81	Shamisen
82	Koto
83	Kalimba
84	Bagpipe
85	Shanai
86	Taiko Drum
<b>SFX</b>	
87	Dog
88	Cat
89	Cow
90	Horse

91	Bird Tweet
92	Orchestra Hit
93	Rain
94	Thunder
95	Seashore
96	Telephone Ring
97	Helicopter
98	Applause
99	Gunshot

Rhythm list	
<b>8 BEAT</b>	
0	8 Beat 1
1	8 Beat 2
2	8 Beat 3
3	8 Beat 4
4	Dance
5	Rock Dance
<b>16 BEAT</b>	
6	16 Beat 1
7	16 Beat 2
8	16 Beat 3
9	16 Beat 4
10	16 Beat 5
11	16 Beat 6
12	16 Beat 7
13	16 Accent 1
14	16 Accent 2
15	16 Ballad 1
16	16 Ballad 2
17	16 Funk
18	16 Ride
19	16 Rock 1
20	16 Rock 2
21	16 Rock 3
22	Funk
23	Heavy Ballad
24	Power Funk 1
25	R&B 1
26	R&B 2
27	R&B 3
<b>ETHNIC</b>	
28	Bolero
29	Brit Rhumba 1
30	Brit Rhumba 2
31	Calypso

32	Ethnic Rock
33	Jorpo
34	Lambada
35	Mambo 1
36	Mambo 2
37	March 1
38	March 2
39	Merengue 1
40	Oriental 1
41	Oriental 2
42	Polka
43	Power Polka
44	Rhumba 1
45	Rhumba 2
46	Tango
<b>JAZZ</b>	
47	Jazz Ride 1
48	Jazz Ride 2
49	Jazz Ride 3
50	Jazz Shuffle 1
51	Jazz Shuffle 2
52	Jazz Waltz 1
53	Jazz Waltz 2
<b>LATIN</b>	
54	8 Latin
55	16 Latin 1
56	16 Latin 2
57	16 Latin 3
58	16 Latin 4
59	16 Latin 5
60	Bossa 1
61	Bossa 2
62	Heavy Latin 1
63	Heavy Latin 2
64	Heavy Latin 3
65	Heavy Latin 4

66	Heavy Latin 5
67	Pop Samba 1
68	Power Latin 1
69	Power Samba 1
70	Power Samba 2
71	Power Samba 3
72	Rock Latin 1
73	Rock Latin 2
74	Salsa
75	Samba
76	Soft Bossa
<b>SHUFFLE</b>	
77	6/8 Beat
78	6/8 Rock
79	Shuffle 1
80	Shuffle 2
81	Shuffle 3
82	Shuffle 4
83	Chamber Pop
84	Ethnic Shuffle 1
85	Ethnic Shuffle 2
86	Ethnic Shuffle 3
87	Ethnic Shuffle 4
88	Ethnic Shuffle 5
89	Latin Shuffle
<b>TRIBAL</b>	
90	8 Tribal
91	16 Tribal 1
92	16 Tribal 2
93	16 Tribal 3
94	16 Tribal 4
95	16 Tribal 5
<b>WALTZ</b>	
96	Waltz Ride
97	Power Waltz 1
98	Power Waltz 2
99	Power Waltz 3

Song List	
0	Turkish March
1	Red River Valley
2	American Patrol
3	Susanna
4	Mozart Piano Sonata
5	Soprani Smile Polka
6	Jingle Bells
7	Radetzky March
8	Mozart Symphony No. 40
9	Clap Your Hands
10	Fur Elise
11	Katryusha
12	Minuet in G Major
13	Espana Cani
14	Serenade
15	Yankee Doodle
16	Rhythm of the Rain
17	Frosty the Snowman
18	Blue the Danube
19	Little Brown Jig
20	Babylon River
21	Polly Wolly Doodle
22	Long Ago
23	Christmas Eve
24	Hungarian Dance
25	Fountain
26	Mary Had a Little Lamb
27	Music Box Dancer
28	Spring of the Four Seasons
29	Destinies

# WEEE Erklärung

## (Waste of Electrical and Electronic Equipment)

Ihr Produkt wurde mit hochwertigen Materialien und Komponenten entworfen und hergestellt, die recycelbar sind und wiederverwendet werden können.  
Dieses Symbol bedeutet, dass elektrische und elektronische Geräte am Ende ihrer Nutzungsdauer vom Hausmüll getrennt entsorgt werden müssen.  
Bitte entsorgen Sie dieses Gerät bei Ihrer örtlichen kommunalen Sammelstelle oder im Recycling Center.  
Bitte helfen Sie mit, die Umwelt, in der wir leben, zu erhalten.



Technische Änderungen und Änderungen im Erscheinungsbild sind vorbehalten.  
Alle Angaben entsprechen dem Stand bei Drucklegung.  
Für die Richtigkeit und Vollständigkeit der enthaltenen Beschreibungen, Abbildungen und Angaben übernimmt Musikhaus Kirstein GmbH keinerlei Gewähr.  
Abgebildete Farben und Spezifikationen können geringfügig vom Produkt abweichen.  
Musikhaus Kirstein GmbH - Produkte sind nur über autorisierte Händler erhältlich.  
Distributoren und Händler sind keine Handlungsbevollmächtigten von Musikhaus Kirstein GmbH und haben keinerlei Befugnis, die Musikhaus Kirstein GmbH in irgendeiner Weise, sei es ausdrücklich oder durch schlüssiges Handeln, rechtlich zu binden.

 **KIRSTEIN.de**

**Musikhaus Kirstein GmbH**

**Bernbeurener Str. 11**

**86956 Schongau – Germany**


**Telefon: 0049-8861-909494-0**

**Fax: 0049-8861-909494-19**



# CLASSIC CANTABILE

## MINI 37 Keyboard

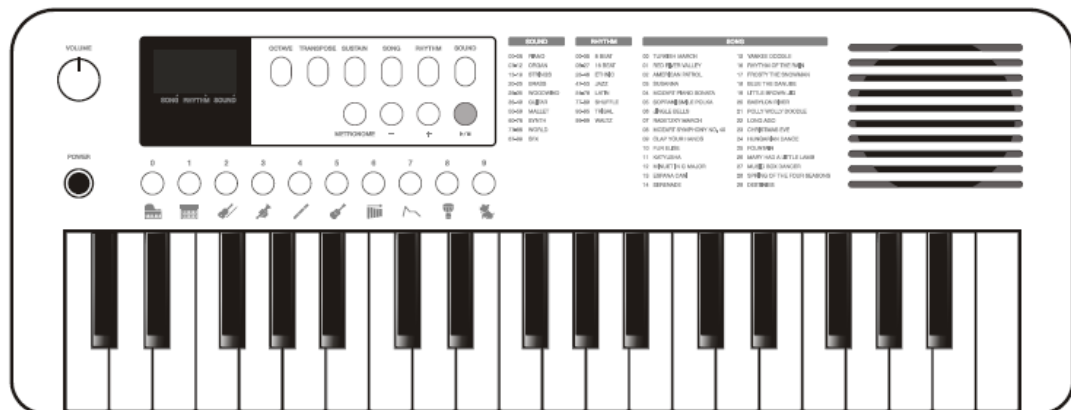

## User Manual

Item number: 00078728, 00078730, 00078731  
Version: 11/2021

Thank you for choosing this product. To ensure that you are completely satisfied with this product, please read and understand this manual carefully.



## PLEASE READ CAREFULLY

Please keep this manual in a safe place for future reference. Also hand over all documents when passing the product on to third parties. Never leave children unattended with the packaging material. Products packed in plastic bags pose a choking hazard due to packaging materials. The product should only be used under adult supervision. Only use the product if it is in perfect condition. Do not use the product if damage is visible or suspected. We are not liable for damage that occurs as a result of failure to observe the safety instructions or as a result of incorrect or improper handling.




Observe the operating instructions!



The signal word **WARNING** is used to indicate hazards that can lead to serious injuries if no precautionary measures are taken.



The signal word **NOTE** indicates general precautions that should be observed when handling the product.



Images and screen representations in these operating instructions may differ slightly from the appearance of the actual product, as long as this does not have a negative impact on the technical characteristics and safety of the product.



All person-related formulations in these operating instructions are to be regarded as gender-neutral.

These operating instructions apply to mature users and to persons who have been supervised or instructed in the operation of the device by a person responsible for their safety and who have proven that they are able to handle the device.



**Children should be supervised to ensure that they do not use this device as a toy.  
Never allow children to play with the packaging material unsupervised.**



**Risk of damage to property! We are not liable for accidents that occur as a result of non-compliance with the safety instructions or incorrect handling.**

All information in this operating manual has been checked to the best of our knowledge and belief. However, neither the author nor the publisher can be held liable for any damage related to the use of these operating instructions.

Other product, brand and company names mentioned in this document may be the trademarks of their respective owners. Compliance with all applicable copyright laws is the responsibility of the user of this document.

 **WARNING**

**Caution**

Please observe the following basic instructions to avoid endangering yourself or others and to prevent damage to external devices.

 **NOTE**

**Warnings**

Do not disassemble or make any modifications to the product. This could result in injury from electric shock.

If you notice that the power cable shows clear signs of use, the device malfunctions, smells burnt or smokes, unplug the device immediately and entrust a specialist workshop with any necessary repair, service and maintenance work or contact your dealer.

Before cleaning the product, turn it off and disconnect it from the power supply.

Always place the product on a level, stable surface to ensure safe standing.

Do not use the product in a damp or wet environment.

Do not place vessels filled with liquids, such as vases, glasses or bottles, on the product.

Do not place small objects on it that could slip in, such as hairpins, sewing needles or coins.

 **NOTE**

**Precautions**

To avoid damage to the product, do not place it in places with high temperatures or a lot of dust, do not place it directly next to an air conditioner, and avoid direct sunlight.

Do not place the item near other electrical equipment to avoid interference.

Do not use force of any kind when handling the product and do not place heavy objects on it.

Disconnect the device from the power supply if you are not going to use it for a long period of time. To disconnect the device from the power, please pull the plug, not the cable.

Please handle the power cable with care. It should not be placed near radiators, you should not place heavy objects on it, and you should lay it in such a way that no person could step on it or fall over it.

 **WARNING**

**Mains voltage**

If an external power supply is required for use, connect it to a power outlet with the correct voltage.

Do not connect the device to a different mains voltage than the one for which your product is intended.

Unplug the AC adapter from the wall outlet when not in use or during lightning storms.

 NOTE

**Battery**

Make sure that the battery compartment is always securely closed. Observe the correct polarity when inserting the batteries. **Batteries do not belong in household waste!** Please dispose of empty batteries at appropriate collection points or municipal disposal points. If you do not use the device for a longer period of time, please remove the batteries.

 NOTE

**Location**

Do not expose the product to the following conditions to avoid deformation, discoloration or major damage:

Direct sunlight, extreme temperature or humidity, excessively dusty or dirty place, strong vibration or shock, strong magnetic fields.

 NOTE

**Cleaning**

Clean the product only with a soft, dry cloth. Do not use paint thinners, solvents, cleaning fluids or chemically impregnated wipes.

 NOTE

**Handling**

Do not exert excessive force on controls such as switches, knobs, buttons, mounting screws. Do not insert paper, metal or other objects inside. In this case, unplug the power adapter/power cord from the power outlet. Then have the device checked by qualified service personnel.


© 2021

This manual is protected by copyright. Copying or reprinting, even in excerpts, is only permitted with the consent of Musikhaus Kirstein GmbH. The same applies to the reproduction or copying of images, even in modified form.

## Content

1. User interface and basic operation .....	5
2. Rear connections and battery operation.....	7
3. Special functions.....	8
4. Technical data .....	9
5. Appendix .....	10

## 1. User interface and basic operation

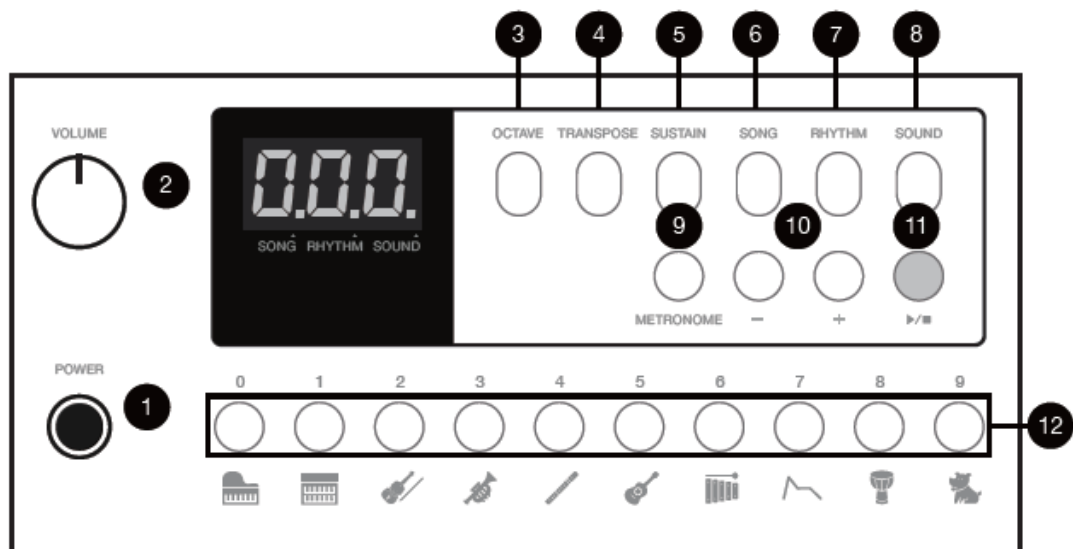

Press the POWER "1" button to turn the power on or off.

Note: To save energy, the device will turn off automatically after 30 minutes of non-use. You can adjust or turn off the power saving function in the function menu.

Turn the VOLUME knob "2" clockwise to increase the output volume or counterclockwise to decrease it.

Press the OCTAVE "3" button and use the + or - "10" buttons to adjust the octave range of the keyboard.

Press the TRANPOSE "4" button and use the + or - "10" buttons to transpose up or down in semitone steps.

Press the SUSTAIN "5" button to turn the sustain function on or off.

Press the SONG "6" button to enter the song selection mode and use the + or - "10" buttons to scroll through the songs.

Press the RHYTHM "7" button to enter the rhythm selection mode and use the + or - "10" buttons to scroll through the rhythms.

Press the SOUND "8" button to enter the sound selection mode and use the + or - "10" buttons to scroll through the sounds.

Press the METRONOME "9" button to start or stop the metronome.

Press the Play/Stop "11" button to start or stop the currently selected rhythm or song.


The sounds of the keyboard are arranged in ten categories for easy access. These categories can be selected directly in sound mode by pressing the respective number/symbol button "12". By pressing the button several times, you move through the sound selection of the respective category. The symbols of the number/symbol buttons "12" stand for the following categories:



In rhythm or song mode, the number/symbol "12" buttons operate as number input keys, giving you direct access to the desired rhythm or song.

Note: If you enter a one- or two-digit number, wait a few seconds after entering it until it is accepted.

## 2. Rear connections and battery operation

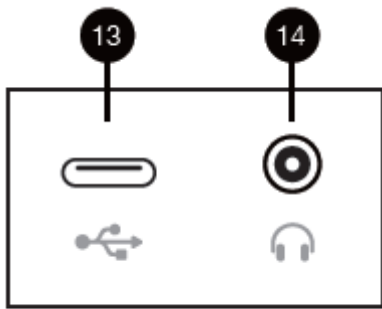


The USB-C socket "13" is used for MIDI data transmission to a PC and/or for power supply.

Connect this jack to any 5V (min. 500mA) USB interface such as a PC USB slot or USB power supply using the supplied USB cable to power the instrument. Connect this jack to your PC using the included USB cable to transfer MIDI data. No external driver is required for this, but a MIDI-capable APP (not included) is required.

Use the 3.5mm headphone jack "14" to connect the device to headphones or an external amplifier system. The internal speaker is deactivated in this case.


Note: Please be aware that too high volume or too long use of headphones can cause hearing damage. Before plugging in headphones, turn the volume control to the minimum volume and then gently select the desired level.

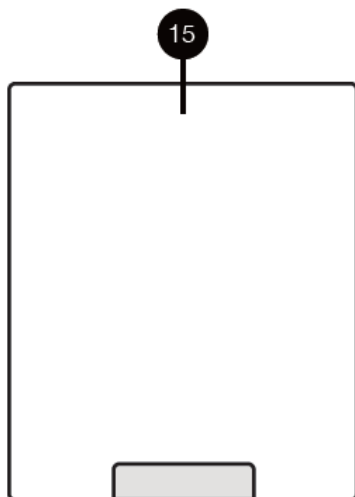

The instrument can be operated with 4 x 1.5V AA batteries. Make sure that the battery compartment "15" on the underside of the instrument is always securely closed. Observe the correct polarity when inserting the batteries. If you do not use the instrument for a longer period of time, please remove the batteries.

### 3. Special functions

Press and hold the three lowest keys of the keyboard simultaneously to enter the function mode. The display shows "En9". Now press the key assigned to the desired function (see graphic) and then release all four keys again. The display now shows the set value of the respective function. Change this using the - and + buttons. The instrument switches back to standard mode automatically after approx. 3 seconds.

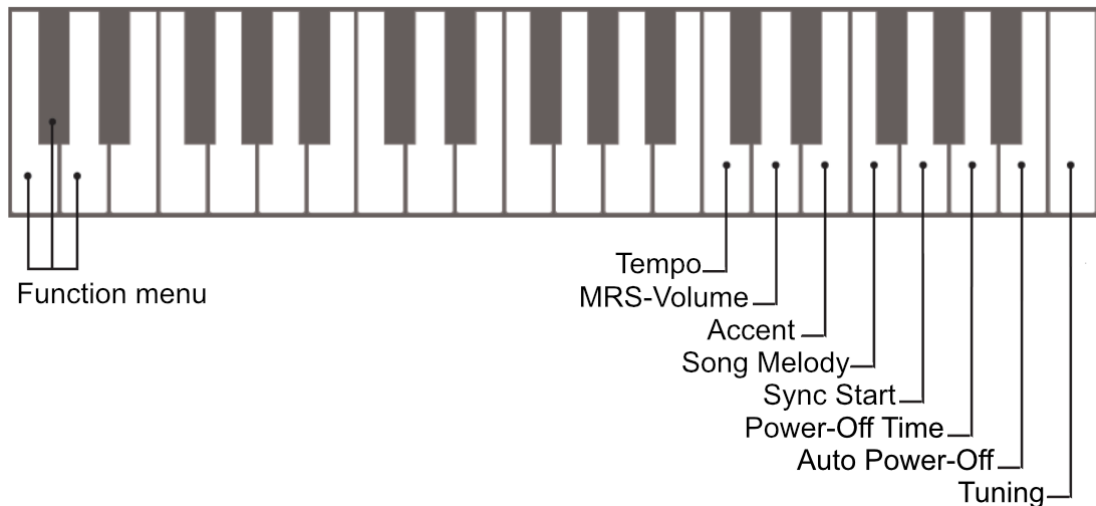

Function	Value	Functional description
Tempo	30 - 280 BPM	Select the tempo for the metronome, rhythm and song playback here.
MRS-Volume	0 - 15	Select the proportional volume for the metronome, rhythm and song playback here.
Accent	0 - 16	Select an accent for the metronome playback here.
Song Melody	On, off	Switch the main melody of the song playback on or off here. Use this function to practice the melody voice of the stored songs and play them yourself.
Sync Start	On, off	Activate or deactivate the Sync Start function here. If Sync Start is activated, the rhythm playback starts simultaneously to your melody play.
Power-Off Time	5, 10, 15, 30, 60, 120 min.	Select the response time of the Auto Power-Off function here.

Auto Power-Off	On, off	Activate or deactivate the Auto Power-Off function here.
Tuning	-50 - +50 cents	Use this function to adjust the tuning of the instrument up or down in cent steps.

#### 4. Technical data

Item name	Classic Cantabile MINI 37
Keyboard	37 mini keys
Display	LED
Polyphony	32
Sound / Rhythm / Song	100 / 100 / 30
Power supply	USB-C 5V/500mA or 4x 1.5V AA
Amplifier power	2W
Dimensions (WxDxH in mm)	490 x 185 x 61
Weight (kg)	0,99

## 5. Appendix

Sound List	
<b>PIANO</b>	
0	Acoustic Grand Piano
1	Bright Acoustic Piano
2	Honky-tonk Piano
3	Chorused Piano
4	Harpichord
5	Clavichord
6	Metal Piano
<b>ORGAN</b>	
7	Hammond Organ
8	Percussive Organ
9	Church Organ
10	Reed Organ
11	Accordian
12	Harmonica
<b>STRINGS</b>	
13	Violin
14	Viola
15	Cello
16	Contrabass
17	Pizzicato Strings
18	Orchestral Harp
19	Electronic String Ensemble
<b>BRASS</b>	
20	Trumpet
21	Trombone
22	Tuba
23	Muted Trumpet
24	French Horn
25	Synth Brass 1
<b>WOODWIND</b>	
26	Sax
27	Oboe

28	English Horn
29	Bassoon
30	Clarinet
31	Piccolo
32	Flute
33	Bottle Blow
34	Ocarina
35	Bass Oboe
<b>GUITAR</b>	
36	Acoustic Guitar (nylon)
37	Acoustic Guitar (steel)
38	Electric Guitar (jazz)
39	Electric Guitar (clean)
40	Overdriven Guitar
41	Guitar Harmonics
42	Acoustic Bass
43	Electric Bass (finger)
44	Electric Bass (pick)
45	Fretless Bass
46	Slap Bass 1
47	Slap Bass 2
48	Synth Bass 1
49	Synth Bass 2
<b>MALLET</b>	
50	Celesta
51	Glockenspiel
52	Music box
53	Vibraphone
54	Marimba
55	Xylophone
56	Tubular Bells
57	Tinkle Bell
58	Agogo
59	Woodblock

SYNTH	
60	Choir Aahs
61	Voice Oohs
62	Lead 1
63	Lead 2
64	Pad 1
65	Pad 2
66	Lead 3
67	Psychedelic Synth Lead
68	Vibraphone Synth Lead
69	Marimba Synth Lead
70	Wind FX
71	Clarinet FX
72	Crystal FX
73	Environmental Lead
74	Orchestra Lead
75	Bass Lead
76	East Nation Pad
<b>WORLD</b>	
77	Dulcimer
78	Shakuhachi
79	Sitar
80	Banjo
81	Shamisen
82	Koto
83	Kalimba
84	Bagpipe
85	Shanai
86	Taiko Drum
<b>SFX</b>	
87	Dog
88	Cat
89	Cow
90	Horse

91	Bird Tweet
92	Orchestra Hit
93	Rain
94	Thunder
95	Seashore
96	Telephone Ring
97	Helicopter
98	Applause
99	Gunshot

Rhythm list	
<b>8 BEAT</b>	
0	8 Beat 1
1	8 Beat 2
2	8 Beat 3
3	8 Beat 4
4	Dance
5	Rock Dance
<b>16 BEAT</b>	
6	16 Beat 1
7	16 Beat 2
8	16 Beat 3
9	16 Beat 4
10	16 Beat 5
11	16 Beat 6
12	16 Beat 7
13	16 Accent 1
14	16 Accent 2
15	16 Ballad 1
16	16 Ballad 2
17	16 Funk
18	16 Ride
19	16 Rock 1
20	16 Rock 2
21	16 Rock 3
22	Funk
23	Heavy Ballad
24	Power Funk 1
25	R&B 1
26	R&B 2
27	R&B 3
<b>ETHNIC</b>	
28	Bolero
29	Brit Rhumba 1
30	Brit Rhumba 2
31	Calypso

32	Ethnic Rock
33	Jorpo
34	Lambada
35	Mambo 1
36	Mambo 2
37	March 1
38	March 2
39	Merengue 1
40	Oriental 1
41	Oriental 2
42	Polka
43	Power Polka
44	Rhumba 1
45	Rhumba 2
46	Tango
<b>JAZZ</b>	
47	Jazz Ride 1
48	Jazz Ride 2
49	Jazz Ride 3
50	Jazz Shuffle 1
51	Jazz Shuffle 2
52	Jazz Waltz 1
53	Jazz Waltz 2
<b>LATIN</b>	
54	8 Latin
55	16 Latin 1
56	16 Latin 2
57	16 Latin 3
58	16 Latin 4
59	16 Latin 5
60	Bossa 1
61	Bossa 2
62	Heavy Latin 1
63	Heavy Latin 2
64	Heavy Latin 3
65	Heavy Latin 4

66	Heavy Latin 5
67	Pop Samba 1
68	Power Latin 1
69	Power Samba 1
70	Power Samba 2
71	Power Samba 3
72	Rock Latin 1
73	Rock Latin 2
74	Salsa
75	Samba
76	Soft Bossa
<b>SHUFFLE</b>	
77	6/8 Beat
78	6/8 Rock
79	Shuffle 1
80	Shuffle 2
81	Shuffle 3
82	Shuffle 4
83	Chamber Pop
84	Ethnic Shuffle 1
85	Ethnic Shuffle 2
86	Ethnic Shuffle 3
87	Ethnic Shuffle 4
88	Ethnic Shuffle 5
89	Latin Shuffle
<b>TRIBAL</b>	
90	8 Tribal
91	16 Tribal 1
92	16 Tribal 2
93	16 Tribal 3
94	16 Tribal 4
95	16 Tribal 5
<b>WALTZ</b>	
96	Waltz Ride
97	Power Waltz 1
98	Power Waltz 2
99	Power Waltz 3

Song List	
0	Turkish March
1	Red River Valley
2	American Patrol
3	Susanna
4	Mozart Piano Sonata
5	Soprani Smile Polka
6	Jingle Bells
7	Radetzky March
8	Mozart Symphony No. 40
9	Clap Your Hands
10	Fur Elise
11	Katryusha
12	Minuet in G Major
13	Espana Cani
14	Serenade
15	Yankee Doodle
16	Rhythm of the Rain
17	Frosty the Snowman
18	Blue the Danube
19	Little Brown Jig
20	Babylon River
21	Polly Wolly Doodle
22	Long Ago
23	Christmas Eve
24	Hungarian Dance
25	Fountain
26	Mary Had a Little Lamb
27	Music Box Dancer
28	Spring of the Four Seasons
29	Destinies

# WEEE Declaration

## (Waste of Electrical and Electronic Equipment)

Your product has been designed and manufactured with high quality materials and components that can be recycled and reused.

This symbol means that electrical and electronic equipment must be disposed of separately from household waste at the end of its useful life.

Please dispose of this device at your local municipal collection point or recycling center.

Please help preserve the environment in which we live.



Technical changes and changes in appearance are reserved.

All information is correct at the time of going to press.

Musikhaus Kirstein GmbH does not assume any liability for the correctness and completeness of the descriptions, illustrations and information contained therein.

Colors and specifications shown may vary slightly from the product.

Musikhaus Kirstein GmbH - Products are only available through authorized dealers.

Distributors and dealers are not authorized agents of Musikhaus Kirstein GmbH and have no authority to legally bind Musikhaus Kirstein GmbH in any way, whether expressly or by conclusive action.

 **KIRSTEIN.de**

**Musikhaus Kirstein GmbH**

**Bernbeurener Str. 11**

**86956 Schongau - Germany**

**Phone: 0049-8861-909494-0**

**Fax: 0049-8861-909494-19**

