




Sicherheitshinweise: Vermeiden Sie Kontakt mit Feuchtigkeit und Wasser sowie Hitze. Achten Sie auf ausreichend Belüftung, um Überhitzung zu vermeiden. Verwenden Sie nur das mitgelieferte Zubehör und Ladekabel. Verwenden Sie das Gerät nicht in der Nähe von leicht entzündlichen Materialien. Dauerhafte Vibration kann das Gerät beschädigen. Wenn Sie das Gerät für längere Zeit nicht benutzen, schalten Sie es ab und trennen Sie die Stromversorgung. Wenn Probleme auftreten, öffnen Sie das Gerät nicht und lassen Sie alle eventuellen Reparaturen von Fachpersonal ausführen. Öffnen Sie das Gerät nicht (Gefahr eines elektrischen Schlages). Defekte Akkus entsorgen Sie bitte nicht im Hausmüll, sondern bei gesonderten Sammelstellen für Altbatterien und Akkus.

Erstes Einschalten / Stromversorgung: Das Gerät arbeitet mit einem wiederaufladbaren Lithium-Ionen-Akku. Setzen Sie den Akku in das rückseitige Akku-Fach ein, achten Sie auf die Polung. Verbinden Sie das mitgelieferte USB-Ladekabel mit einem USB-Netzteil (nicht im Lieferumfang) oder einem Computer und der USB-C-Lade-Buchse. Der Akku wird geladen, das Gerät kann während des Ladevorgangs benutzt werden. Wenn Sie den BS-20 eingeschaltet haben leuchtet während des Ladevorgangs die Akku-Anzeige am Display rot, diese leuchtet bei verbundenem Ladekabel blau, wenn der Akku vollgeladen ist. Im Vollgeladenen Zustand kann das Gerät ca. 2,5h betrieben werden. Die Betriebszeit ist abhängig von der Gesamtlautstärke und Klangeinstellungen. Musik mit hohem Basslevel benötigt mehr Energie. Bitte laden Sie das Gerät vor dem ersten Einschalten komplett auf, laden Sie das Gerät vollständig, wenn es längere Zeit nicht benutzt wurde oder komplett geleert wurde. Dies erhöht die Lebensdauer des Akkus. Mit dem An/Aus-Schalter (On/Off) am Gerät schalten Sie den BS-20 ein. Die Batterie der Fernbedienung ist durch einen Plastikstreifen geschützt, entfernen Sie diesen.

Bedienung: Der McGrey BS-20 arbeitet in 4 Betriebsarten (Modes) FM-Radio, USB/SD-Player, Bluetooth BT Player und AUX-In. Die Bedienung des Geräts erfolgt über die Tasten am Player oder wahlweise mit der IR-Fernbedienung (richten Sie diese direkt auf die Empfangsdiode am Player). Mit der Taste „MODE“ schalten Sie durch die Betriebsarten. Am Display wird die jeweilig aktive Betriebsart angezeigt. Ist z.B. keine USB oder SD-Karte gesteckt, wird dieser Mode übersprungen. Die Gesamtlautstärke des BS-20 stellen Sie über den Drehregler (Masterregler) an der Front ein VOL (-) bis VOL (+).

Klangregelung: Der McGrey BS-20 hat 6 vordefinierte Equalizer-Einstellungen, mit welchen Sie den Klang anpassen können. Drücken Sie hierzu am Gerät oder Fernbedienung mehrmals die EQ-Taste, am Display erscheinen die Einstellungen „No eq; Pop; Rock; Jazz; Classic; Cut“

Lautstärkeregelung: Wenn Sie die Lautstärke über die Tasten (+) und (-) an der IR-Fernbedienung regeln, erscheint die Einstellung in 16 Stufen V00 bis V15 am Display. **Achtung:** die Lautstärkeregelung von BT-Player, Drehregler und Tasten am Gerät sowie über Fernbedienung überlagern sich. Sollte kein Ton kommen überprüfen Sie ob eine der Einstellungen auf „Null“ ist. Mit der „MUTE“-Taste  an der Fernbedienung schalten Sie das Gerät stumm.

Bluetooth BT: drücken Sie die MODE-Taste bis „bt“ am Display erscheint. Das Gerät ist bereit für BT-Kopplung, die LED blinkt. Schalten Sie die BT-Funktion an Ihrem BT-Player (Smartphone/Tablet/etc.) ein und scannen Sie nach BT-Geräten (benutzen Sie notfalls das Handbuch Ihres BT-Players, falls Sie Probleme haben). Der BS-20 meldet sich mit „BS-20“. Bauen Sie eine Verbindung auf und aktivieren Sie das Abspielen Ihrer Musikdateien. Die Bedienfunktionen Start/Stop (>II), Next (>>I), Prev (I<<) und Lautstärke sind von Ihrem BT-Player, von den Tasten am Gerät und auch auf der IR-Fernsteuerung aktiv.

USB/SD Player: stecken Sie eine SD-Karte oder USB-Stick mit MP3-Dateien in den Slot an der Gerätefront. Drücken Sie die MODE-Taste, bis „USB“ oder „SD“ am Display erscheint. Mit den Tasten Start/Stop (>II), Next (>>I), Prev (I<<) am Gerät oder Fernbedienung steuern Sie die Wiedergabe. Mit den numerischen Tasten 1-9 an der Fernbedienung können Sie die Songs direkt anwählen. Mit der Taste Repeat können Sie die Wiederholungsfunktion „ALL“ (alle Songs) oder „ONE“ (dieser Song) aktivieren.

FM-Radio: drücken Sie die MODE-Taste, bis „FM“ und die Frequenzanzeige am Display erscheint. Mit der Taste START/STOP (>II) starten Sie den Sendersuchlauf. Die gefundenen Sender werden auf den internen Speicherplätzen P01 bis PXX abgespeichert. Ist der Sendersuchlauf beendet können Sie mit den NEXT/PREV Tasten die Stationen abrufen. Mit den numerischen Tasten 1-9 der Fernbedienung können Sie ebenfalls die Stationen abrufen.


AUX In: drücken Sie die MODE-Taste bis „AUX“ am Display erscheint. Mit dem mitgelieferten Stereo-Audiokabel (3.5mm Klinke) können Sie ein externes Gerät an die AUX In Buchse anschließen. Die Abspielsteuerung erfolgt über das angeschlossene Gerät.

VEREINFACHTE EU-KONFORMITÄTSERKLÄRUNG

Hiermit erklärt Musikhaus Kirstein GmbH, dass der Funkanlagentyp [McGrey BS-20] der Richtlinie 2014/53/EU entspricht.

Der vollständige Text der EU-Konformitätserklärung ist unter der folgenden Internetadresse verfügbar:

http://www.kirstein.de/docs/Konformitaetserklaerung/CE_Konformitaetserklaerung_00114548.pdf

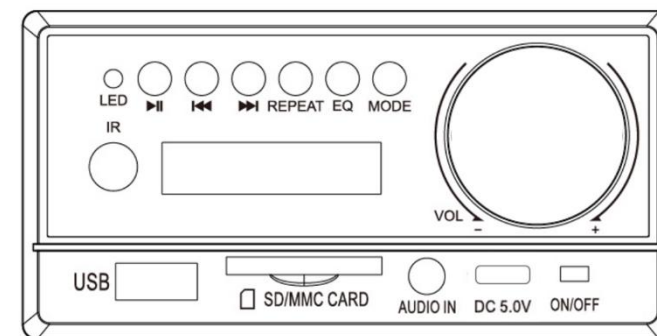




Precautions: Avoid contact with moisture, water and heat. Ensure sufficient ventilation to prevent overheating. Only use the accessories and charging cable supplied. Do not use the device in the vicinity of highly flammable materials. Continuous vibration can damage the device. If you are not going to use the device for an extended period of time, switch it off and disconnect the power supply. If problems occur, do not open the appliance and have any repairs carried out by qualified personnel. Do not open the appliance (risk of electric shock). Please do not dispose of defective rechargeable batteries with household waste, but at separate collection points for used batteries and rechargeable batteries.

Power On / Charging: The device works with a rechargeable lithium-ion battery. Insert the battery into the battery compartment on the back, paying attention to the polarity. Connect the supplied USB charging cable to a USB power adapter (not included) or a computer and the USB-C charging socket. The battery is charged and the device can be used during the charging process. If you have switched on the BS-20, the battery indicator on the display lights up red during the charging process; it lights up blue when the charging cable is connected and the battery is fully charged. When fully charged, the device can be operated for approx. 2.5 hours. The operating time depends on the overall volume and sound settings. Music with a high bass level requires more energy. Please fully charge the device before switching it on for the first time. Fully charge the device if it has not been used for a long time or has been completely emptied. This increases the life of the battery. Use the On/Off switch on the device to switch the BS-20 on. The remote control battery is protected by a plastic strip, remove this.

Operation: The McGrey BS-20 works in 4 operating modes: FM radio, USB/SD player, Bluetooth BT player and AUX-in. The device is operated using the buttons on the player or optionally with the IR remote control (point it directly at the receiver diode on the player). Use the "MODE" button to switch through the operating modes. The active operating mode is shown on the display. If, for example, no USB or SD card is inserted, this mode is skipped. The overall volume of the BS-20 is set using the rotary control (master control) on the front VOL (-) to VOL (+).

Equalization: The McGrey BS-20 has 6 predefined equalizer settings with which you can adjust the sound. To do this, press the EQ button on the device or remote control several times; the settings "**No eq; Pop; Rock; Jazz; Classic; Cut**" appear on the display

Volume control: If you adjust the volume using the (+) and (-) buttons on the IR remote control, the setting appears on the display in 16 levels V00 to V15. Attention: the volume control of the BT player, rotary control and buttons on the device and via the remote control overlap. If there is no sound, check whether one of the settings is set to "zero". Use the "MUTE" button on the remote control  to mute the device.

Bluetooth BT: Press the MODE button until "**bt**" appears on the display. The device is ready for BT pairing, the LED flashes. Switch on the BT function on your BT player (smartphone/tablet/etc.) and scan for BT devices (if necessary, use the manual for your BT player if you have problems). The BS-20 will respond with ""**BS-20**". Establish a connection and activate the playback of your music files. The operating functions Start/Stop (>||), Next (>>|), Prev (|<<) and Volume are active from your BT player, from the buttons on the device and also on the IR remote control.

USB/SD player: Insert an SD card or USB stick with MP3 files into the slot on the front of the device. Press the MODE button until "**USB**" or "**SD**" appears on the display. Use the Start/Stop (>||), Next (>>|), Prev (|<<) buttons on the device or remote control to control playback. You can use the numeric buttons 1-9 on the remote control to select the songs directly. Use the Repeat button to activate the repeat function "ALL" (all songs) or "ONE" (this song).

FM-Radio: Press the MODE button until "**FM**" and the frequency display appear on the display. Press the START/STOP button (>||) to start the station search. The stations found are stored in the internal memory locations **P01** to **PXX**. Once the station search is complete, you can call up the stations using the NEXT/PREV buttons. You can also call up the stations using the numeric buttons 1-9 on the remote control.


AUX In: Press the MODE button until "**AUX**" appears on the display. You can connect an external device to the AUX In socket using the supplied stereo audio cable (3.5 mm jack). Playback is controlled via the connected device.

SIMPLIFIED EU DECLARATION OF CONFORMITY

Herewith Musikhaus Kirstein GmbH declares that the radio equipment type [McGrey BS-20] complies with Directive 2014/53 / EU. The full text of the EU declaration of conformity is available at the following Internet address:

http://www.kirstein.de/docs/Konformitaetserklaerung/CE_Konformitaetserklaerung_00114548.pdf

Musikhaus Kirstein GmbH – Bernbeurener Str. 11 – 86956 Schongau - Germany - Telefon +49-8861-909494-0 – Mail info@kirstein.de

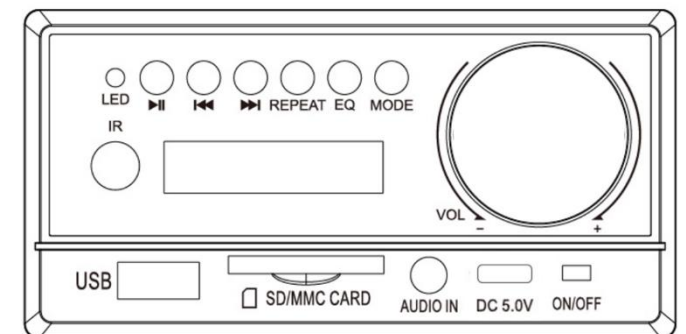

McGrey BS-20 Beachside Portable Speaker

Datenblatt / Data Sheet

Bezeichnung / Type	McGrey BS-20	Tonregelung / EQ	6 feste Presets / 6 fixed presets
ArtNr	00114548/00114549/00114550/00114551	Frequenzbereich / Frequency Response	150Hz – 20kHz
Farben / Colors	Grün/Green – Silber/Silver Blau/Blue – Rot/Red	Sensitivity	80dB
Eingänge / Inputs	AUX In 3.5mm stereo	Lautsprecher / Speaker	2 x 3" / 2 x 3W / 4 Ohm
Display	LCD	Verstärker / Amplifier	2 x 3W
UKW/FM Radio	Radio	Akku / Rechargeable Battery	BL-5C 1050mAh
Sender Speicher / Radio Stations	30	Ladekabel / Charging cable	USB Ladekabel / USB cable
MP3 Player	USB/SD card	Zubehör / Accessory	IR-Fernbedienung / IR-Remote Control
Bluetooth	BT 2.0 - Reichweite 10m	Abmessungen / Measurements	130mm (B/W) x 300mm (H) x 119mm (T/D)
Bluetooth Sendeleistung / Transmission Power	< 20mW	Gewicht / weight	0.9 kg
Bluetooth Version und Frequenz/Frequency	4.2 / 2402-2480 MHz		