

CXA61/81/81 Mk II

Manual Generated: 13/02/2025 - 10:54

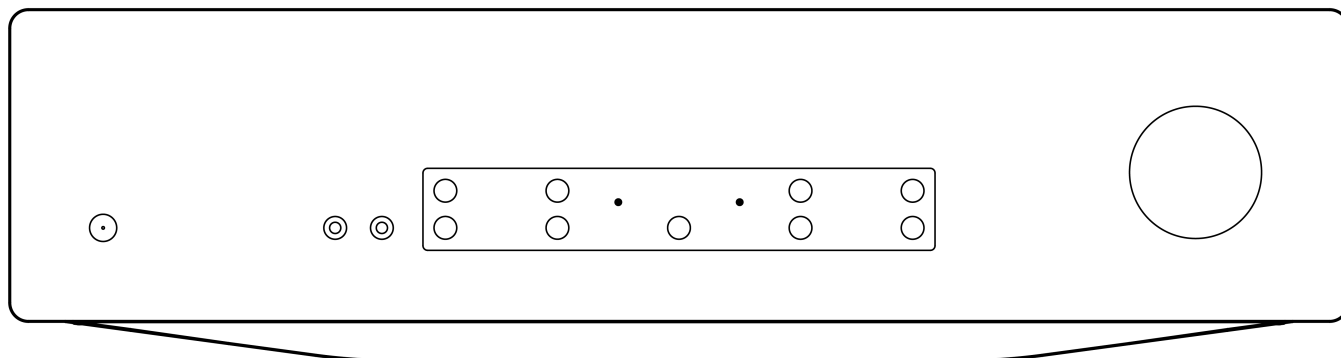


Table of Contents

CXA61/81/81 Mk II	3
Introduction	3
What's included with the CXA61/81?	4
Front panel controls	5
Rear panel connections	7
Remote control	10
Getting connected	11
Advanced connections	15
Setup menu	18
Bluetooth	20
Control Bus	22
CAP5	24
Troubleshooting	26
Technical specifications	27
Frequently Asked Questions (FAQ)	28

CXA61/81/81 Mk II

Last updated: February 13, 2025 10:38. Revision #14221



Users Manual

Introduction

Last updated: May 26, 2022 09:48. Revision #4895

This guide is designed to make installing and using this product as easy as possible. Information in this document has been carefully checked for accuracy at the time of printing; however, Cambridge Audio's policy is one of continuous improvement, therefore design and specifications are subject to change without prior notice.

This document contains proprietary information protected by copyright. All rights are reserved. No part of this manual may be reproduced by any mechanical, electronic or other means, in any form, without prior written permission of the manufacturer. All trademarks and registered trademarks are the property of their respective owners.

The Bluetooth® word mark and logos are registered trademarks owned by the Bluetooth SIG, Inc. and any use of such marks by Audio Partnership Plc is under license. Other trademarks and trade names are those of their respective owners.

Qualcomm is a trademark of Qualcomm Incorporated, registered in the United States and other countries, used with permission. aptX is a trademark of Qualcomm Technologies International, Ltd., registered in the United States and other countries, used with permission.

Qualcomm aptX is a product of Qualcomm Technologies International, Ltd


© Copyright Cambridge Audio Ltd

For upcoming news on future products, software updates and exclusive offers, make sure you register your product at <https://www.cambridgeaudio.com/register>

What's included with the CXA61/81?

Last updated: May 26, 2022 11:24. Revision #4894


Inside the box of your CXA you will receive:

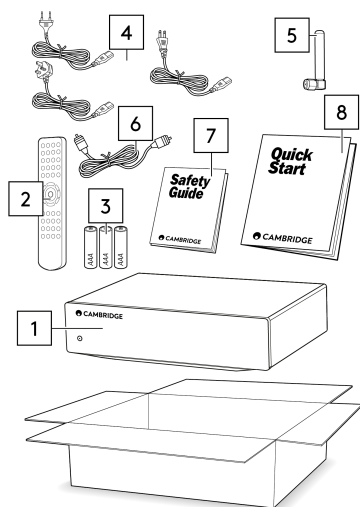

1. CXA Integrated Amplifier
2. Remote Control
3. 3 x AAA Batteries
4. UK power cord (5A fused) (Depending on which country the CXA61/81 was purchased in),
EU power cord (Depending on which country the CXA61/81 was purchased in),
CU power cord (Depending on which country the CXA61/81 was purchased in)
5. Bluetooth Antenna
6. Orange Control Bus Cable
7. Safety Guide
8. Quickstart Guide

Front panel controls

Last updated: June 14, 2022 01:19. Revision #4893

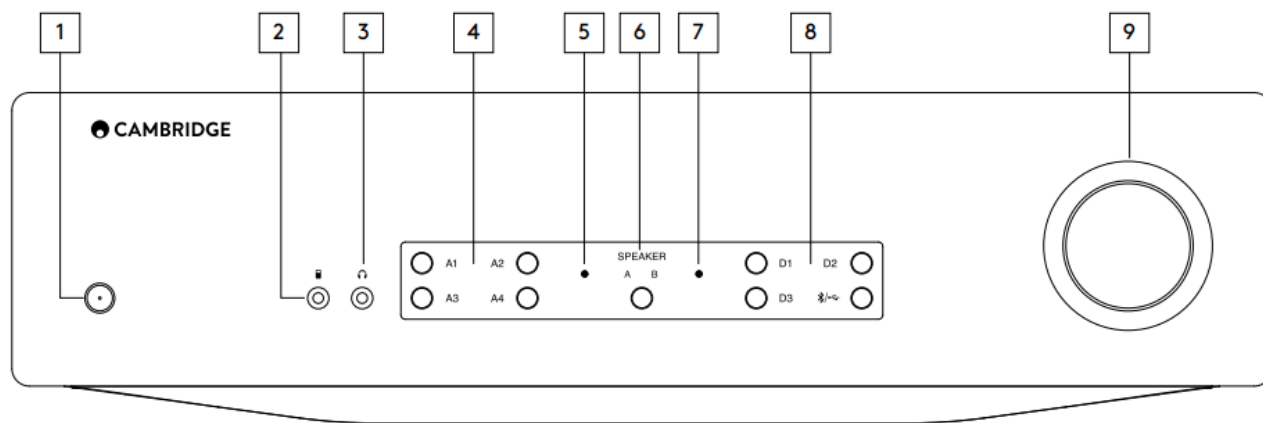

1. Standby/On - Switches the unit between Standby mode (indicated by dim power LED) and On (indicated by bright power LED). Standby mode is a low power mode (0.5 Watts). The unit should be left in Standby mode when not in use.

The CXA has Auto Power Down (APD) enabled by default, and the unit will automatically switch to standby after 20 minutes of inactivity. See the 'Setup menu' section for further details.

2. MP3 input (CXA61 only) - Allows you to connect a portable audio device, such as a smart phone, directly into the front of the unit using the 3.5mm stereo-jack.

Note: The MP3 input can only be selected when a jack is inserted. Plugging in a device into the jack socket automatically selects the MP3 input. With the jack inserted pressing the A4 button will toggle between A4 and MP3 inputs. The MP3 input is shown by A4 being lit orange.

3. Headphones - Allows for the connection of stereo headphones with a 3.5mm jack plug. Headphones with an impedance of between 8 and 600 ohms are recommended.

Note: Plugging in headphones will automatically mute the loudspeaker, pre-out, and sub outputs.

4. Analogue source select buttons - Push the appropriate input selection button to select the source you want.

Notes:

- On the CXA81, pressing the A1 input selection button will toggle between balanced and unbalanced. The balanced input is shown by A1 being lit orange, while the unbalanced input is shown by A1 being lit blue.
- There will be no sound from the amp if the correct input button isn't selected. If an audio source is connected to the balanced input, for example, ensure that the A1 input light is lit orange.

5. Protection indicator - See the 'CAP5' section for further details.

6. Speaker A/B - Press to scroll through the speaker sets connected to the loudspeaker terminals on the back panel (speaker sets A, B or A and B). This can be used for listening to an extra set of loudspeakers in another room. See the 'Connections' section for further details.

7. Mute indicator - The light will flash to show the outputs are muted.

8. Digital source select buttons - Push the appropriate input selection button to select the source that you wish to listen to.


Notes:

- Pressing the Bluetooth/USB button will toggle between the two inputs. The USB Audio is shown by the symbol being lit orange and the Bluetooth source is shown by the symbol being lit blue.
- There will be no sound from the amp if the correct input button isn't selected. If an audio source is connected to the USB Audio input, for example, ensure that the Bluetooth/USB button is lit orange.

9. Volume - Use to increase/decrease the level of the sound from the outputs of the amplifier. This control affects the level of all outputs.

Rear panel connections

Last updated: May 14, 2024 12:47. Revision #12775

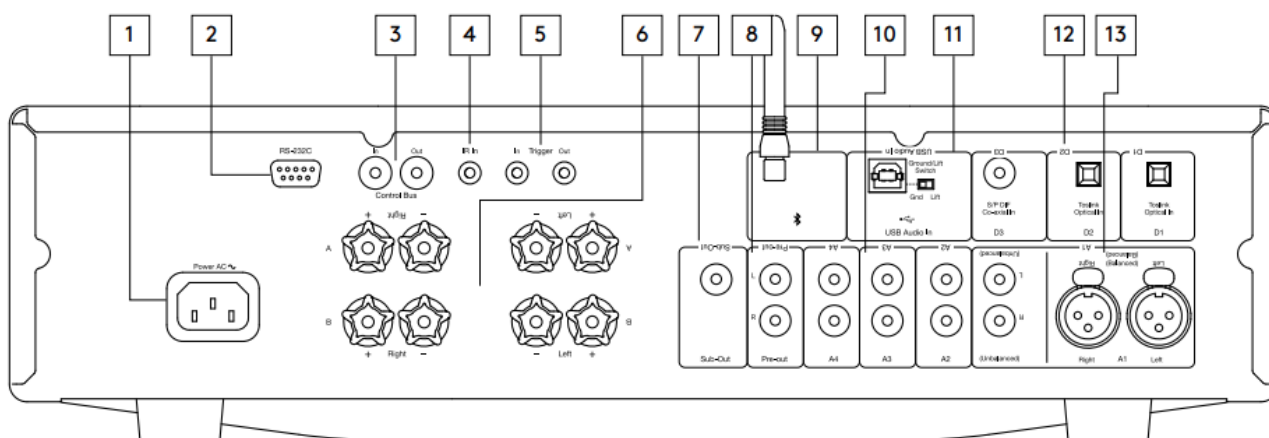

1. AC power socket - Once you have completed all connections to the amplifier, plug the AC power cable into an appropriate mains socket then switch on. Your amplifier is now ready for use.

2. RS232C - RS232 is a standard serial data communication protocol, which allows devices that support RS232 to communicate with each other as part of a home automation system.

Custom install control - a full protocol is available for the CXA on our website [here](#).

3. Control bus - RCA sockets used to send and receive power and volume commands from other connected CX Series products. For more information on the Control Bus, see 'Control Bus' section.

4. IR in - Allows modulated IR commands from an IR repeater or custom install systems to be received by the amplifier. Commands received by the IR In socket are not looped out of the Control Bus.


Note: The IR input doesn't provide any power, so any device connected to this input will need to have its own power source.

5. Trigger in/out - The CXA can be connected to the trigger control output of home automation equipment to control the power state of the CXA. The input level should be 12V.

The trigger out provides a continuous 12v, this is active while the CXA is powered on. This can be used to turn on other equipment that has a trigger in.

6. Speaker terminals

Note: When using a banana plug, make sure the speaker terminals are completely tightened before inserting the plug.

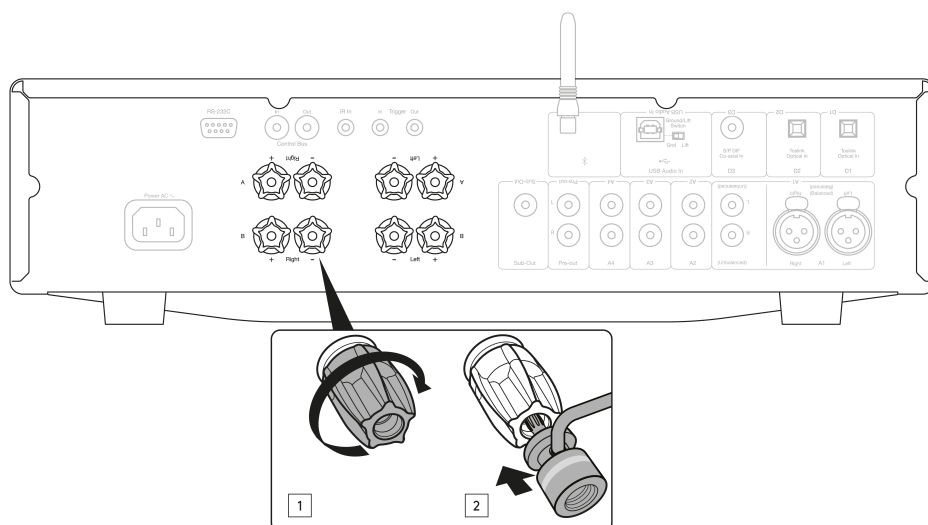

Two sets of loudspeaker terminals are available:

A (main loudspeaker terminals)

and

B (secondary loudspeaker terminals).

Connect the wires from your left channel loudspeaker to the left terminals on the CXA, and the wires from your right channel loudspeaker to the right terminals on the CXA.

Always ensure that the positive connection on the amplifier is connected to the positive connection on the speaker and the negative connection on the amplifier is connected to the negative connection on the speaker.

The Red terminal is the positive output.

The Black terminal is the negative output.

Care should be taken to ensure no stray strands of wire short the speaker outputs together. Please ensure that the loudspeaker terminals have been tightened completely to provide a good electrical connection.

It is possible for the sound quality to be affected if the screw terminals are loose.

Note: The speaker terminals will need to have the round pips removed before you can insert a banana plug into them.

7. Sub out - Connect to the input on an active subwoofer, if required.

Note: There is a low pass filter of approximately 2.3 kHz applied to the Sub Out, no frequencies above 2.3 kHz will be sent to a subwoofer connected to this output. This is so that there is minimal phase added by the CXA at the Sub Out frequencies.

The crossover frequency can be adjusted on the Subwoofer itself.

8. Pre-out - For connection to the unbalanced inputs of a power amplifier or active subwoofer.

Note: There is not a low pass filter applied to the Pre-Out, so the full frequency range will be sent to a subwoofer connected to the Pre-Out.

9. Bluetooth antenna - Used for Bluetooth audio streaming. See 'Bluetooth' section for details.

10. Analogue inputs (A1 Unbalanced, A2, A3 and A4) - Suitable for any 'line level' source equipment such as CD players, DAB or FM/AM tuners etc.

These inputs are for analogue audio signals only. They should not be connected to the digital output of a CD player or other digital devices.

Note: For the balanced XLR inputs, pin1 is ground, pin2 is positive and pin3 is negative.

11. USB audio in - A USB B type socket to enable the playback of audio from a computer running either Microsoft Windows or Apple Mac OS X operating systems. Some builds of Linux are also suitable.

Notes:

- Always use a high-quality USB connection cable certified as USB Hi-Speed. USB cable connections longer than 3m may result in inconsistent audio performance.
- Always turn the volume to minimum, switch to another input or turn the CXA off before plugging/unplugging cables to the USB input or whilst booting up/shutting down your PC/Mac.

Ground/Lift switch - The Ground/Lift switch enables the USB interface earth to connect or disconnect the CXA signal ground. Disconnecting (lifting) the earth can be useful if electronic hum is heard through the speakers when the USB input is selected. The switch should otherwise be left in the Ground position.

12. Digital inputs (D1, D2 AND D3) - TOSLINK and S/P DIF co-axial digital inputs.

Coaxial - Use a high quality 75 ohm digital RCA Phono interconnect cable (not one designed for normal audio use). This input is suitable for 16-24 bit content up to 192kHz.

TOSLINK optical - Use a high quality TOSLINK fibre optic interconnect cable designed specifically for audio use. This input is suitable for 16-24 bit content up to 96kHz (TOSLINK is not recommended at 192kHz sampling rates).

Note: To obtain the best results from your system we recommend using only high-quality Cambridge Audio interconnects. This will ensure that you hear your system as we designed it. Please ask your dealer for details.

13. A1 inputs

Note: Balanced (XLR) is available on the CXA81 only.

A1 inputs feature either unbalanced (phono/RCA) or balanced (XLR) connections. The balanced connection is the higher quality option and can reject noise and interference in the cable when used with other equipment that supports this function.

An XLR connector is wired Pin 1 - Ground; Pin 2 - Hot (in-phase); Pin 3 - Cold (phase-inverted).

Remote control

Last updated: July 12, 2022 01:13. Revision #5136

The CXA remote control handset duplicates the front panel control functions and is also able to control other CX series products. The supplied AAA batteries must be fitted before the remote control can be used. The handset buttons function as described below:

1. Brightness - Alters the brightness of the CXA display lights. There are two brightness levels and an option to switch off the backlight.

Note: When the CXA display lights are selected to be off, selecting any of the functions will briefly switch on the lights to show the change.

2. Mute - Press to mute or unmute the loudspeakers, pre-out, sub, and the headphone outputs.

The light will flash on the front of the unit to show the outputs are muted.


3. Standby/On - Switches the CXA between On and Standby mode.

4. Sources - Used to select the source inputs.

Note: For the CXA81, the A1 button has the double function of selecting the balanced or unbalanced A1 input, and will toggle between the two inputs when double pressing. The MP3 source can only be selected when there is a jack connected to the input.

5. Volume up/down - Volume level adjustment.

Note: If the remote control will not function, please check that the batteries have not expired, and that there is nothing blocking the front panel IR receiver.

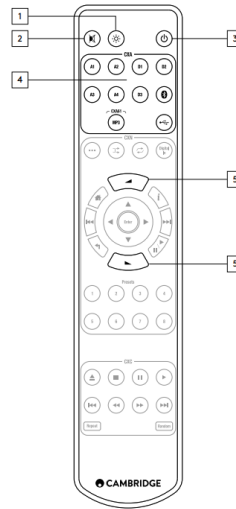


Getting connected

Last updated: November 11, 2022 10:55. Revision #7753


When designing our amplifiers, we include features that allow you to connect your system in various ways. The inclusion of features such as Pre-Out and Speaker B connections mean that you can flexibly configure your system depending on your requirements.

Note: When using a banana plug, make sure the speaker terminals are completely tightened before inserting the plug.

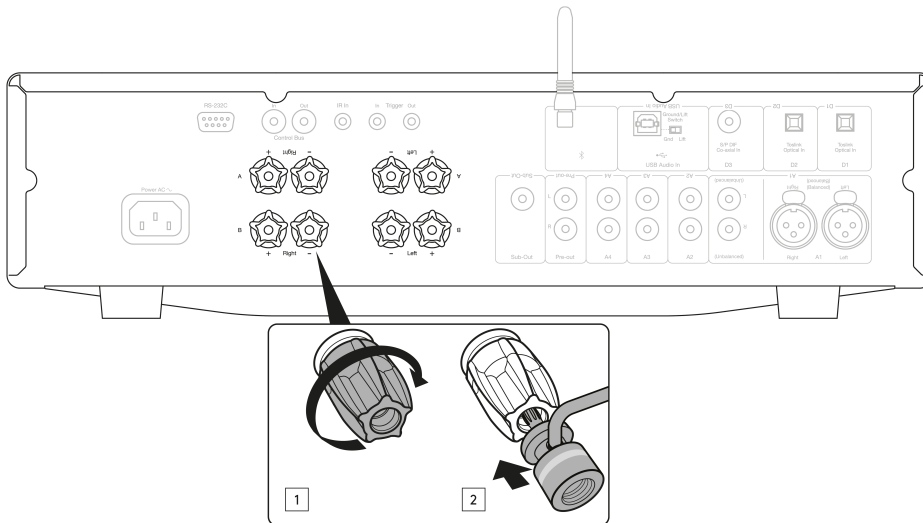


Basic connections

The diagram below shows the basic connection of your amplifier to a CD player using the D3 coaxial digital input source and a pair of loudspeakers.

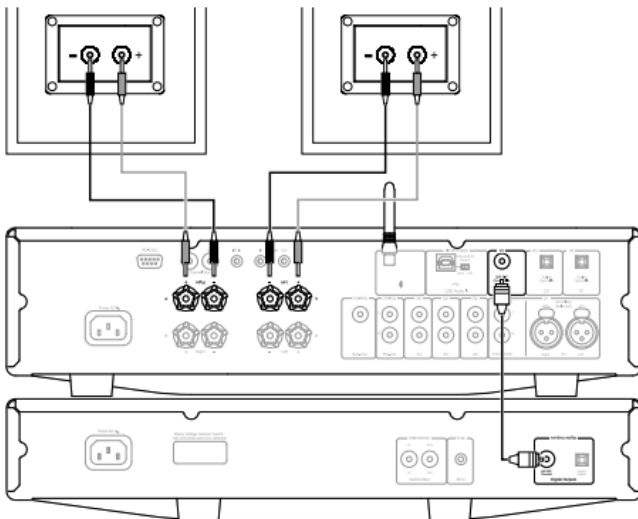


Speaker B connections

The Speaker B connections on the back of the amplifier allow for a second set of speakers to be used (i.e. speakers located in another room). The Speaker A/B button on the front panel scrolls through the selection of speaker A only, speaker B only, and speaker A and B together.

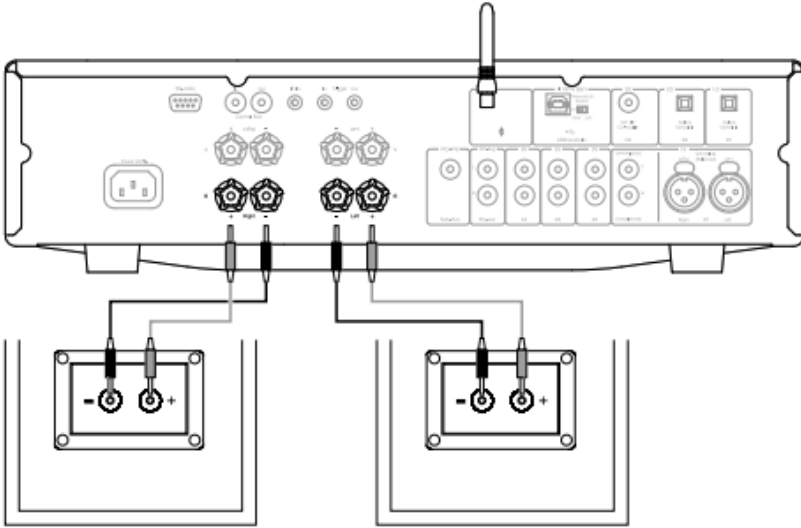


Sub out connections

The Sub Out is for connecting to the LFE/Sub input of an active subwoofer. The diagram below shows how to connect the amplifier to an active subwoofer via the LFE/Sub input on the subwoofer.

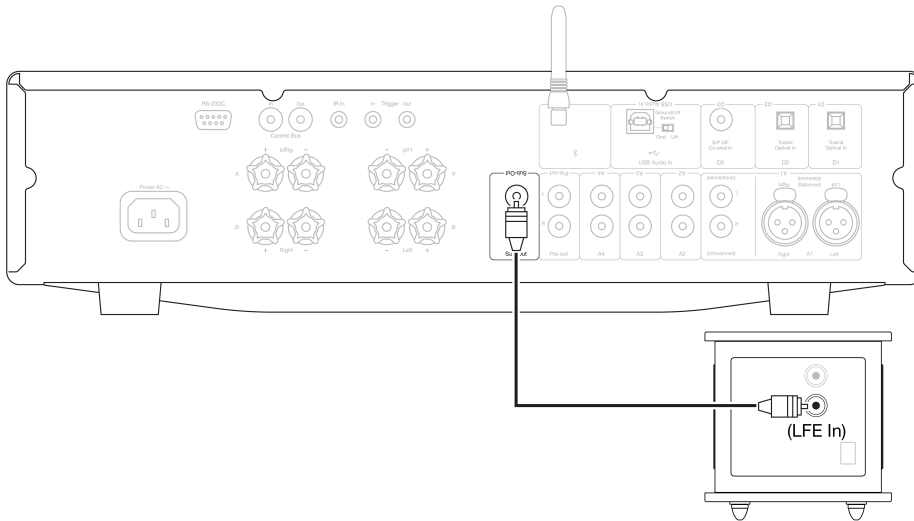


Preamp out connections

The Preamp Out sockets are for connecting to the input sockets of a power amplifier or active subwoofer. The diagram below shows how to connect the amplifier to an active subwoofer via the Line In inputs on the subwoofer.

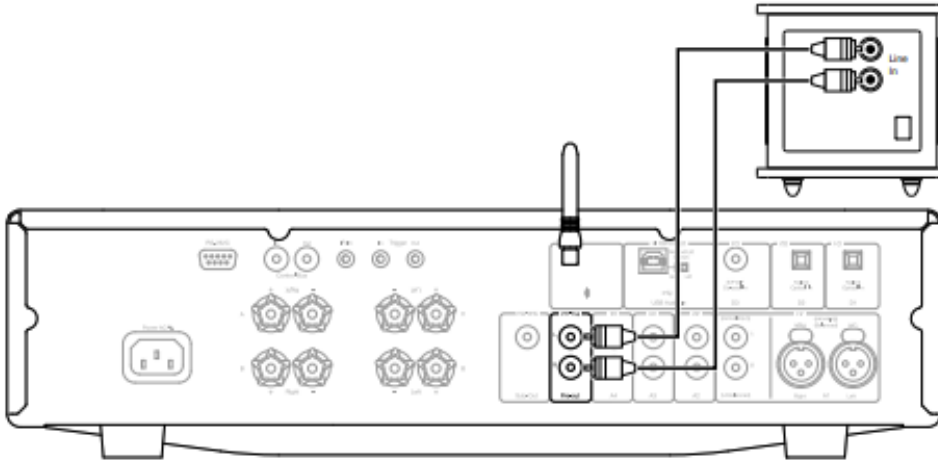

Balanced audio connections (CXA81 only)

The diagram below shows how to connect the CXA81 to the CXN Network player using the Balanced Audio inputs via three pin XLR connectors. The CXA81 can also be connected to non-Cambridge Audio sources with balanced outputs.

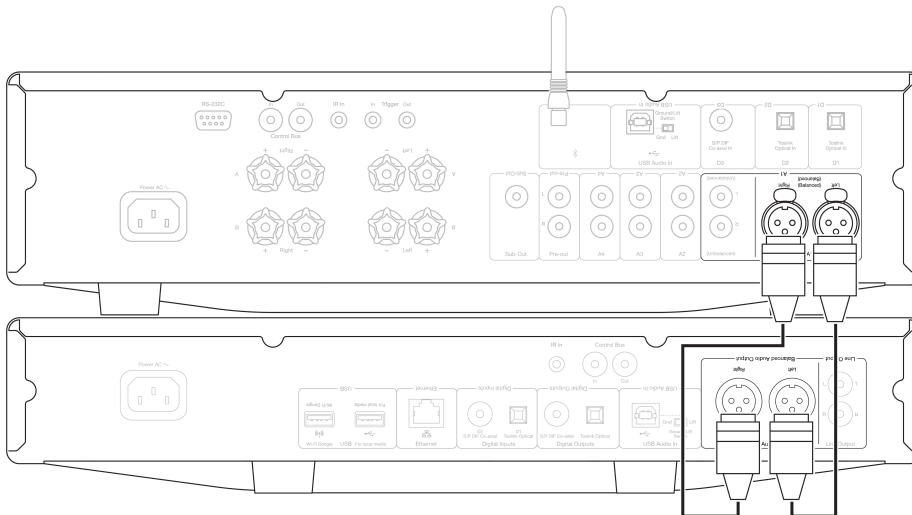

Balanced connections in an audio system are designed to reject electrical noise, from power wiring etc, and also the effects of noise currents flowing through ground connections. The basic principle of balanced interconnection is to get the signal you want by subtraction, using a three wire connection. One signal wire (the hot or in-phase) carries the normal signal, while other (the cold or phase-inverted) carries an inverted version. The balanced input senses the difference between the two lines to give the wanted signal. Any noise voltages that appear identically on both lines (these are called common-mode signals) are cancelled by the subtraction.

The CXA81 is designed to work at its highest performance when a balanced interconnect is used.

Note: To select the balanced input on the CXA81, press the A1 button twice on the front panel or on the remote control so that the A1 light on the front panel display lights up Orange. Repeatedly pressing the A1 button will toggle between balanced and unbalanced inputs.

Connecting a TV

A TV can be connected to one of the digital inputs on the CXA, as long as the TV has the required Optical or Coaxial output.

Ensure that the output audio settings on the TV are set to PCM or Stereo, as the CXA is only able to decode a Stereo signal.

Please also ensure that the digital input that the TV is connected to has been selected on the front panel of the CXA (D1, D2 or D3).

Enabling 'TV Mode' within the CXA:

Some Connected TVs will send an inconsistent sample rate to the CXA, that the DAC inside the amplifier is unable to process. This can result in audio dropouts and glitches. If this is the case with your CXA, 'TV Mode' will need to be enabled within the amplifier.

The serial number for your CXA61 and CXA81 will indicate whether or not 'TV Mode' is already pre-installed or whether this will require manual installation.

Pre-Installed (October 2020 Onwards):

The serial numbers for units that contain 'TV Mode' pre-installed are laid out as such; 'KW C11125 **7060** 0001'. If the third set of numbers are or are greater than **7060**, this indicates that your amplifier was manufactured after October 2020 and already has 'TV Mode' installed.

To enable 'TV mode' on Pre-Installed units:

1. Enter the Setup menu by putting the CXA in standby mode.
2. Whilst in Standby mode, press and hold the Speaker A/B button until the A/B lights flash alternatively and the sources A1-A4 light up.

See below source buttons for setup configuration:

Note: Button selected (on) is represented by Blue light.

A2 off - The CXA is set to the best digital input audio setting on input D2.

A2 on - The CXA is set to a more tolerant digital input setting for input D2 that should reduce the chance of having the signal intermittently drop.

3. To save the setup settings and exit the setup menu, press the Speaker A/B button.

Note: Pressing the Standby/On button while in the setup menu will exit this setup menu and will not save the setup settings.

Uninstalled (Pre October 2020):

If your CXA pre-exists the above stated serial number combination (the third set of numbers is lower than 7060), then please contact our support team at <https://www.cambridgeaudio.com/gbr/en/contact> and we will be able to provide you with instructions on how to perform this update manually.

Please note: Your TV will have to be connected to TOSLINK OPTICAL input D2 for TV Mode to work.


Advanced connections

Last updated: May 14, 2024 12:49. Revision #12784

USB audio connection

The CXA USB Audio input enables the playback of audio from Microsoft Windows or Apple Mac OS X personal computers (and some Linux builds).

When connected via a USB cable, the computer will identify the CXA as an audio device. Specifying the CXA in the computer's audio control panel, will enable it to play audio data either stored locally on the computer or streamed to the computer via a network or the internet.

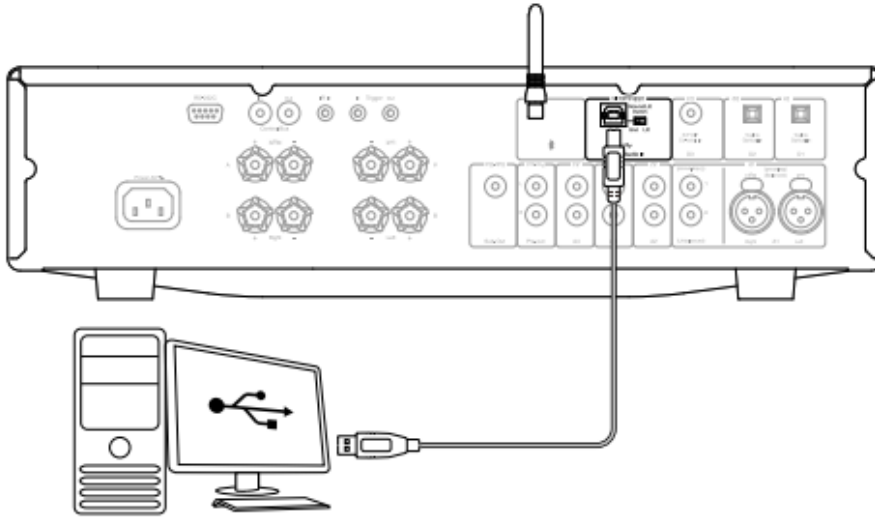

Important Note: Always turn the volume to minimum, switch to another input or turn the CXA off before plugging/unplugging cables to the USB input or whilst booting up/shutting down your PC/Mac.

Note: Always use a high quality USB 'A to B' cable certified as USB Hi-Speed. USB cable connections longer than 3m may result in inconsistent audio performance.

The CXA is both USB 2.0 (Hi-Speed) and USB 1.1 (Full-speed) USB port compatible.

It should also work with USB 3.0 ports where the PC will simply treat the CXA as if it were a USB 2.0 or 1.1 device.

The CXA supports two USB Audio protocols (not the same as the port types themselves):

- USB Audio Class 1 (which works over USB 1.1 ports and supports up to 24-bit/96kHz)
- USB Audio Class 2 (which requires a USB 2.0 port and can support up to 24-bit/384kHz)

The default configuration is USB Audio Class 2.

How to connect a Windows PC to the CXA via the USB audio input

With the CXA switched to USB Audio Class 1, the CXA will work with Windows 7 or above and accept audio up to 24-bit/96kHz.

With the CXA switched to USB Audio Class 2, the CXA needs the Cambridge Audio USB Audio 2.0 Driver to be loaded and can then accept up to 24-bit/384kHz.

1. With the CXA in Standby mode and/or the volume set to minimum, connect your PC to the CXA via a USB A to B cable.
2. For the highest quality play back, ensure that the CXA is set to USB 2.0 mode.

See the 'Setup Menu' section below for a guide on how to change USB mode. (The default configuration is USB Audio Class 2)

3. Download the Windows USB 2.0 driver.

See the "How do I install the latest USB Audio driver" section below, for a guide on how to download the USB driver.

4. Select the USB Audio source on the front panel of the CXA.

You can do this by pressing the Bluetooth/USB button, which will toggle between the two inputs. The USB Audio is shown by the symbol being lit orange.

5. Choose the CXA as your output speaker via your Windows PC's sound settings.


Note: To ensure you are getting the highest quality play back possible, ensure that the maximum sample rate for the CXA is selected, up to 384 kHz.

This can be done via your Windows PC by selecting 'Control Panel' > 'Sound' > 'Speaker Properties' > 'Advanced' Tab, and selecting the maximum sample rate and bit depth from the drop down menu.


How to install the latest USB audio driver for the CXA61/81

To install the latest USB Audio driver for your CXA61/81, please follow the steps below:


1. Download the correct driver for your Windows operating system from - <https://www.cambridgeaudio.com/gbr/en/driver-updates>
2. Unzip the downloaded folder, and double click on the application file to run the installer. This is highlighted in the image below.

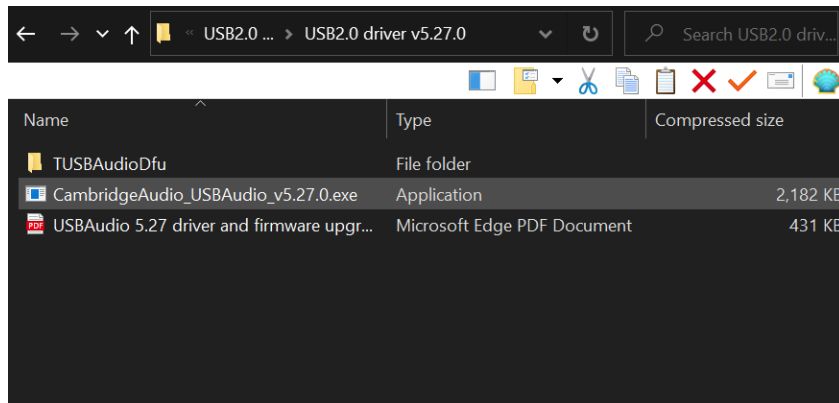


3. Run the installer, and follow the instructions.

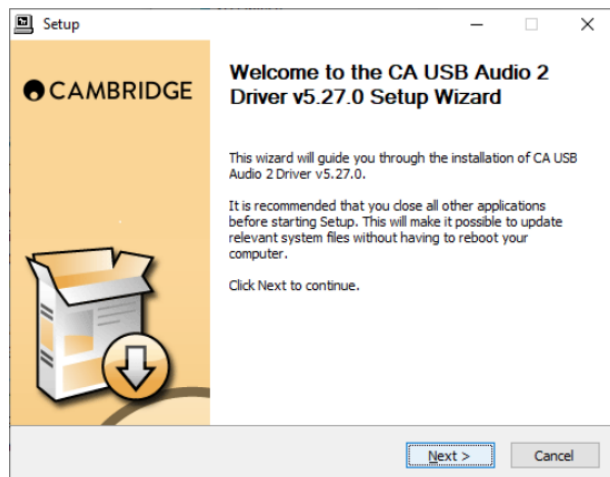

4. Allow the update to progress, click next, and then finish to complete the installation.

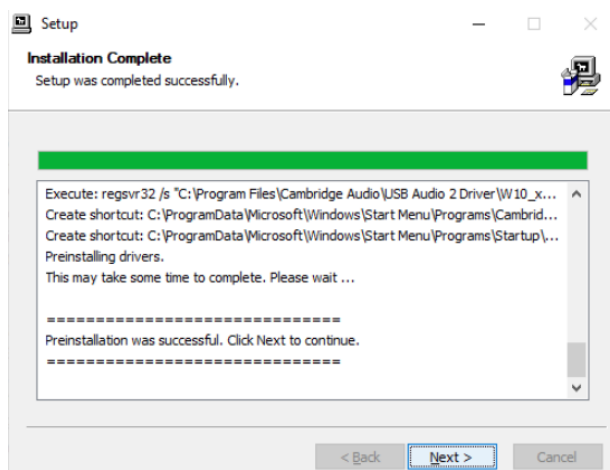

5. Confirm the installation by opening the CA Control Panel, and checking the driver version.

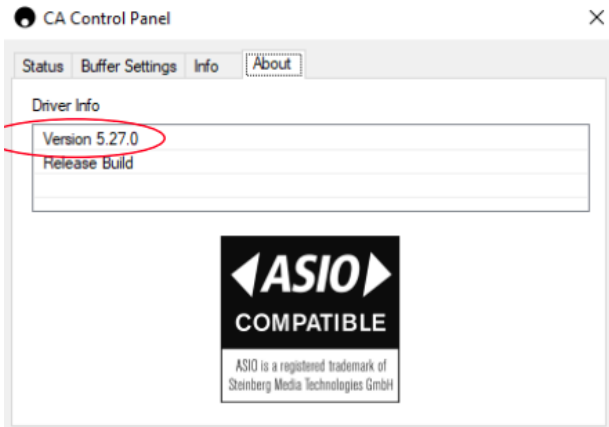

How to connect an Apple Mac to the CXA via the USB audio input

No extra drivers are required. With the CXA switched to USB Audio 1.0 the CXA will work with the native Mac OS-X 10.5 (Leopard) or above Audio 1.0 driver and accept audio up to 24-bit/96kHz.

With the CXA switched to USB Audio Class 2 the CXA works with the native Mac OS-X 10.5 (Leopard) or above Audio 2.0 driver and can accept audio up to 24-bit/384kHz.

1. With the CXA in Standby mode and/or the volume set to minimum, connect your Mac to the CXA via a USB A to B cable, or C to B cable depending on the USB ports on your Mac.
2. Select the USB Audio source on the front panel of the CXA.

You can do this by pressing the Bluetooth/USB button, which will toggle between the two inputs. The USB Audio is shown by the symbol being lit orange.

3. Choose the CXA as your output speaker via your Mac's sound settings

Note: To ensure you are getting the highest quality play back possible, ensure that the maximum sample rate for the CXA is selected, up to 384 kHz.

This can be done via your Mac by selecting 'Audio Midi Setup > 'Sound' > 'Speaker Properties' > 'Advanced' Tab, and selecting the maximum sample rate and bit depth from the drop down menu.

Use with Linux

For most builds of Linux with the CXA switched to USB Audio Class 1 the CXA will work with the native Audio 1.0 driver and accept audio up to 24-bit/96kHz.

Some very new builds of Linux are now supporting USB Audio Class 2 for which the CXA should be switched to Audio 2.0 to accept audio up to 24-bit/384kHz.

For both cases because Linux builds vary according to their creators choice of software components including drivers it is not possible to guarantee operation and Audio drivers may need to be loaded.

'Class drivers' as they are called for generic support of Audio Class 1.0 or Audio Class 2.0 devices may be available from the Linux community, we do not supply these.


Note: It is not possible to connect a USB drive or HDD directly to the CXA61/81 via the 'USB Audio' input. The 'USB Audio' input on the CXA61/81 will only support a direct connection with a PC or Mac. You will, however, be able to use one of our [network players](#) in combination with the CXA61/81 to do this.

Setup menu

Last updated: June 6, 2022 08:54. Revision #4888

To enter the setup menu

1. Put the CXA in standby mode.
2. Whilst in Standby mode, press and hold the Speaker A/B button until the A/B lights flash alternatively and the sources A1-A4 light up.

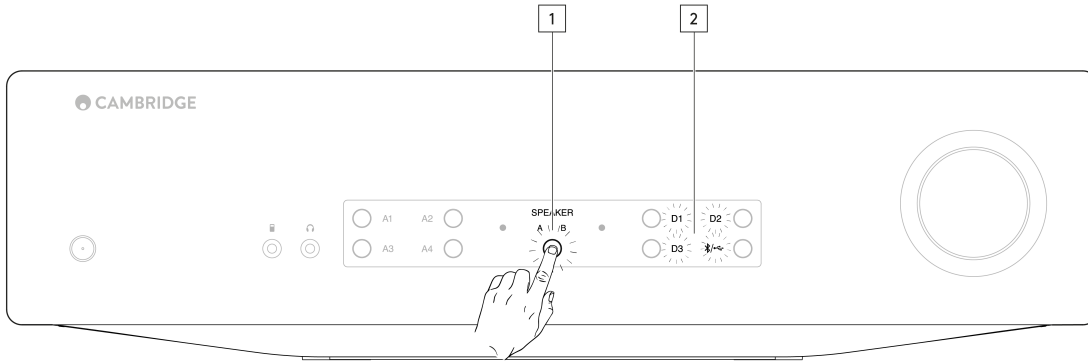

Note: Press the Speaker A/B button once to leave the Setup menu and place the CXA back into Standby mode.

See below source buttons for setup configuration:


Note: Button selected is represented by Blue light.

Auto power down (APD)

A1 off - Disables the APD (Auto power down) function.

A1 on - Sets the APD time to 20 minutes.

Note: Auto power down is a power down function that automatically switches the CXA into standby mode if there is no audio. The APD time represents the amount of time required for there to be no audio before the CXA is automatically put into the standby mode.

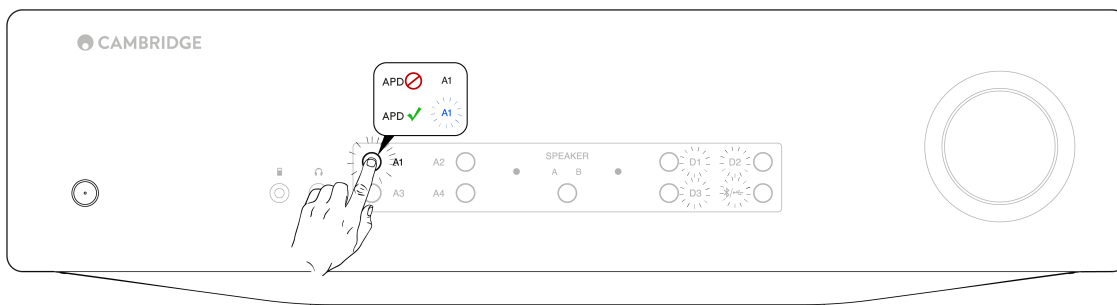

Clipping function

A3 on - Clipping function enabled. The volume nudges down if signal clipping is detected.

A3 off - Clipping function is disabled.

USB mode

A4 on - Puts the CXA in USB Audio Class 2 mode.

A4 off - Puts the CXA in USB Audio Class 1 mode.


Notes:

- To save the setup settings and exit the setup menu, press the Speaker A/B button.
- Pressing the Standby/On button while in the setup menu will exit this setup menu and will not save the setup settings.

Factory reset

A factory reset can be performed to restore the CXA to its original factory settings:

1. Whilst the CXA is in standby mode, press and hold the speaker A/B button;
2. Then when the A/B lights flash, press D1, D3, USB, D2 in a U shape sequence.

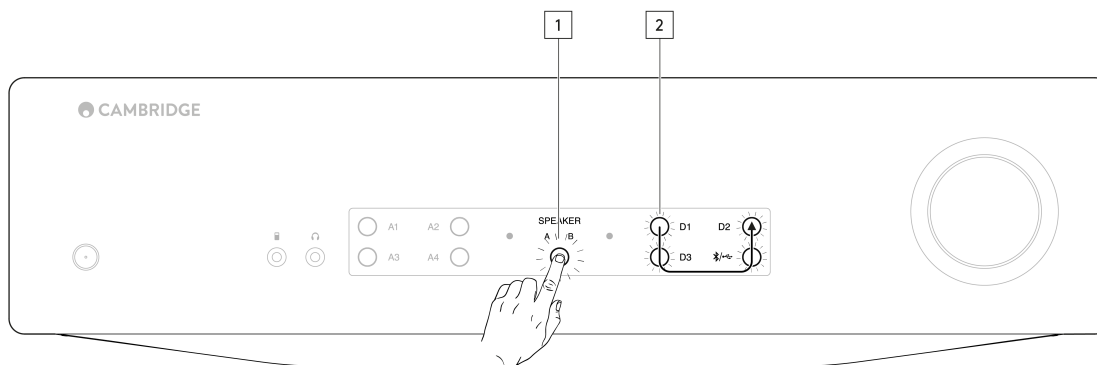

Bluetooth

Last updated: June 6, 2022 08:55. Revision #4887

Bluetooth audio streaming


Selecting this allows the CXA to receive Bluetooth audio from most phones, tablets and laptops.

Pairing


To begin streaming high quality music from your device it will first need to be paired with the CXA. Select the Bluetooth source on the CXA to enter discovery mode.

Notes:

- Your device can only be paired and connected to the CXA while the Bluetooth source is selected. This can be done by selecting the Bluetooth/USB source button on the front panel. The Bluetooth source is shown as being selected by the symbol being lit blue.

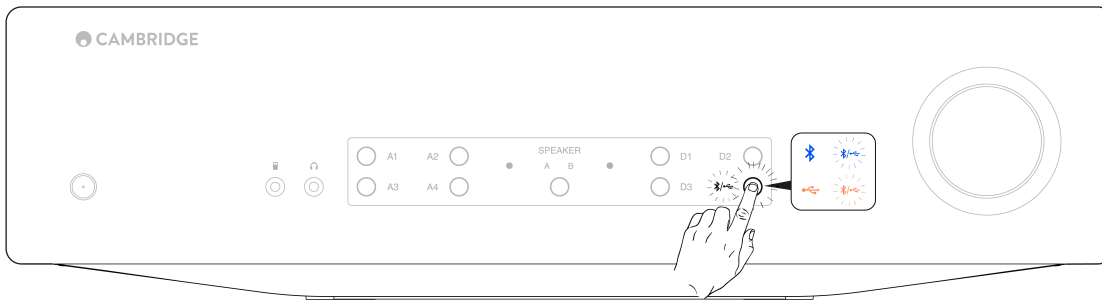

- The CXA is always in discoverable mode when there is no Bluetooth connection. Discoverable mode means that the CXA is able to be paired to another Bluetooth device.
- The supplied Bluetooth antenna must be inserted into the rear of the unit to enable Bluetooth functionality.

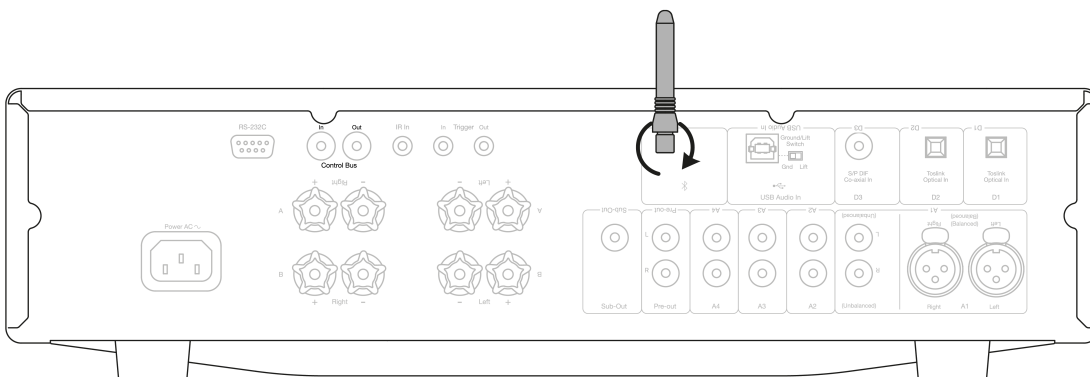

Bluetooth troubleshooting guide

If you are having problems connecting your Bluetooth device to the CXA, please try the following troubleshooting steps:

- Ensure that the supplied Bluetooth antenna is properly connected to the back of the unit. The CXA61/81 will be unable to connect to a Bluetooth device without the antenna connected. Try disconnecting and then re-connecting the antenna.
- Ensure that the Bluetooth source has been selected by selecting the Bluetooth/USB Audio button on the front panel. The Bluetooth source is shown by the symbol being lit blue. When the USB source is active the LED will be orange.
- Ensure that your Bluetooth device is in pairing mode and not already connected to another Bluetooth unit.
- Forget the CXA from your devices' list of discoverable Bluetooth items and start the pairing process again.
- Perform a factory reset on the CXA (see 'Factory Reset' section above).

Control Bus


Last updated: June 6, 2022 08:56. Revision #4896

The Control Bus allows any compatible Cambridge products to synchronise when powering up the units. See the following diagrams when connecting the CXA using the provided Control Bus cable.

Another added feature with this Control Bus is the use of the StreamMagic app. You can use the StreamMagic app to control the CXA via the CXN.


StreamMagic app (via CXN)

When using the app to turn the CXN on/off, this will also turn the CXA on/off. The app can also be used to control the volume of the CXA. Connect the CXN control bus out to CXA in. For more information, see the CXN manual.

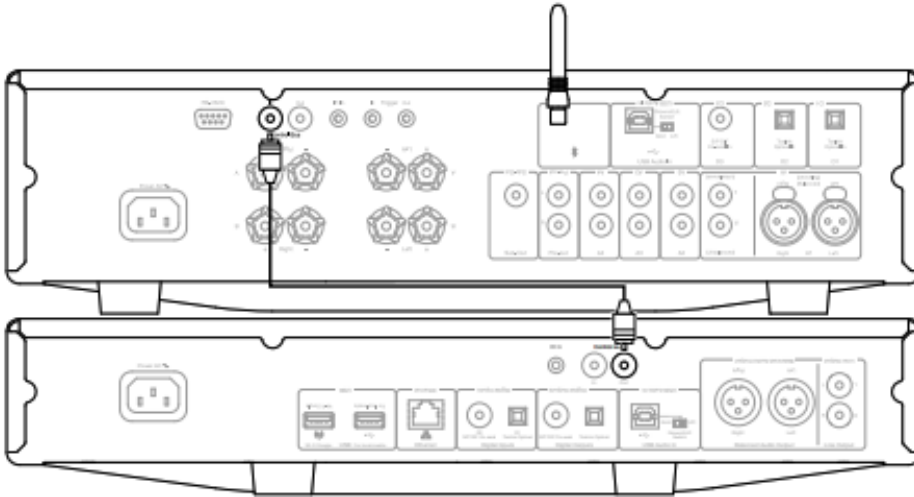

CXA with CXC


When turning the CXA on/off, this will also turn the CXC on/off. Connect the CXA control bus out to CXC in.

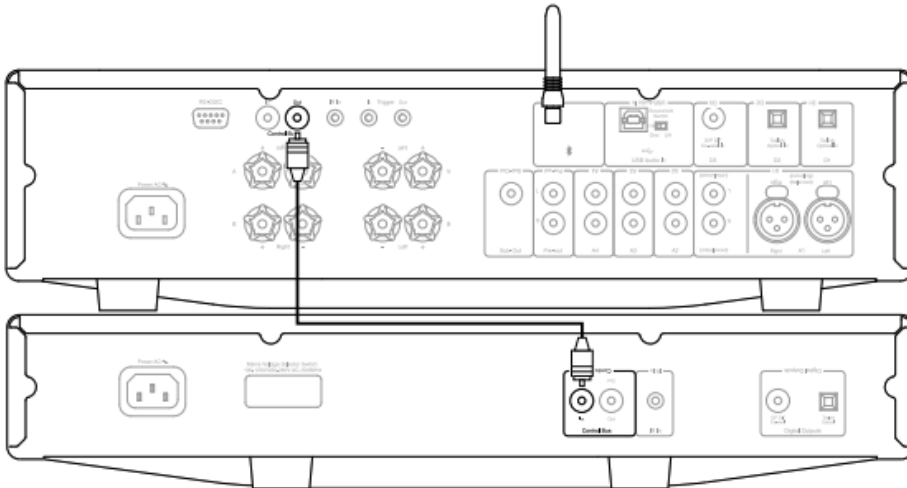

CXA with CXN

Note: Without using the StreamMagic app to control the CXC.

When turning the CXA on/off, this will also turn the CXN on/off. Connect the CXC control bus out to CXN in.

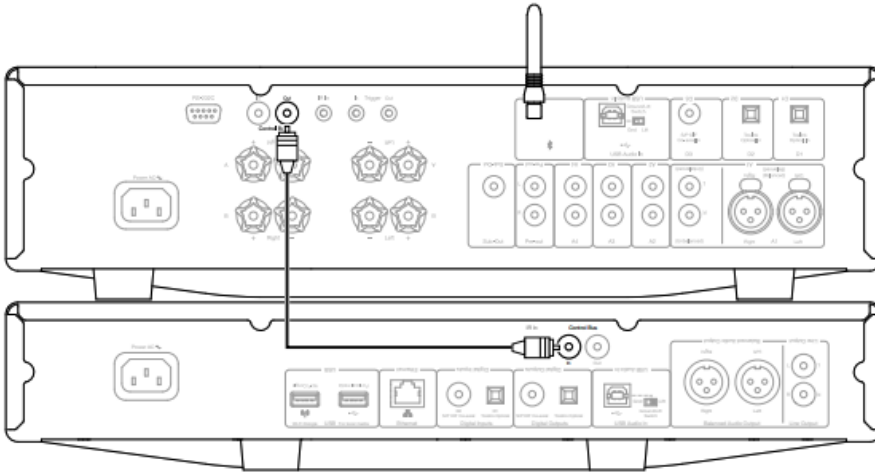


CXA with CXN and CXC

When turning the CXN on/off, this will turn the CXA and CXC on/off.

With all three CX devices, connect the CXN Control Bus out to CXA Control Bus in. Then connect the CXA Control Bus out to CXC Control Bus in.

Note: Do not loop back from the CXC Control Bus out to the CXN Control Bus in.

Control Bus will also need to be enabled and set to 'Amplifier' within the CXN device settings in the StreamMagic app, once the app has been connected to the CXN.

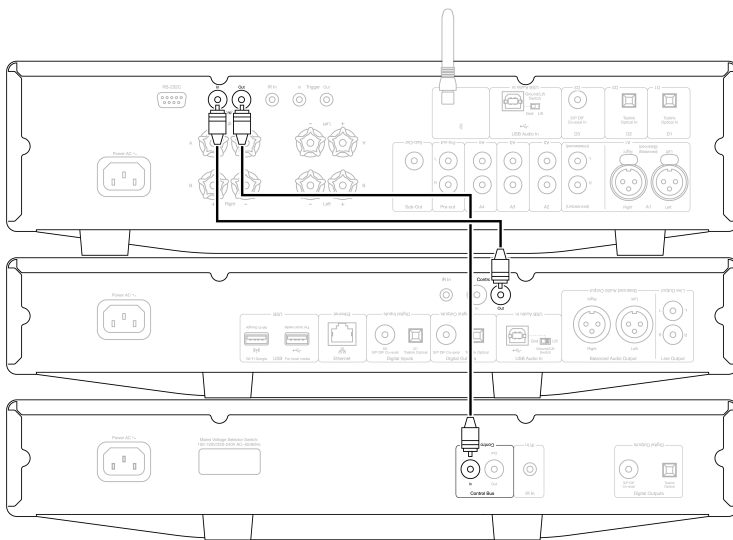

Note: The CXA, CXN and CXC all have an Auto Power Down (APD) function. If APD is enabled and one of the devices is switched on but inactive, the device will automatically power down after the selected APD time. This will then switch off all the other connected devices, due to the Control Bus connection.

If you don't want the devices to go into standby automatically, we would recommend disabling the APD feature on each device.

CAP5

Last updated: June 6, 2022 08:58. Revision #4897

Cambridge Audio has developed a proprietary protection system to ensure reliability and a long life for its amplifiers and the speakers they are connected to. This protection system comprises of five main protection methods:

1. DC detection

Indication - Unit has switched off during operation. The front panel LED light flashes together in the following sequence, one flash with long pause between flashes. Read below for more information.

Description - CAP5 offers loudspeaker protection if the output of the amplifier goes to a high constant voltage (DC) because of some internal fault. This is a rare fault although detecting it could just save those expensive loudspeakers.

Remedy - Due to the necessary sensitivity of the DC protection circuit, extremely hard clipping of the amplifier may cause DC protection to be triggered. If this fault occurs, please contact your dealer for service.

2. Over temperature detection

Indication - Unit has switched off during operation. The front panel LED light flashes together in the following sequence, two quick flashes with long pause between flashes. Read below for more information.

Description - Over temperature is caused by a combination of high listening levels and low impedance speakers. CAP5 includes temperature detection which constantly monitors the heat generated by the output transistors. If the monitored temperature reaches a high level (suitably within the limits of the output devices) the amplifier will automatically switch into a fault mode. The unit should ideally be left for 15 minutes in this state to cool down adequately. If the unit has not fully cooled down then the temperature may reach the limit soon after the amplifier is powered up. If the loudspeaker impedance is low the temperature of the amplifier may rise faster as the amplifier is working harder. If the amplifier is mounted in a cabinet or the ventilation slots are obstructed the over temperature detection may activate/reactivate after a short listening time.

Remedy - The internal temperature of the output transistors has reached the over temperature limit. Leave the unit for 15 minutes to cool down before pressing the Standby button to resume normal operation.

3. Overvoltage/Overcurrent detection

Indication - Unit has switched off during operation. The front panel LED light flashes together in the following sequence, three quick flashes with long pause between flashes. Read below for more information.

Description - CAP5 offers V/I (voltage/current) protection by constantly monitoring the output transistors to keep them working inside their Safe Operating Area (SOA). The SOA is a set of limits given by the output transistor manufacturer to ensure reliability. The V/I protection has been incorporated within the amplifier circuitry to provide a fast response to temporary overload conditions. When the V/I protection is triggered the unit will continue to operate but distortion may be heard as the unit protects the output transistors.

Remedy - Reduce the volume. If distortion is still present, check the speaker connections and ratings.

4. Short circuit detection

Indication - Unit has switched off during power up. The front panel LED light flashes together in the following sequence, four quick flashes with long pause between flashes. Read below for more information.

Description - During power up from Standby CAP5 performs a check on the loudspeaker terminals to see if a short across the terminals has been accidentally introduced. If the resistance measured across the loudspeaker terminals is too low the unit will stay in Standby mode until the fault has been removed and Power up is re-attempted.

Remedy - There may be a short circuit between the loudspeaker terminals. Check all loudspeaker connections before attempting to switch the unit out of Standby.

5. Intelligent clipping detection

Indication - Volume is reduced automatically.

Description - CAP5 has the ability to detect when the amplifier starts to clip or overdrive at its output, which can damage loudspeakers, and degrade the sound. Clipping distortion is caused at high volume levels when the output signal attempts to go outside the maximum voltage that the amplifier can provide, causing the tops of the signal to flatten off. When CAP5 detects clipping the volume will be automatically reduced down until CAP5 detects an undistorted output.

Note: The clipping detection is disabled by default. The clipping detection can be enabled in the Setup menu (see 'Setup menu' section).

If CAP5 is persisting, it is also advisable to check the specifications of your speakers to ensure that they are compatible with the CXA61/81. Both amplifiers can be used with speakers with an impedance of between 4 and 8 Ohms.

The CXA61 outputs 60W RMS into 8 Ohms and 90W RMS into 4 Ohms, while the CXA81 outputs 80W RMS into 8 Ohms and 120W RMS into 4 Ohms.

If your connected speakers fall outside of these specifications, then this could also be a reason for CAP5 protection being activated.

Troubleshooting

Last updated: May 14, 2024 12:51. Revision #12793

There is no power

- Ensure the AC power cord is connected securely.
- Ensure the plug is fully inserted into the wall socket and is switched on.
- Check fuse in the mains plug or adaptor.

There is no sound

- Make sure the unit is not in Standby mode.
- Check that the source component is properly connected.
- Check that your speakers are properly connected.
- Make sure the selected speaker A/B light corresponds to the speaker terminals that the loudspeakers are connected to.
- Make sure unit is not in mute mode.
- Check that the correct analogue or digital input button has been selected on the front panel. See the 'Front Panel Connections' section for more information.

There is no sound on one channel

- Check speaker connections.
- Check interconnects.

There is weak bass or diffused stereo imaging

- Ensure that speakers are not wired out of phase.

Speaker A/B and mute light flashing

- See section on CAP5 protection system.

The remote handset does not function

- Check that the batteries have not expired.
- Ensure that nothing is blocking the remote sensor.

There is no audio when connecting a Mac/PC to the USB audio input

- Ensure that all the steps within the 'USB Audio Connection' section of the manual have been followed.
- Ensure that the USB Audio source has been selected by selecting the Bluetooth/USB Audio button on the front panel. The USB Audio source is shown by the symbol being lit orange.
- Ensure that your PC/Mac is connected to the USB Audio input with a USB A to B cable.
- If you are connecting a PC and using the CXA in USB Audio Class 2, make sure that the correct USB driver is downloaded. The driver is available from www.cambridgeaudio.com/gbr/en/driver-updates.
- If you have downloaded a Cambridge Audio USB 2.0 Driver, ensure that the CXA is set to USB Audio Class 2 in the Setup Menu.

There is no audio when connecting a TV to the CXA

- The CXA is unable to decode a Dolby or Surround signal, ensure that the audio settings on your TV are set to PCM or Stereo.
- Ensure that your TV is connected to one of the SP/DIF or TOSLINK inputs on the CXA.

There are drop outs in audio when connected to a TV via Toslink

- Please see the 'Getting Connected' > 'Connecting a TV' section in the manual.

Technical specifications

Last updated: April 12, 2024 02:36. Revision #11904

CONTINUOUS POWER OUTPUT

CXA81/CXA81 Mk II: 80W RMS into 8 Ohms, 120W RMS into 4 Ohms
CXA61: 60W RMS into 8 Ohms, 90W RMS into 4 Ohms

DAC

CXA81 Mk II: ES9018K2M
CXA81: ES9016K2M
CXA61: ES9010K2M

THD (UNWEIGHTED)

<0.002% 1kHz at 80% of rated power
<0.02% 20Hz - 20kHz at 80% of rated power

FREQUENCY RESPONSE

<5Hz - 60kHz +/-1dB

S/N RATIO (REF 1W INTO 8 OHM)

>93 dB

S/N RATIO (REF FULL POWER)

>105 dB

INPUT SENSITIVITY

Input A1-A4 (unbalanced) 370mV RMS

INPUT IMPEDANCES

CXA81/CXA81 Mk II: Input A1 (balanced) 50 kOhm
Input A1-A4 (unbalanced) 43 kOhm

INPUTS

Balanced (*CXA81/CXA81 Mk II only*), Unbalanced, MP3 jack (*CXA61 only*), Coax SPDIF, TOSLINK, Bluetooth, USB Audio

OUTPUTS

Speakers, Headphone, Preamplifier Output, Sub Output

POWER AMP DAMPING FACTOR

>110 at 1kHz

USB AUDIO INPUT

USB Type B conforming to USB Audio Class 1 or USB Audio Class 2 (user selectable)

BLUETOOTH

4.2 A2DP/AVRCP supporting SBC, aptX and aptX HD codecs

COMPATIBILITY

USB Audio Class 1: Up to 24-bit 96kHz (asynchronous)
USB Audio Class 2: Up to 24-bit 384kHz (asynchronous) and up to DSD-256
TOSLINK: 16/24-bit 32-96kHz
Coax SPDIF: 16/24-bit 32-192kHz

MAX POWER CONSUMPTION

CXA81/CXA81 Mk II: 750W
CXA61: 600W

STANDBY POWER CONSUMPTION

<0.5W

DIMENSIONS

115 x 430 x 341mm (4.5 x 16.9 x 13.4")

WEIGHT

CXA81/CXA81 Mk II: 8.7kg (19.1lbs)
CXA61: 8.3kg (18.3lbs)

Frequently Asked Questions (FAQ)

Last updated: April 14, 2023 01:15. Revision #9177

How do I select the Balanced or Unbalanced inputs on the CXA81?

On the CXA81, pressing the A1 input selection button will toggle between the balanced and unbalanced inputs. The balanced input is shown by A1 being lit orange, while the unbalanced input is shown by A1 being lit blue.

Please ensure that the correct input is selected on the CXA, depending on how your CXA81 is connected. If the wrong input is selected, then there will be no sound from the amplifier.


Can I connect an external HDD to 'USB Audio In' on the CXA61/81?

No, there is no way to connect a USB drive or HDD directly to the CXA61/81 using its 'USB Audio' input. The 'USB Audio' input on the CXA61/81 will only support a direct connection with a PC or Mac. You will, however, be able to use one of our [network players](#) in combination with the CXA61/81 to do this.

How do I select the USB Audio input on the CXA61/81?

To select the USB Audio input on the CXA61/81, you will need to press the Bluetooth / USB Audio button found on the front of the unit twice.

- Press the button once to select the Bluetooth input, this will then turn Blue.
- Press the button once again to select the USB Audio input, which will then turn Orange.

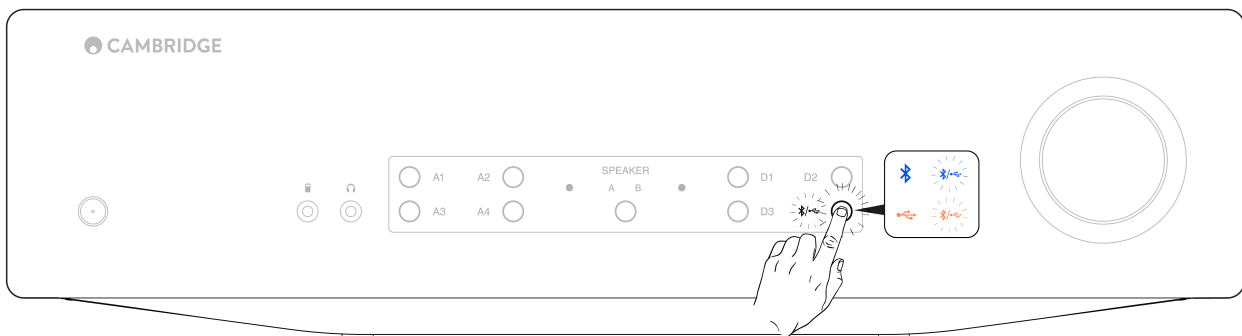

Alternatively, you can select this input using by using the USB Audio button on the CX remote.

Why can't I adjust the volume of the CXA61/81 with my mobile device when connected via Bluetooth?

When using Bluetooth with the CXA61/81, the amplifier's volume control takes over from the mobile devices' volume. The mobile device then produces a Bluetooth stream of fixed level volume, which is then adjusted at the amplifier's end.

It is normal behaviour for your mobile device not to be able to control the volume of the CXA61/81 when connected via Bluetooth. Volume adjustments can be made on the amplifier itself, using either the remote control or the front panel volume knob.

What is the crossover frequency on the CXA61/81?

The CXA61/81 has a low pass filter of 2.3 kHz applied at the Sub Out output. This is so that there is minimal phase added by the CXA at the Sub Out frequencies. This allows you to set your own crossover frequency on the Subwoofer itself.

What would the power output of the CXA be if I connect two pairs of speakers?

When you connect two pairs of speakers to an amplifier, the combined impedance is halved. So, when two pairs of 8Ω (Ohm) speakers are connected, the overall impedance becomes 4Ω, even though the individual impedance for each speaker remains unchanged at 8Ω.

The CXA61 has a power output of 60W RMS per channel into 8 Ohms, increasing to 90W RMS into 4Ω.

This quoted amplifier power rating is per channel. If you attach 2 pairs of 8Ω speakers, the overall impedance halves to 4Ω, so you'll be sending 90W per channel. This will then split between the two speakers attached to that channel, sending 45W to each speaker.


For the CXA81 the same as above will apply but as the CXA81 outputs 80W RMS which is increased to 120W at 4Ω. This means you will get 60W for each speaker when two pairs are used with the CXA81.

It is not recommended to connect 2 pairs of 4 Ohm or 6 Ohm speakers to the CXA61/81, as the impedance is halved meaning the impedance will be 2 Ohms or 3 Ohms respectively. This could result in the amplifier being driven too hard and CAP5 protection being activated, or damage being done to the amplifier and/or speakers.

Will the CXA61/81 playback 32-bit files via the USB Audio input?

Whilst the CXA's hardware is capable of handling 32-bit audio via the USB Audio input, the USB interface is reporting the host to be only 24-bit capable.

If you attempt to play 32-bit files, the USB driver will convert them to 24-bit by removing the least significant information.

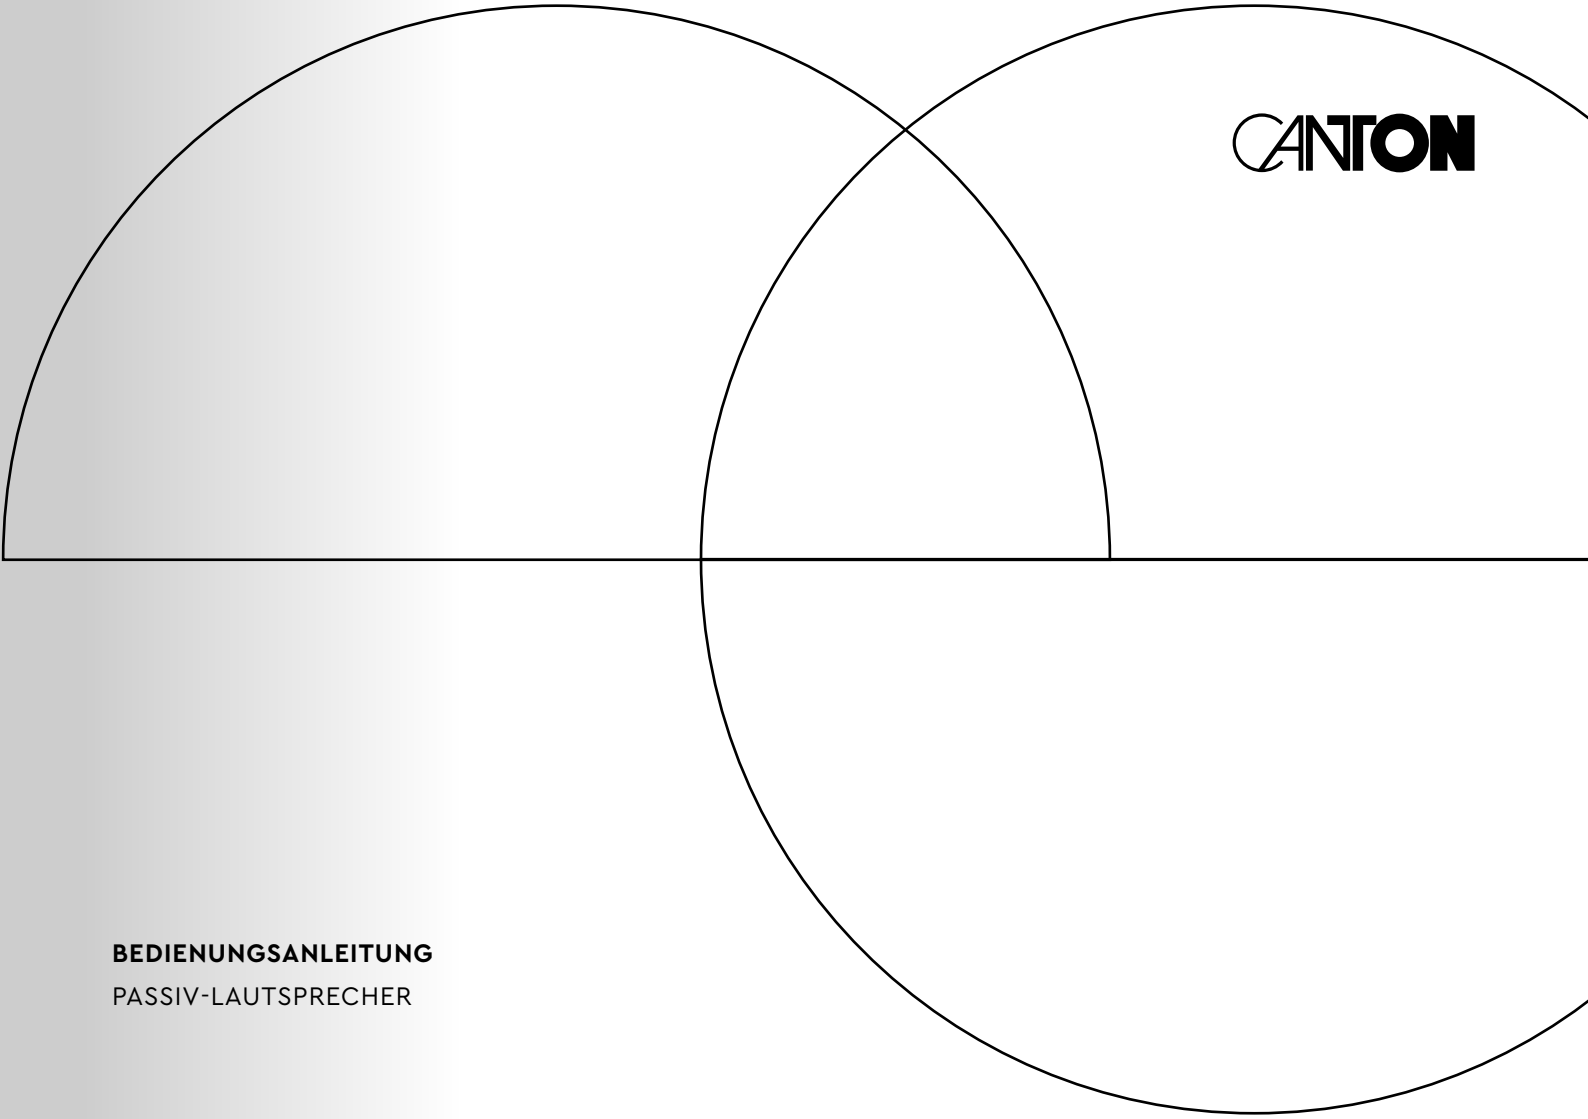

CANTON

BEDIENUNGSANLEITUNG
PASSIV-LAUTSPRECHER

DANKE!

Vielen Dank, dass Sie sich für ein Produkt von Canton entschieden haben.
Ihnen stehen nun viele Hörstunden mit hervorragenden Klängen bevor.

Sollten Sie Fragen haben, oder weitere Informationen benötigen, stehen wir Ihnen gerne zur Verfügung.

Service-Telefon: +49 (0)6083 / 287-87
Service-E-Mail: service@canton.de

Canton Elektronik GmbH + Co. KG
Neugasse 21-23
61276 Weilrod
Germany

INHALT

Sicherheitshinweise	Seite 4
Bestimmungsgemäßer Gebrauch	Seite 6
Allgemeines	Seite 7
Positionierung im Raum	Seite 8
Aufstellung / Montage	Seite 9
Anschlussmöglichkeiten	Seite 11
Fehlersuche	Seite 13
Garantie	Seite 16

SICHERHEITSHINWEISE



Achtung:

Sachgemäße Aufstellung und sachgemäßer Anschluss des Lautsprechers fallen in die Verantwortung des Anwenders. Canton kann keine Verantwortung für Schäden oder Unfälle übernehmen, die durch unsachgemäße Aufstellung oder unsachgemäßen Anschluss verursacht werden!



Wichtige Sicherheitsunterweisung!

Lesen und befolgen Sie alle Anweisungen. Beachten Sie alle Warn- und Sicherheitshinweise. Bewahren Sie diese Anweisungen auf und händigen Sie alle Unterlagen bei Weitergabe des Gerätes an Dritte mit aus.

Betreiben Sie dieses Gerät nur in gemäßigttem Klima (nicht in tropischem Klima). Betreiben Sie dieses Gerät nur im Innenbereich, nicht im Außenbereich oder in Feuchträumen. Um die Gefahr eines Brandes oder Stromschlages zu vermeiden, darf das Gerät weder Regen noch Nässe ausgesetzt werden. Betreiben Sie dieses Gerät nicht in der Nähe von Wasser. Setzen Sie dieses Gerät keinem Tropf- oder Spritzwasser aus. (Die Hinweise in diesem Absatz gelten nicht für "Outdoor-Lautsprecher".)

Starke Temperaturschwankungen führen zu Kondensniederschlag (Wassertröpfchen) im Gerät. Warten Sie mit der Inbetriebnahme, bis sich die entstandene Feuchtigkeit verflüchtigt hat (min. 3 Stunden). Stellen Sie keine Gegenstände auf das Gerät, die mit Flüssigkeiten gefüllt sind (wie z. B. Vasen). Berühren Sie Signal- und Netzkabel nie mit nassen Händen. Stellen Sie kein offenes Feuer, wie z.B. brennende Kerzen, auf oder in die Nähe des Gerätes. Stellen Sie das Gerät nicht in die Nähe von Wärmequellen wie z.B. Heizkörpern, Wärmespeichern, Öfen oder sonstigen Geräten (auch Verstärkern), die Wärme erzeugen. Verhindern Sie direkte Sonneneinstrahlung. Stellen Sie das Gerät gemäß den Herstellerhinweisen auf. Wählen Sie immer einen ebenen Untergrund; das Gerät muss lotrecht stehen. Die Standfläche (Untergrund) muss vor dem Aufstellen des Geräts hinsichtlich seiner Tragfähigkeit geprüft werden. Sollte Unsicherheit aufgrund des Gewichts bestehen, ist ein Fachmann zurate zu ziehen. Kontrollieren Sie regelmäßig den festen Stand des Geräts sowie den festen Halt der Standfläche. Stellen Sie das Gerät nicht in direkter Nähe zu einer Kante (Tisch- oder Regalkante) oder (Treppen-)Stufe auf, um ein Herunterfallen durch Vibrationen zu vermeiden. Falls erforderlich, sichern Sie das Gerät gegen Herunterfallen. Üben Sie keine Gewalt auf Bedienelemente, Anschlüsse und Leitungen aus. Stecken Sie keine Gegenstände oder Körperteile in die Öffnungen des Gerätes. Stromführende Teile im Inneren des Gehäuses könnten berührt und/oder beschädigt werden. Dies kann zu Kurzschlüssen, elektrischen Schlägen und Feuerentwicklung führen.

Passive Lautsprecher dürfen niemals mit dem Stromnetz, sondern nur mit den entsprechenden Verstärkerausgangsbuchsen verbunden werden. Montieren Sie an Lautsprecherleitungen keine Steckverbinder, die auch mit dem Stromnetz (Steckdose) verbunden werden können, wie z.B. 4mm Stecker (sog. Bananenstecker).



Verwenden Sie nur Befestigungsmaterial und Zubehör, welches vom Hersteller zugelassen ist und/oder mit dem Gerät mitgeliefert wird. Verwenden Sie nur Rollwagen, Ständer, Stative, Halter oder Tische, die vom Hersteller spezifiziert oder mit dem Gerät verkauft werden. Wenn Sie einen Rollwagen verwenden, bewegen Sie den Rollwagen/Geräte-Verbund nur vorsichtig, um Schäden und Verletzungen durch Umkippen zu vermeiden.

Reinigen Sie dieses Gerät nur mit einem sauberen, trockenen Tuch. Verwenden Sie zur Reinigung keine aggressiven, alkoholhaltigen oder scheuernden Mittel. Wenden Sie sich bei allen Reparatur- und Wartungsarbeiten an qualifizierte Fachkräfte. Dies ist dann erforderlich, wenn das Gerät in irgendeiner Weise beschädigt ist, wie z.B. bei Beschädigungen von Anschlüssen, wenn Flüssigkeiten oder Gegenstände in das Gerät gelangt sind, dieses Regen oder Feuchtigkeit ausgesetzt wurde, nicht ordnungsgemäß funktioniert oder fallen gelassen wurde. Nehmen Sie keine Veränderungen am Gerät oder Zubehör vor. Nicht autorisierte Veränderungen können die Sicherheit, die Einhaltung von Gesetzen oder die Systemleistung beeinträchtigen. In diesem Fall kann die Betriebserlaubnis/Garantie erlöschen.



Falls bei der Wiedergabe Tonverzerrungen wie z.B. unnatürliches Klopfen, Pochen oder hochfrequentes Klicken auftreten, ist der Lautstärkepegel umgehend zu reduzieren. Um mögliche Gehörschäden zu vermeiden, hören Sie nicht über einen längeren Zeitraum bei hohen Pegeln. Unterbrechen Sie die Wiedergabe, falls Sie Klingel- oder Pfeifgeräusche in den Ohren hören oder den Eindruck haben, hohe Töne (auch kurzzeitig) nicht mehr wahrnehmen zu können.



Das Gerät enthält Permanentmagnete. Stellen oder legen Sie keine Gegenstände auf oder unmittelbar neben das Gerät, die empfindlich auf Magnetfelder reagieren können (z. B. Röhrenfernseher, ext. Festplatten, Magnetkarten, Videokassetten usw.).



Das Gerät und/oder der Beipack kann Kleinteile enthalten, die verschluckt werden können. Es besteht Erstickungsgefahr! Daher nicht geeignet für Kinder unter 3 Jahren. Lassen Sie Kinder niemals unbeaufsichtigt mit dem Verpackungsmaterial. Kinder unterschätzen häufig die Gefahren. Halten Sie Kinder stets vom Produkt fern.



Dieses Symbol weist Sie auf wichtige Bedienungs- und Instandhaltungsanweisungen auf dem Produkt oder in den mitgelieferten Begleitunterlagen (Anleitung) hin.



Weitere wichtige Sicherheitsunterweisung für On-Wall-Lautsprecher (Wandmontage-Lautsprecher):

Befolgen Sie alle Montage- und Sicherheitshinweise. Andernfalls besteht Verletzungsgefahr und Gefahr von Schäden an Eigentum. Installieren Sie das Gerät gemäß den Herstellerhinweisen. Um Schäden/Verletzungen zu vermeiden, muss das Gerät gemäß der Anleitung sicher an der Wand befestigt werden.

Stellen Sie sicher, dass die Wand eine ausreichende Tragfähigkeit für das Gerät besitzt.

Stellen Sie sicher, dass sich an der Befestigungsstelle in der Wand keine elektrischen Leitungen oder Rohre (Gas, Wasser, Heizung, etc.) befinden. Das Bohren in Leitungen und/oder Rohre kann zu elektrischem Schlag, Feuerentwicklung, Explosion, Verbrühungen usw. führen. Es besteht Lebensgefahr! Wenden Sie sich bei Bedarf an einen Fachmann.

BESTIMMUNGSGEMÄSSER GEBRAUCH

Das Lautsprechersystem ist zur Verwendung in geschlossenen Räumen konzipiert und darf nicht im Freien oder in nasser Umgebung verwendet werden (Diese Anforderung gilt nicht für "Outdoor-Lautsprecher").

Das Gerät darf nicht umgebaut oder verändert werden. Schließen Sie das Gerät so an, wie in der Anleitung beschrieben und beachten Sie die Sicherheitshinweise. Belasten Sie das Gerät maximal mit der auf dem Typenschild spezifizierten Eingangsleistung.



Innerhalb der Europäischen Union in Verkehr gebrachte Elektro- und Elektronikgeräte müssen mit einem CE-Zeichen versehen sein, um anzuzeigen, dass das Gerät den geltenden Anforderungen (z. B. zur Gerätesicherheit oder elektromagnetischen Verträglichkeit) entspricht.



Gemäß der EU-Richtlinie über Elektro- und Elektronik-Altgeräte dürfen mit diesem Symbol gekennzeichnete Geräte nicht mit dem Hausmüll entsorgt werden. Bitte informieren Sie sich bei Bedarf bei Ihrem zuständigen Entsorgungsunternehmen oder der Gemeinde-/Stadtverwaltung über die für Sie kostenfreie Entsorgung. Sie dient dem Umwelt- und Gesundheitsschutz als auch der Einsparung von (seltenen) Rohstoffen durch Wiederverwertung (Recycling).

ALLGEMEINES

Canton-Lautsprecher sind für den Betrieb an Verstärkern mit hoher Ausgangsleistung geeignet, selbst wenn diese höher ist als die in den technischen Daten des Canton-Lautsprechers angegebene Belastbarkeit. Tatsächlich geht eine Gefahr für den Lautsprecher eher von leistungsschwachen Verstärkern aus, da sie bei dem Versuch, durch "Aufdrehen" von Lautstärke- und Klangstellern mehr Schalldruck zu erzeugen, übersteuert werden. Durch sogenanntes „Clipping“ können Verzerrungen erzeugt werden, die insbesondere die Hochtöner der Lautsprecher zerstören können. Achten Sie deshalb bei der Lautstärkeeinstellung auf Verzerrungen und reduzieren Sie gegebenenfalls umgehend die Lautstärke.

Um seine maximale Leistungsfähigkeit zu entwickeln, benötigt ein Lautsprecher eine Einspielzeit von ca. 15–20 Betriebsstunden. In dieser Zeit verändern sich die Eigenschaften vieler mechanischer Komponenten, bis sie die bei der Entwicklung des Lautsprechers festgelegten Werte erreicht haben, d.h. die Aufhängung der Chassis wird beweglicher und die Wiedergabequalität positiv beeinflusst.



Achtung:

Standlautsprecher haben einen hohen Schwerpunkt und können bei unsachgemäßer Aufstellung oder ruckartigen Bewegungen leicht umkippen. Dies zu vermeiden liegt im Verantwortungsbereich des Anwenders.

Stellen Sie Standlautsprecher daher ausschließlich auf einem ebenen Untergrund auf, der eine ausreichende Tragfähigkeit besitzt. Der Lautsprecher muss lotrecht stehen.

POSITIONIERUNG IM RAUM

Stereo-Betrieb:

Bei Verwendung von zwei Lautsprechern werden diese idealerweise in einem sog. Stereo-Dreieck (gleichseitiges Dreieck) angeordnet. Hierbei ist der Abstand zwischen den Lautsprechern gleich dem Abstand jedes Lautsprechers zum Hörplatz (siehe Abb. 1).

Mehrkanal-Betrieb:

Abhängig von der Anzahl der verwendeten Lautsprecher werden diese unterschiedlich angeordnet. Bitte schauen Sie in der Anleitung Ihres AV-Verstärkers nach der idealen Aufstellung für das von Ihnen gewählte Setup.

Grundsätzlich gilt: Center geradeaus (unter dem TV), Front links und Front rechts jeweils ca. 22°-30° zur Seite, Surround links und Surround rechts jeweils ca. 110°-120° zur Seite, Subwoofer zwischen TV und Front links bzw. rechts (siehe Abb. 2).

Wandabstand:

Der Lautsprecher sollte nach Möglichkeit nicht in einer Raumecke stehen und mindestens 30cm Abstand zur (Rück-)Wand aufweisen (siehe Abb. 3). Diese Anforderung gilt nicht für On-Wall-Lautsprecher.

Abb. 1

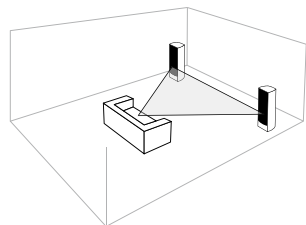


Abb. 2


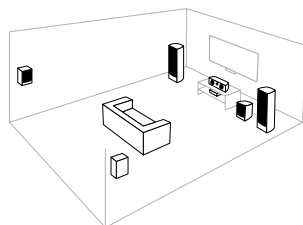


Abb. 3

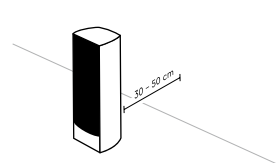

AUFSTELLUNG / MONTAGE

Gerätefüße:

Bei einer Aufstellung auf harten Untergründen wie Stein-, Holz- oder Glasböden (Stand-, Kompakt- und Centerlautsprecher) bzw. Montage an der Wand (On-Wall Lautsprecher) montieren Sie bitte die mitgelieferten (selbstklebenden) Gerätefüße bzw. Spikes auf der Unter- bzw. Rückseite des Lautsprechers. Bei einer Aufstellung auf Teppichböden o.ä. können diese weggelassen werden. Spikes können zum Ausgleich von Höhenunterschieden in der Höhe angepasst werden (siehe Abb. 4 und 5).

Abb. 4


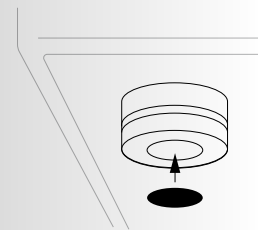


Abb. 5

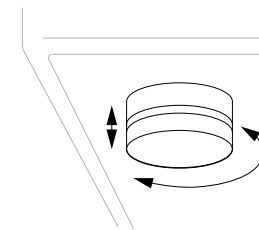

Lautsprecherständer (optionales Zubehör):

Zur freien Aufstellung im Raum sind bei Canton für alle Kompakt- und Centerlautsprecher passende Lautsprecherständer als Zubehör erhältlich.

Wandhalterung:

Befindet sich bei einem Wandlautsprecher keine (ggf. im Gehäuse integrierte) Wandhalterung im Lieferumfang, können Sie die optional erhältliche Halterung "Cantomount" von Canton nutzen.

Hinweise:

- Lautsprecher für Wandmontage sollten in etwa auf Ohrhöhe angebracht werden (siehe Abb. 6).
- Bei Lautsprechern mit integrierter Wandhalterung muss bei Verwendung der mitgelieferten (selbstklebenden) Gerätefüße die Rückseite des Schraubenkopfes, welcher zum Einhängen des Lautsprechers verwendet werden soll, einen Abstand von 6 mm zur Wand aufweisen (siehe Abb. 7).



- Lautsprecher, bei denen ein Sicherungsseil (Absturzsicherung) im Lieferumfang enthalten ist, müssen bei Überkopfmontage (Montagehöhe > 1m) durch dieses Sicherungsseil gegen Absturz gesichert werden. Bei einem Einsatz in öffentlichen und gewerblichen Bereichen sind die lokal geltenden Sicherheitsvorschriften selbstständig zu beschaffen und einzuhalten.

Abb. 6



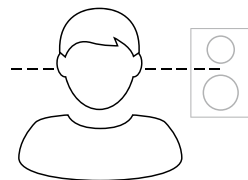


Abb. 7

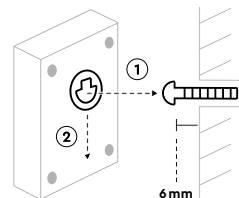

Befestigen Sie Ihre Lautsprecher wie dargestellt an der Wandhalterung und überprüfen Sie den korrekten Sitz. Gehört die Wandhalterung nicht zum Lieferumfang Ihrer Lautsprecher, erhalten Sie diese als „Cantomount“-Wandhalter im Fachhandel.

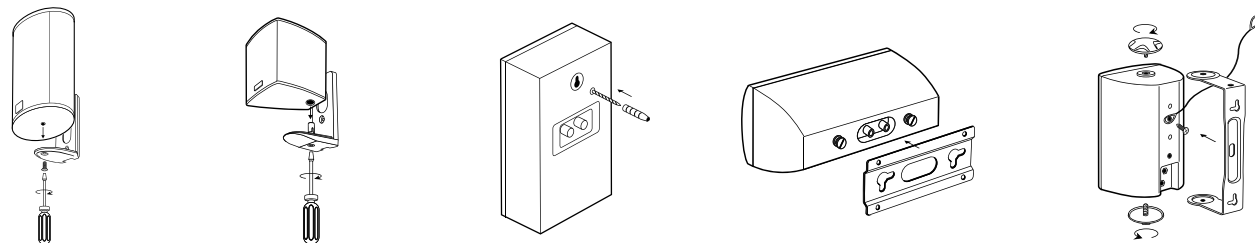

ANSCHLUSSMÖGLICHKEITEN

**Achtung:**


- Schalten Sie vor dem Anschluss der Lautsprecher zumindest den/die (Leistungs-)Verstärker aus, um diese(n) nicht durch einen Kurzschluss zu beschädigen.
- Bei einem Bi-Amping-Betrieb sind die (Kabel-)Brücken am Lautsprecherterminal unbedingt zu entfernen, da sonst die angeschlossenen Verstärker beschädigt werden können. Dazu lösen bzw. entfernen Sie die Polklemmen und ziehen die Kabelbrücken seitlich, bzw. die Metallbrücken nach vorne, heraus.

Hinweise:

- Bitte achten Sie auf die Verwendung von hochwertigen Lautsprecherkabeln. Minderwertige Kabel können die Klangqualität Ihrer Lautsprecher und somit das Klangerlebnis negativ beeinträchtigen.
- Für den linken und rechten Kanal sollten die Lautsprecherkabel etwa gleich lang sein. Unterschiedlich lange Lautsprecherkabel können zu einem Unterschied in der Lautstärke zwischen den beiden Kanälen führen.
- Achten Sie auf einen ausreichenden Leitungsquerschnitt der Lautsprecherkabel (min. 1.5 mm²). Lautsprecherkabel mit einem sehr kleinen Leitungsquerschnitt haben einen höheren Leitungswiderstand, was das Klangerlebnis beeinträchtigen kann.

Standard (Single-Wiring):

Hierbei wird jeweils ein Lautsprecherkabel vom Verstärker zum Lautsprecher verlegt. Achten Sie auf die richtige Polarität (plus/rot an plus/rot und minus/schwarz bzw. weiß an minus/schwarz/weiß) und die richtige Zuordnung der Seiten (links/rechts).

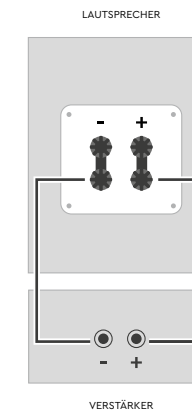

Bi-Wiring:

Befinden sich an Ihren Lautsprechern Terminals mit zwei getrennten Buchsen für den Bassbereich und den Mittel-/Hochtonbereich, haben Sie die Möglichkeit, jeweils zwei Lautsprecherkabel von einem Verstärkerausgang zu einem Lautsprecher zu legen. Dadurch können Sie ein Kabel mit hohem Leiterquerschnitt und geringem Leitungswiderstand (z.B. 2× 6 mm²) für den Bassbereich verwenden, und ein Kabel mit niedrigerem Querschnitt und somit niedrigerer Leitungskapazität (z.B. 2× 2.5 mm²) zum Mittel-/Hochtonbereich.

Hinweis:

Im Bi-Wiring-Betrieb entfernen Sie bitte die am Lautsprecherterminal angebrachten Brücken.



Bi-Amping:

Bei Bi-Amping werden für jeden Lautsprecher zwei Verstärkerkanäle bzw. zwei Mono-Verstärker verwendet. Dadurch werden der Bassbereich und der Mittel-/Hochtonbereich völlig entkoppelt, so dass ein hoher Strombedarf für die Tieftöner nicht zu einem unsauberen Signal für den Mittel-/Hochtonbereich führt. Dies führt zu einem saubereren Klangbild, insbesondere bei hohen Lautstärken.



Achtung:

Im Bi-Amping-Betrieb müssen die am Lautsprecherterminal angebrachten Brücken unbedingt entfernt werden!

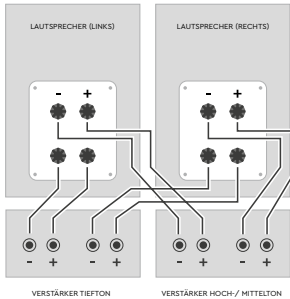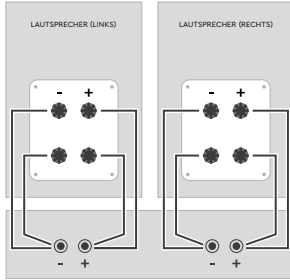

FEHLERSUCHE

Anbei finden Sie eine Übersicht der am häufigsten auftretenden Probleme.

Problem	Mögliche Ursache	Lösung
Aus dem Lautsprecher kommt kein Tonsignal	Lautsprecherkabel an (Leistungs-)Verstärker und/oder Lautsprecher nicht oder nicht korrekt angeschlossen	Lautsprecherkabel korrekt mit Verstärker und/oder Lautsprecher verbinden
Nur wenig Tiefton (Bass)	1. (Ein) Lautsprecher ist verpolt 2. Ungünstige (räumliche) Positionierung der Lautsprecher	1. Polarität an Lautsprechern und (Leistungs-) Verstärker(n) prüfen und ggf. korrigieren 2. Lautsprecher (sofern möglich) dichter an eine Wand oder in eine Raumecke rücken.
Unsaubere räumliche Abbildung (z.B. Stimmen kommen nicht aus der Mitte)	Der Abstand der beiden Lautsprecher zum Hörplatz ist unterschiedlich	Stellen Sie sicher, dass der Abstand zwischen Hörplatz und jedem Lautsprecher gleich ist
Ein Lautsprecher ist lauter als der Andere	1. Der Abstand zu den beiden Lautsprechern ist unterschiedlich	1. Gleiche Abstände zwischen Hörplatz und jedem Lautsprecher herstellen
	2. Bei Verstärkern mit Balance-Steller ist die Balance zu einer Seite verstellt	2. Korrigieren Sie die Balance-Einstellung am Verstärker
Die Lautsprecher verzerrten	Ihr Leistungs-(Verstärker) ist überlastet	Reduzieren Sie umgehend die Lautstärke (bis Ihr Verstärker nicht mehr überlastet wird). Die Ausgangsleistung des Verstärkers sollte min. der Nennbelastbarkeit der Lautsprecher entsprechen (siehe auch Kapitel "Allgemeines")

FEHLERSUCHE

Problem	Mögliche Ursache	Lösung
Aus einem Lautsprecher ist nur Tiefton und kein Mittel-/Hochton bzw. es ist nur der Mittel-/Hochtonbereich und kein Tiefton zu hören	1. Sie betreiben einen Lautsprecher mit Bi-Wiring / Bi-Amping-Terminal im Single-Wiring-Betrieb und am Terminal wurden die (Kabel-)Brücken entfernt	1. Setzen Sie die Brücken zwischen dem Anschluss für Bass und Mittel-/Hochton wieder ein
	2. Sie betreiben einen Lautsprecher im Bi-Wiring-Betrieb und das Lautsprecherkabel hat sich am Bass- bzw. Mittel-/Hochtonanschluss gelöst	2. Prüfen Sie die Verbindung und schließen Sie das Kabel korrekt an
	3. Sie betreiben einen Lautsprecher im Bi-Amping-Betrieb und einer der Leistungsverstärker ist nicht in Betrieb oder nicht korrekt angeschlossen	3. Prüfen Sie Ihre Anlage und stellen Sie sicher, dass Ihre Leistungsverstärker in Betrieb und korrekt angeschlossen sind
Der Klang der Lautsprecher ist unterschiedlich	Die Pegelanpassung an den Lautsprechern ist unterschiedlich eingestellt	Stellen Sie bei beiden Lautsprechern die Pegelanpassung auf denselben Wert (-1.5dB / 0 dB / +1.5 dB)
Der Lautsprecher steht nicht stabil und wackelt	1. Der Untergrund ist uneben	1. Gleichen Sie Unebenheiten durch Justierung der höhenverstellbaren Gerätefüße aus
	2. Die Gerätefüße sind nicht richtig montiert oder in der Höhe unterschiedlich eingestellt	2. Stellen Sie die Gerätefüße so ein, dass der Lautsprecher gerade steht und nicht wackelt

Sollten Sie weiterführende Fragen haben, wenden Sie sich bitte an unseren Kundenservice unter der Telefonnummer +49 (0)6083 287-87, per E-Mail unter service@canton.de, oder kontaktieren Sie Ihren Canton-Fachhändler.

GARANTIEBESTIMMUNGEN

Ihr Anbieter und Vertragspartner:

Canton Elektronik GmbH + Co. KG, Neugasse 21–23, 61276 Weilrod
Geschäftsführer: Christoph Kraus, Günther Seitz
Telefon: +49 (0)6083 2870, E-Mail: info@canton.de
Ust-IdNr.: DE 111294343, WEEE-Reg.-Nr. DE 99091637

Für Rückfragen rufen Sie bitte unser Service-Telefon an:
+49 (0)6083 287–87
Das Service-Team ist für Sie erreichbar von:
Mo – Do: 8 – 16:45 Uhr, Fr: 8 – 12:30 Uhr

Canton (Canton Elektronik GmbH + Co. KG, Neugasse 21–23, 61276 Weilrod) gewährt dem Käufer (Garantienehmer) von passiven, aktiven und teilaktiven Lautsprechern und Elektroniken (im folgenden „Produkte“) eine besondere Herstellergarantie nach den nachstehenden Bedingungen. Für Produkte anderer Hersteller und Marken, die Sie bei Canton erwerben, gelten die gesetzlichen Gewährleistungsrechte. Soweit andere Hersteller eigene Garantien aussprechen, sind Ansprüche aus diesen Garantien nur gegenüber diesen Herstellern, nicht aber gegenüber Canton begründet:

Allgemeines:

Durch diese Garantie werden die gesetzlichen Rechte bei Mängeln nicht eingeschränkt. Diese gesetzlichen Rechte bei Mängeln können von Ihnen unentgeltlich in Anspruch genommen werden. Von diesem Garantieverprechen bleiben daher etwaige bestehende gesetzliche Gewährleistungsrechte Ihrem Verkäufer gegenüber unberührt. Sollte die Kaufsache mangelhaft sein, so können Sie sich in jedem Fall an Ihren Verkäufer im Rahmen der gesetzlichen Gewährleistung wenden, und zwar unabhängig davon, ob ein Garantiefall vorliegt oder die Garantie in Anspruch genommen wird.

Räumlicher Geltungsbereich:

Der Garantiegeber gewährt die vorliegende Garantie, sofern das Produkt im Gebiet des europäischen Wirtschaftsraumes (EWR, also die Länder der Europäischen Union, Norwegen, Island und Liechtenstein), der Schweiz sowie dem United Kingdom gekauft wurde.

Garantieerklärung:

Mit dem Kauf eines Produktes erhält der Käufer vom Garantiegeber, sofern es sich bei dem Käufer um einen Endverbraucher im Sinne des § 13 BGB handelt, eine Herstellergarantie. Garantiert wird, dass das Produkt frei von Material- und Herstellungsfehlern ist.

Die Garantie wird für folgenden Zeitraum gewährt und beginnt ab dem Datum der Kaufrechnung des Gerätes:

- 10 Jahre für Passivlautsprecher der aktuellen Reference-Serie
- 10 Jahre für Passivlautsprecher der Reference-K-Serie sowie Reference.2-Serie (bei Garantieverlängerung)
- 5 Jahre für sonstige Passivlautsprecher
- 2 Jahre für aktive und teilaktive Lautsprecher, sowie Elektroniken

Garantieleistung:

Material- und Herstellungsfehler an dem erworbenen Produkt werden innerhalb einer angemessenen Frist unentgeltlich entweder durch Reparatur oder Austausch der Ware gegen einen gleichwertigen Artikel beseitigt. Ausgetauschte Teile und Geräte gehen in das Eigentum des Garantiegebers über. Sonstige Ansprüche des Garantienehmers aufgrund dieser Garantie, insbesondere Schadensersatz, sind ausgeschlossen.

Einschränkungen der Garantie:

Garantieansprüche sind ausgeschlossen bei Schäden an der Ware durch

- Äußere Einwirkungen, wie z. B. Transportschäden, Beschädigung durch Stoß oder Schlag
- Unsachgemäße oder missbräuchliche Behandlung
- Nichtbeachtung etwaiger Sicherheitsvorkehrungen
- Normalen Verschleiß
- Reparaturversuche in Eigenregie
- Umwelteinflüsse (Hitze, Feuchtigkeit etc.)

Geltendmachung der Garantie:

Zur Geltendmachung des Garantieanspruches wenden Sie sich bitte an den Garantiegeber:

Canton Elektronik GmbH + Co. KG
Neugasse 21–23, 61276 Weilrod
Telefon: +49 (0)6083 287 0
Mail: info@canton.de

Wichtiger Hinweis:

Voraussetzung für die Inanspruchnahme der Garantieleistung ist, dass dem Garantiegeber die Prüfung des Garantiefalls durch Einschicken des Produktes ermöglicht wird. Daher ist darauf zu achten, dass Beschädigungen des Produktes auf dem Transportweg durch die Verwendung einer sicheren Verpackung vermieden werden. Für die Beantragung der Garantieleistung ist die Rechnung der Warensendung beizufügen. Ohne Rechnung kann der Garantiegeber die Garantieleistung ablehnen.

Bei berechtigten Garantieansprüchen erfolgt die Garantieabwicklung in jedem Fall frachtfrei, d.h. der Garantiegeber erstattet etwaige Versandkosten für den Hinversand. Falls ein kostenpflichtiger Ausbau des Produktes für deren Einschicken an den Garantiegeber notwendig ist, so trägt der Garantiegeber die für den Ausbau erforderlichen Kosten.

Die personenbezogenen Daten werden ausschließlich zu Zwecken der Auftragsbearbeitung sowie zur möglichen Garantieabwicklung im Rahmen der geltenden Datenschutzgesetze genutzt.

Stand: 18.01.2024

Technische Änderungen, Irrtümer und Druckfehler vorbehalten.

Die allgemeinen Geschäftsbedingungen (AGB) finden Sie auf unserer Webseite: <https://www.canton.de/information/agb/>

Bei Fragen oder Anregungen wenden Sie sich bitte an unseren Kundenservice:

For further questions, please do not hesitate to contact our Customer Service:

Canton Elektronik GmbH + Co. KG

Neugasse 21 – 23

61276 Weilrod, Germany

Tel. +49 (0)6083 287-0

service@canton.de

www.canton.de

Alle Angaben ohne Gewähr.

Technische Änderungen, Tippfehler und Irrtümer vorbehalten.

All Statements without guarantee.

Technical changes, typing errors and other errors reserved.