


00047075 - Rocktile DIY PST Bausatz E-Gitarre / Rocktile DIY Kit PST Style

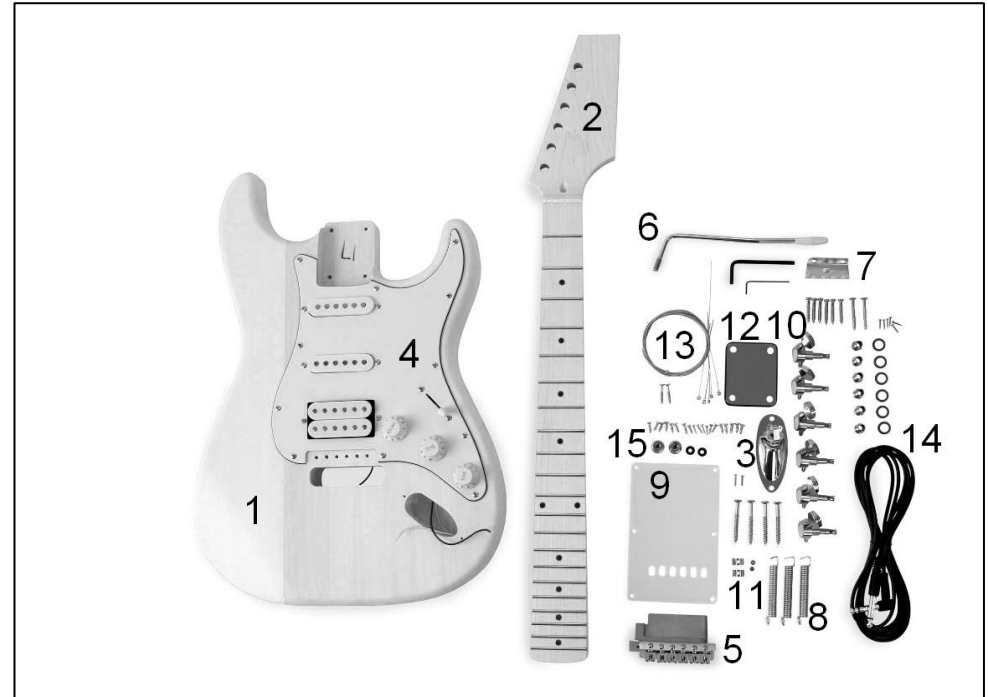


Teileliste / Parts List

Pos	PCS/STK	Description	Beschreibung
1	1	Body	Korpus
2	1	Neck with Headstock	Hals mit Kopfplatte
3	1	Output Jack	Output Klinkenbuchse
4	1	Pickguard Assembly	Schlagbrett montiert
5	1	Tremolo Unit	Tremolo
6	1	Back Plate	Abdeckplatte Rückseite
7	Set of 6	Tuning Machines	Mechaniken
8	Set of 2	String Holders	Saitenniederhalter
9	1	Neck Plate	Halsmontageplatte
10	Set of 6	Strings	Saiten
14	1	Cord	Kabel
15	2	Strap Buttons	Gurtnöpfe



Rocktile PST Schaltplan / Rocktile PST standard schematics

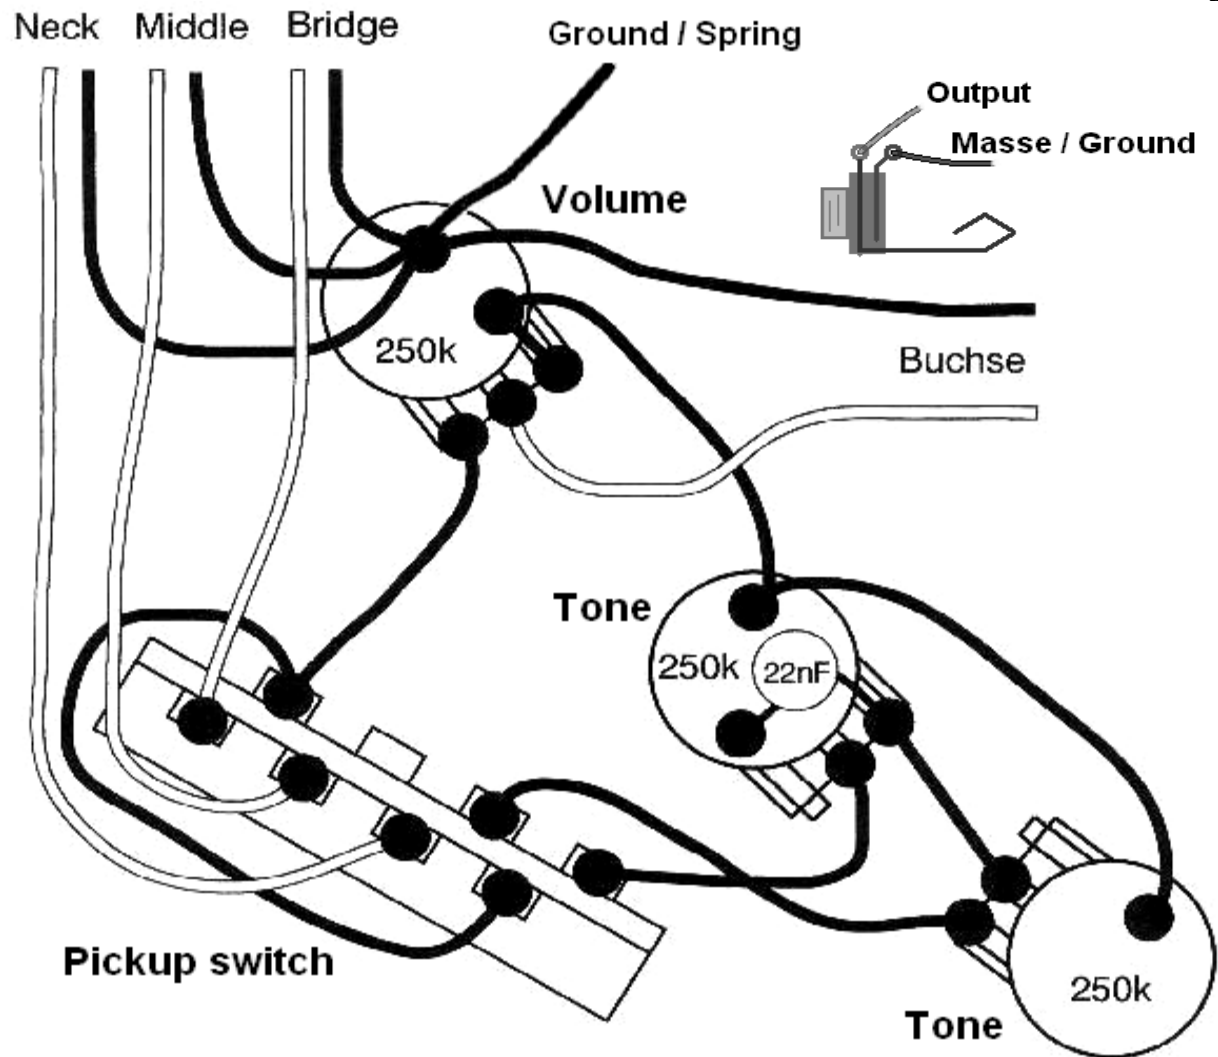

Verdrahtungsanleitung:

Alle Bauteile (Tonabnehmer, Schalter, Potis) sind auf dem Schlagbrett vormontiert und verdrahtet. Führen Sie den Masseanschluss abgehend vom Gehäuse des Volume Potis (Lautstärkereger) durch den Korpus zum Befestigungsblech (gewinkelt) für die Federn des Tremolosystems. Löten Sie das Massekabel dort an. Über diese Verbindung werden Brücke und Saiten geerdet um Brummen und Störgeräusche zu vermeiden. Führen Sie einen Abgang Masse und Ausgang durch den Korpus zur 6.35mm Klinkenbuchse. Löten Sie dort Masse und Ausgangskabel an. Achten Sie auf richtige Masse und Output-Verdrahtung (siehe Zeichnung).

Assembly and soldering instructions:

All parts (pickups, switch, controls) are preassembled on the pickguard. All connections between these parts are already done. Take the ground wire from volume control and lead through guitar body to backside of guitar body where tremolo springs are mounted. Solder the ground wire to metal spring claw (holder). Take ground wire and output wire from volume control and lead through guitar body to 6.35mm guitar jack. Solder ground wire and output wire to jack. Please note ground pin and output pin (see picture)