


ENGLISH






LAUNCHCONTROL^{XL}

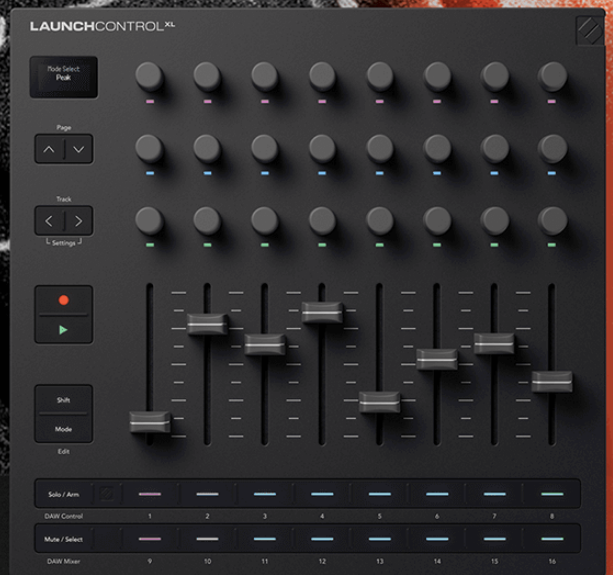

Launch Control XL 3 User Guide

Version 1.0

Table of Contents

Introduction to the Launch Control XL 3	3
What's in the box?	3
Getting Started with your Launch Control XL 3	4
Connecting and powering your Launch Control XL 3	4
Easy Start	6
Troubleshooting	7
Launch Control XL 3 hardware overview	8
Launch Control XL 3's Top Panel	8
Launch Control XL 3's Back Panel	17
Using Custom Modes on the Launch Control XL 3	20
Custom Mode Settings Edit	20
Creating Launch Control XL 3 Custom Modes in Novation Components	21
Using Launch Control XL 3 outside of a DAW	22
Controlling another device with Launch Control XL 3	23
Controlling multiple devices with Launch Control XL 3	24
Using the Launch Control XL 3 in a hybrid setup	26
Using your Launch Control XL 3 in non-musical applications	27
Controlling your DAW with the Launch Control XL 3	28
Controlling Ableton Live  with the Launch Control XL 3	28
Controlling Logic Pro  with the Launch Control XL 3	42
Controlling Cubase  with the Launch Control XL 3	54
Controlling FL Studio with the Launch Control XL 3	66
Launch Control XL 3's Settings page	73
Bootloader mode	73
Launch Control XL 3's Specifications	75
Technical Specifications	75
Weight and Dimensions	75
Launch Control XL 3 spares	76
Launch Control XL 3 appendix	77
Default Mode (16) parameters	77
Novation Notices	78
Troubleshooting	78
Trade Marks	78
Disclaimer	78
Copyright and Legal Notices	78
Credits	80

Introduction to the Launch Control XL 3

Launch Control XL 3 is a MIDI control surface designed to provide hands-on control of DAWs, software synths, effects, and external hardware through USB and MIDI I/O, eight faders, 24 endless encoders, 16 programmable buttons, dedicated transport controls, and an OLED display.

- **The Creative Control Surface**

Get hands on with your entire workflow. Launch Control XL's eight precision faders, 24 endless rotary encoders, and 16 assignable buttons give you tactile control over all major DAWs, right out the box. And with intuitive custom mapping for all your plugins and hardware, Launch Control XL makes an ideal studio centrepiece.

- **Powerful DAW integration**

Take charge of Ableton Live, Logic Pro, FL Studio, Cubase, and more with two DAW encoder modes.

- **Connect all your hardware**

MIDI In, Out, and Out2/Thru ports enable custom-mapped control for all your hardware synths and effects — no computer needed.

- **Perfect for hybrid setups**

Combine your external gear, DAW controls, and essential plugin parameters into one intuitive custom layout for the ultimate hybrid setup.

What's in the box?

- Novation Launch Control XL 3
- 1.5m (4'11") USB type C-to-A Cable

Getting Started with your Launch Control XL 3


Connecting and powering your Launch Control XL 3

Your Launch Control XL 3 is USB bus-powered; it's powered when you connect it to your computer or to a mains USB power adaptor using the included USB cable.


When you connect your Launch Control XL 3 to a computer, it sends and receives MIDI data via the **USB** port.

Your Launch Control XL 3 also has three 5-pin DIN MIDI ports (**In**, **Out**, and **Out 2/Thru**), these are for interacting with external MIDI hardware. For more information, see [Launch Control XL 3's Back Panel \[17\]](#).

These example setups show how you might power and connect your Launch Control XL 3 to use it with a computer or in a hardware setup.

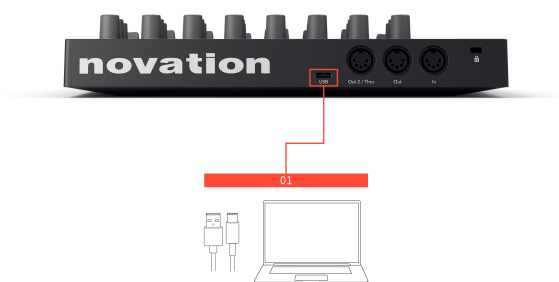

Connect from your Launch Control XL 3's USB-C port to a computer with a USB-A port.

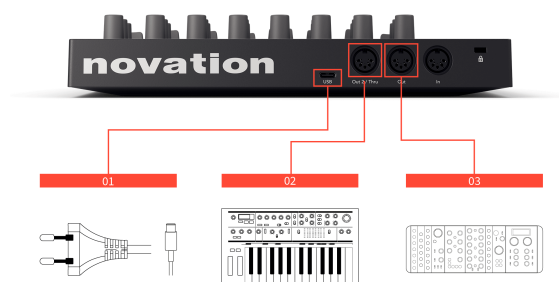

Using your Launch Control XL 3 to control a hardware setup using 5-pin MIDI DIN to control both synthesisers and powering the Launch Control XL 3 using a mains USB power adaptor.

Using your Launch Control XL 3 with a computer via USB

1. Connect your Launch Control XL 3 to your computer using the included USB-C to A cable.

Using your Launch Control XL 3 to control a hardware setup using MIDI DIN, powering the Launch Control XL 3 using a mains USB power adaptor

1. Connect your Launch Control XL 3 to a mains USB power adaptor (not included).
2. MIDI **Out 2** connected to a desktop synthesiser's MIDI in.
3. MIDI **Out** connected to a modular synthesiser's MIDI to CV module.



TIP

A mains USB power adaptor is any adaptor that converts power from a mains plug socket to a USB connector, such as a phone charger.

To power your Launch Control XL 3 your mains USB power adaptor must supply:


- At least 2.5 W (watts)
- At least 500 mA (milliamps) at 5V

Easy Start

Easy Start gives you a step-by-step guide to setting up your Launch Control and creates personalised tutorials based on how you plan to use your Launch Control. This online tool also guides you through your Launch Control's registration process and accessing the software bundle.

On both Windows and Mac computers, when you connect your Launch Control to your computer, it first appears as a Mass Storage Device, like a USB drive. Open the drive and double click 'Click Here To Get Started.url'. Click 'Get Started' to open Easy Start in your web browser.

After you've opened Easy Start, follow the step-by-step guide, to install and use your Launch Control.

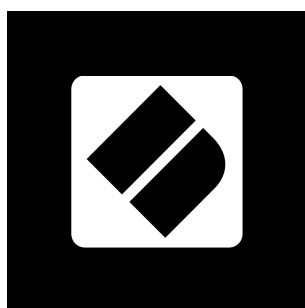

Alternatively, if you don't want to use the Easy Start tool, visit our website to register your Launch Control manually and access the software bundle.

id.focusritegroup.com/register



IMPORTANT

It's crucial you update your Launch Control's firmware when you first plug it in, whether you go through Easy Start or not.

If you don't update the firmware of your Launch Control, it's likely many features won't work.

To update your Launch Control's firmware, you need to use Novation Components. Go to components.novationmusic.com to update your firmware.

Troubleshooting

For help getting started with your Launch Control XL 3, visit:

novationmusic.com/get-started

If you have any questions or need any help at any time with your Launch Control XL 3, visit our Help Centre. Here you can also contact our support team:

support.novationmusic.com


We recommend you check for updates to your Launch Control XL 3 so you have the latest features and bug fixes. To update your Launch Control XL 3's firmware, you need to use Components:

components.novationmusic.com

Launch Control XL 3 hardware overview

The next few pages give you an idea of what the controls on Launch Control XL 3 do. For DAW integration see [Controlling your DAW with the Launch Control XL 3 \[28\]](#), for using Launch Control XL 3 in non-DAW applications, see [Using Launch Control XL 3 outside of a DAW \[22\]](#).

Launch Control XL 3's Top Panel

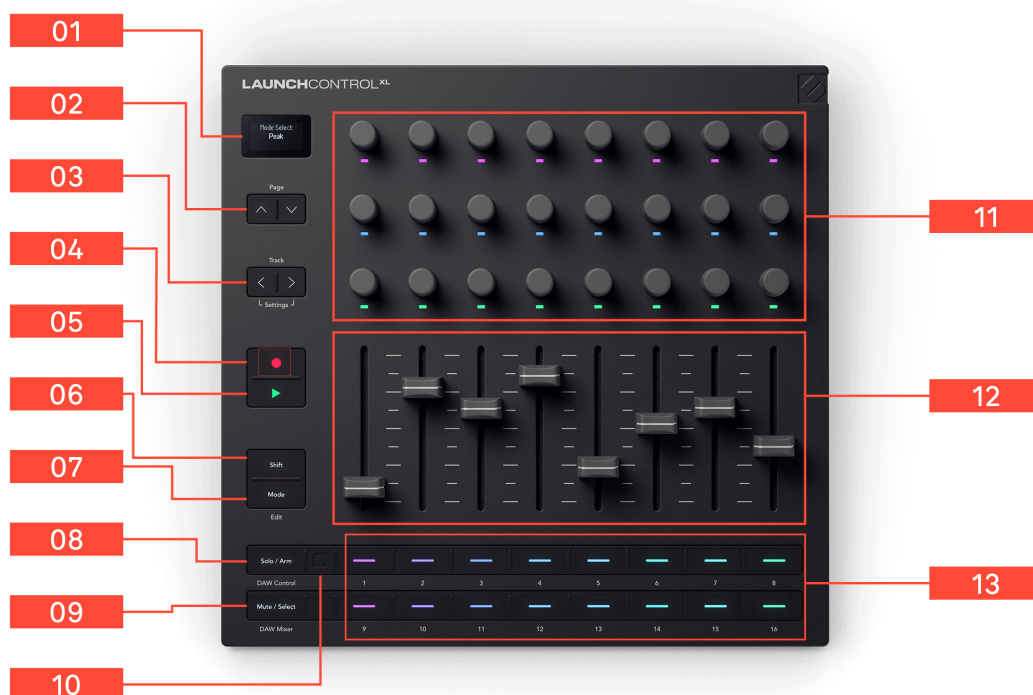

1. Screen - displays important information.
2. **Page [9]** buttons - navigate through different parts of your Launch Control XL 3. The buttons light when available.
3. **Track [10]** buttons - move through tracks in your DAW.
4. **Record [10]** button - toggles record on/off in your DAW.
5. **Play [10]** button - controls and matches your DAW's play button behaviour.
6. **Shift [11]** button - access Shift functions and preview controls

without changing values (hold **Shift** and move a control).

7. **Mode** [12] button - select what the Launch Control XL 3 is controlling, DAW Mixer, DAW Control, or a Custom Mode.
Hold **Shift** and **Mode** to access the [Custom Mode Edit menu](#).
8. **Solo/Arm** [16] button - in DAW Modes, change what this button row controls.
9. **Mute/Select** [16] button - in DAW Modes, change what this button row controls.

10. Novation button - nothing... yet.
11. [Encoders](#) [14] - assignable encoder controls.
12. [Faders](#) [14] - assignable fader controls.
13. [Buttons](#) [15] **1 - 16 - Solo / Arm** or **Mute / Select** buttons in DAW mode, or assignable button controls in [Custom Modes](#) [20].

Using the Page buttons




Page up and down are the first horizontal button pair under the screen, on the left-hand side of the Launch Control XL 3.

The buttons light when they're available and allow you to navigate through many areas of the Launch Control XL 3. For example, if you're at the first or last page, only one of the two buttons lights.

When you press either button, the screen shows what's changed.

Track Buttons (Settings)

The **Track** <> left, and Track right buttons are the second horizontal button pair under the screen, on the left-hand side of the Launch Control XL 3.

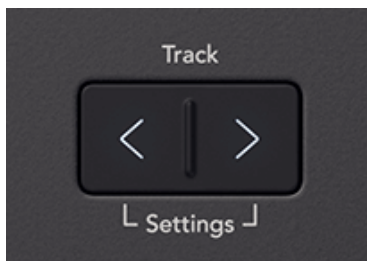

The buttons light when they're available and allow you to navigate through many areas of the Launch Control XL 3. For example, if you're at the first or last page, only one of the two buttons lights.

When you press either button, the screen shows what's changed.

Settings


To access Settings, press and hold both **Track** <> buttons for 300 milliseconds.

For more information, see [Launch Control XL 3's Settings page \[73\]](#).

Using the Record button

In DAW mode, Record mimics record on/off in your DAW.

Record is the top half of the third button pair below the screen.

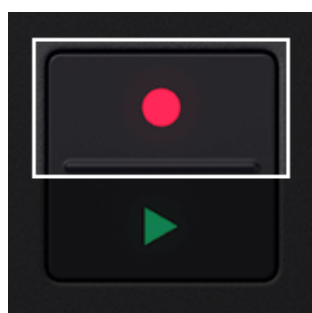


For more information, see [Controlling your DAW with the Launch Control XL 3 \[28\]](#).

Using the Play ► button

In DAW mode, Play ► mimics your DAWs play button behaviour.

Play ► is the bottom half of the third button pair below the screen.

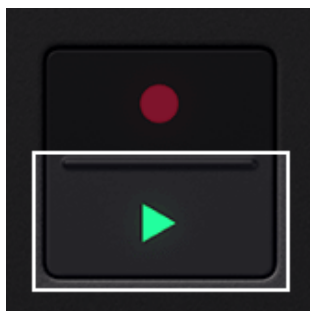

For more information, see [Controlling your DAW with the Launch Control XL 3 \[28\]](#).

Launch Control XL 3's Shift button


Shift allows access to secondary functions on many buttons. Hold **Shift**, and press any button with a secondary shift function.



TIP

It's possible to latch the **Shift** button. Double press it to latch.

Shift is the top half of the fourth button pair.

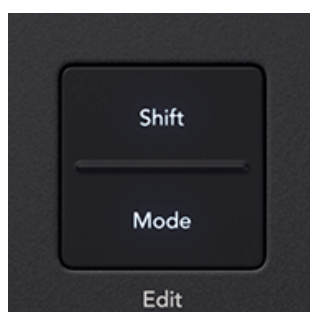

Shift lets you preview controls. Hold **Shift** and move a control; the screen shows you the value without changing it.



TIP

When you hold the **Shift** button, any other buttons with an available shift function light up.

Mode button (Edit)


Mode lets you choose which mode the Launch Control XL 3 is in. The **Mode** defines the function of all the controls.

Your Launch Control XL 3 has two DAW modes (**DAW Control** and **DAW Mixer**), 15 Custom Modes, and one Default mode (slot 16).

- DAW Modes map your Launch Control XL 3 to preset mappings in your DAWs, see [Controlling your DAW with the Launch Control XL 3 \[28\]](#).
- You can edit the controls in Custom Modes, see [Custom Modes \[20\]](#).

To select a Mode:

1. Press the **Mode** button to enter mode selection.

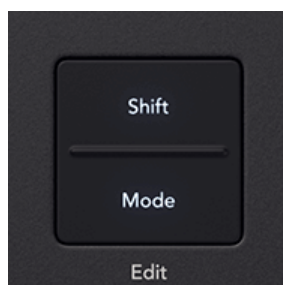

The 16 buttons light, the currently selected Mode is white, the rest are blue.



2. Press a blue button to change the mode. The screen shows the name of the mode. **Mode** is a toggle button; it stays active when you press it once. You can switch modes multiple times using the buttons, and the other controls update in real time. This lets you quickly toggle between encoder and fader controls.
3. Press the **Mode** button again to exit mode selection.



TIP

If you want to change quickly, hold the **Mode** button, to make it momentary, and press buttons to access the correct **Mode**. Then release **Mode** to return to the mode you selected.

Custom Mode Settings Edit

The **Edit** half of the **Mode** button accesses the Custom Mode Settings Edit menu. Each Custom Mode on Launch Control XL 3 has its own **Edit** menu to configure how the Custom Mode interacts with the MIDI ports.

To enter the Custom Mode settings menu, hold **Shift** and press the **Mode (Edit)** button.

To exit Custom Mode settings edit menu, press the **Mode** button.

- To find a setting, press **Page ▲▼** up and down.
- To adjust a setting use the **Track <>** buttons.

You can change the following settings per Custom Mode.

Setting	Value range	Description	Default value
Ext. MIDI In	On	Merges incoming MIDI data at the In port with MIDI data in the Custom Mode and routes it to MIDI Out port 1.	On
	Off		
Output Port	USB	Sets which port the Custom Mode transmits its MIDI data to.	All
	DIN 1	All sends the MIDI data to the USB and both DIN ports.	
	DIN 2	Output Port does not affect the MIDI In routing.	
	All		

Using the Launch Control XL 3's Encoders


The Launch Control XL 3 has 24 endless encoders, in rows of eight, with LEDs to light depending on the mode.

When you move controls, the screen shows the name and value. To preview a control onscreen, without changing it, hold **Shift** and move the control.

The encoders have different modes, varying by DAW, or you can customise them in Custom Modes.

In [DAW modes \[28\]](#), the encoders have two areas:

- Rows 1 and 2 control one element of the DAW (e.g. plugins or sends).
- Row 3 controls another element (e.g. transport or pan).

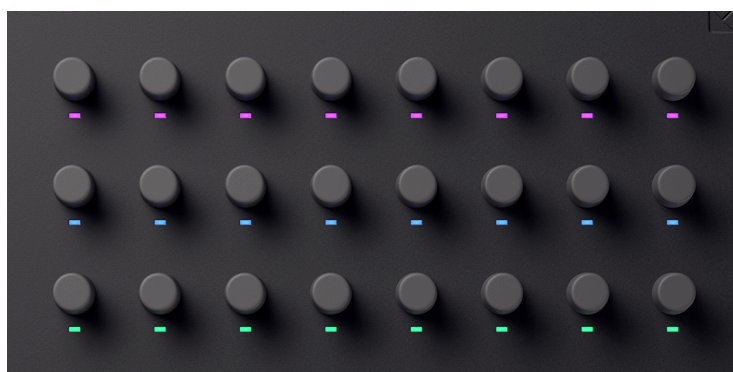

To learn more about encoder modes:

- [Controlling your DAW with the Launch Control XL 3 \[28\]](#)
- [Using Custom Modes on the Launch Control XL 3 \[20\]](#)



TIP

Endless encoders are rotary knobs that spin continuously. This stops jumps in settings when switching modes or tracks. Your Launch Control XL 3 always stays synchronised with your DAW or other devices.

Using the Launch Control XL 3's faders

The Launch Control XL 3 has eight faders. You can use the faders to control the mixer levels in your DAW or send custom MIDI messages to control other devices, like hardware or plugins.

When you move controls, the screen shows the name and value. To preview a control onscreen, without changing it, hold **Shift** and move the control.



The Launch Control XL 3's faders.

To learn more about fader modes:

- [Controlling your DAW with the Launch Control XL 3 \[28\]](#)
- [Using Custom Modes on the Launch Control XL 3 \[20\]](#)

Using the Launch Control XL 3's buttons

At the bottom of your Launch Control XL 3 top panel are two rows of buttons, 19 in total.



When your Launch Control XL 3 is controlling a DAW, the buttons under the faders act as **Solo/Arm** (top row) or **Mute/Select** (bottom row) buttons. The far-left buttons toggle between the settings, see the following sections for more information:

- [Using the Launch Control XL 3 's Solo and Arm DAW buttons \[16\]](#)
- [Using the Launch Control XL 3's Mute and Select DAW buttons \[16\]](#)

When you're not using a DAW, the buttons send custom messages such as MIDI Notes, CCs, Program Changes, NRPNs, and keystrokes.

See [Using Custom Modes on the Launch Control XL 3 \[20\]](#) for more information.

Using the Launch Control XL 3's Solo and Arm DAW buttons

Press the **Solo/Arm** button, to the left of the top button row, to change the top button row between track Solo and record Arm controls.

Solo mode

When the buttons are in Solo mode, pressing a button changes the Solo state of the corresponding DAW track.

Arm mode

When the buttons are in Arm mode, pressing a button changes the record arm state of the corresponding DAW track.

Using the Launch Control XL 3's Mute and Select DAW buttons

Press the **Mute/Select** button, to the left of the bottom button row, to change the bottom button row between Mute and Select controls.

Mute mode

When the buttons are in Mute mode, pressing a button changes the Mute state of the corresponding DAW track.


Select mode

When the buttons are in Select mode, pressing a button changes the Selected track in your DAW.

In Select mode, the buttons light to match the track colours in your DAW. When you select a track, the corresponding button lights white.

Launch Control XL 3's Back Panel



1. **USB [18]** - USB Type-C to connect your Launch Control XL 3 to your computer using the included USB cable.
2. MIDI **Out2/Thru [17]** - 5-Pin MIDI DIN connector for either sending MIDI data independently of the MIDI **Out**, or sending a copy of the MIDI **In** signal.
3. MIDI **Out [17]** - 5-Pin MIDI DIN connector for connecting to external MIDI hardware.
4. MIDI **In [17]** - 5-Pin MIDI DIN connector for receiving MIDI data from external MIDI hardware (such as a MIDI keyboard) to your Launch Control XL 3 in a chain of equipment.
5.  - Kensington Lock, use a lock to secure your Launch Control and deter theft.

Using the Launch Control XL 3's MIDI Ports

The MIDI ports allow you to use the Launch Control XL 3 in hardware and hybrid setups. For example, expanding or adapting the physical controls on a synthesiser, drum machine, or groovebox.



MIDI In

The 5-Pin MIDI DIN **In** port allows you to send data from other MIDI-enabled devices to your Launch Control XL 3.

For example, to use your Launch Control XL 3 with a MIDI keyboard and control multiple devices, or for daisy-chaining Launch Control XL 3's to increase your control.

For more information, see section [Using Launch Control XL 3 outside of a DAW \[22\]](#).

MIDI Out

The MIDI **Out** port allows you to send the MIDI messages from the encoders, faders, and buttons to hardware with MIDI inputs.

This is useful for adding extra control to hardware: synthesisers, drum machines, and grooveboxes, or having instant access to parameters without having to menu dive on your hardware instruments.

For more information, see section [Using Launch Control XL 3 outside of a DAW \[22\]](#).

MIDI Out 2/Thru

The MIDI **Out 2/Thru** port allows you to choose between having a second MIDI out, or a MIDI thru port. You can change this in the [Settings menu \[73\]](#).

- In MIDI Out 2 mode - the port works the same as MIDI Out, you can send MIDI messages from the controls to hardware with MIDI inputs.

This is useful when:

- You need to send MIDI messages to hardware independent from MIDI Out.
For example, controlling two devices using two Custom Modes.
- In MIDI Thru mode - the port works by forwarding a copy of all the MIDI messages coming into the Launch Control XL 3's MIDI **In** DIN port.

This is useful when:

- your Launch Control XL 3 is part of a larger MIDI chain, and you need to transmit MIDI messages from both your Launch Control XL 3 and another device earlier in the chain such as a controller keyboard.
- you have two Launch Control XL 3s and you want to control a set of devices without having to change templates on a single Launch Control XL 3.

For more information, see [Using Launch Control XL 3 outside of a DAW \[22\]](#).

USB Port

The Launch Control XL 3 has a **USB** 2.0 Type-C port. This allows you to connect your Launch Control XL 3 to your computer or a USB MIDI host.

The **USB** port has a few key purposes:


- It provides the Launch Control XL 3 with power, both when connecting to a computer, or in standalone mode.
- It sends and receives MIDI data, either to your DAW, MIDI applications or via a USB MIDI host.
- It allows you to install firmware updates and manage Custom Modes for your Launch Control XL 3 via Components.

Using Custom Modes on the Launch Control XL 3

Custom Modes let you personalise the controls on your Launch Control XL 3. They can send various MIDI data (notes, CC, keystrokes, program changes) to control software, hardware, or other MIDI devices.

To access Custom Modes:

1. Press the **Mode** button to enter mode selection.

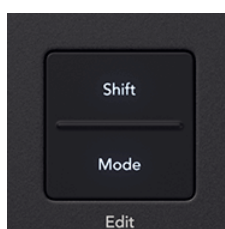

The 16 buttons light, the currently selected Mode is white, the rest are blue.



2. Press a blue button to change the mode. The screen shows the name of the mode.



NOTE

You can't edit mode 16, it's a [default set of values \[77\]](#).

Custom Mode Settings Edit

The **Edit** half of the **Mode** button accesses the Custom Mode Settings Edit menu. Each Custom Mode on Launch Control XL 3 has its own **Edit** menu to configure how the Custom Mode interacts with the MIDI ports.

To enter the Custom Mode settings menu, hold **Shift** and press the **Mode (Edit)** button.

To exit Custom Mode settings edit menu, press the **Mode** button.

- To find a setting, press **Page ▲▼** up and down.
- To adjust a setting use the **Track <>** buttons.

You can change the following settings per Custom Mode.

Setting	Value range	Description	Default value
Ext. MIDI In	On Off	Merges incoming MIDI data at the In port with MIDI data in the Custom Mode and routes it to MIDI Out port 1.	On
Output Port	USB DIN 1 DIN 2 All	Sets which port the Custom Mode transmits its MIDI data to. All sends the MIDI data to the USB and both DIN ports. Output Port does not affect the MIDI In routing.	All


Creating Launch Control XL 3 Custom Modes in Novation Components

Novation Components (web-based and standalone) lets you create, modify, save, and load Custom Modes for your product Launch Control XL 3.

Go here to use or download Components:

components.novationmusic.com

You can create Custom Modes with or without your Launch Control XL 3 connected and send them when you do connect it.

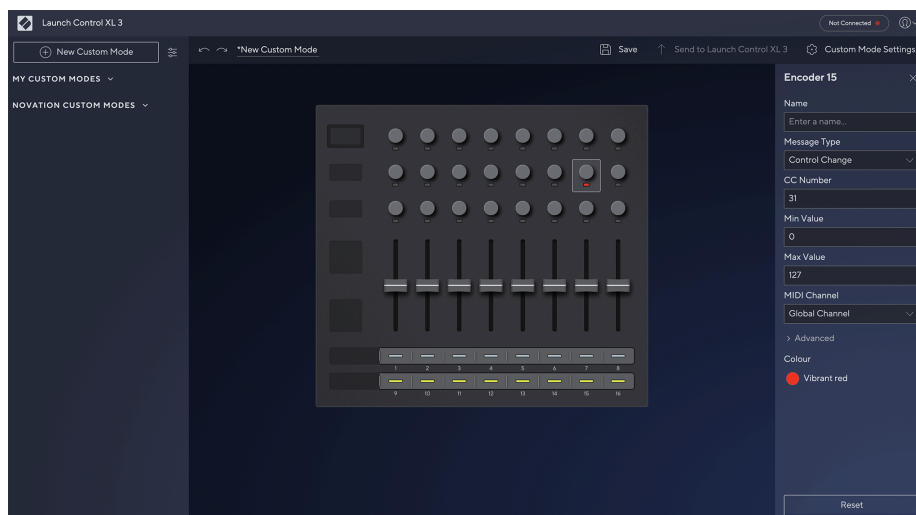

Using Launch Control XL 3 outside of a DAW

Along with the DAW integration, the Launch Control XL 3 can send MIDI data from its **USB** and MIDI **Out** ports to work with other MIDI-capable software or hardware, in both musical and non-musical applications.

To send MIDI data from the Launch Control XL 3 you need to use one of the Custom Modes.

In each Custom Mode, you can assign different MIDI CC, Note, program change, NRPN , keystroke data to controls on the Launch Control XL 3 and send this to the corresponding software or hardware.



NOTE

The types of message you can assign varies per control.

You can edit the MIDI data the following controls send out using [Novation Components](#):

- Encoders
- Faders
- Buttons



NOTE

The following are examples of what you could do, how you'd set it up and what connections you need to make. Exact functionality of every synth, drum machine, lighting software or editing suite varies, so it's best to check the user guides for your other gear in combination with these examples.

Controlling another device with Launch Control XL 3

The simplest setup is using the Launch Control XL 3 to control one device with a single MIDI cable.

This is useful if the device you're controlling doesn't have any controls, or you're looking to expand the number of controls.



1. In this example, the Launch Control XL 3 MIDI **Out** is connected to a synth's MIDI In to control its parameters.

Using one cable allows you to send MIDI data from the Launch Control XL 3 to control the synth, or other MIDI device.

When you're doing this, make sure:

- The Launch Control XL 3's controls send on the MIDI channel the device is set to. You can assign every control to a different MIDI channel.
- The Launch Control XL 3's controls are set to the correct message type and range. For more information, look at the MIDI implementation chart for the device you want to control's user guide.

Controlling multiple devices with Launch Control XL 3

In this setup, the Launch Control XL 3 is a controller for two devices. Its controls are assigned to control synth on Custom Mode 1 and a drum machine on Custom Mode 2. Also connected to the MIDI **In** is a keyboard controller using the Launch Control XL 3's MIDI merge function (see [Settings \[73\]](#)) to pass the keys' data directly to the synthesiser.



1. MIDI **In** comes from a controller keyboard.
The MIDI information coming into the Launch Control is passed to MIDI **Out (DIN 1)** in Custom Mode 1 and MIDI **Out 2** in Custom Mode 2. To setup the MIDI routing use the **Ext. MIDI In** and **Output Port** settings in the [Custom Mode Edit menu](#) for each Custom Mode. This means you can play the synth with the keyboard and control the synth with the Launch Control XL 3.
2. MIDI **Out** goes from the Launch Control XL 3 to a synth.
You can set the Synth to MIDI Channel 1 (for example) and set up a Custom Mode to use the encoders and faders to control the synth. For example, frequency controls, LFOs, and the faders for the ADSR envelopes.

You could use the buttons at the bottom to toggle switches on your synth like oscillator waveform, or bypassing effects.

3. MIDI **Out 2/Thru** goes from the Launch Control XL 3 to a drum machine.

You could connect another synth, but in this case we're going for a full setup and adding drums. In a **second Custom Mode**, set the **Output Port** to **DIN 2** (see [Custom Mode Edit menu](#)). Set the controls to map to the drum machine for example, encoders for pitch, decay etc. and faders for the main level for each drum.

You could also use the Launch Control XL 3's buttons to send note data to trigger drums sounds or control drum mutes.



NOTE

To change what the Launch Control XL 3 is controlling you need to use different Custom Modes. Each Custom Mode set to the channel of the device receiving MIDI.

In each Custom Mode you could assign every control to a parameter, but we've just used half for clarity.

Using the Launch Control XL 3 in a hybrid setup

In this setup, the Launch Control XL 3 acts as a controller and MIDI router in a hybrid setup (computer and hardware).

You can connect a MIDI keyboard to Launch Control XL 3's MIDI **In** and as you select different Custom Modes, the incoming keyboard MIDI data is merged with the Launch Control XL 3's controls and routed to different hardware devices.

In the software domain, both the MIDI keyboard and Launch Control XL 3 connect to Live and allow you to blend software sounds and DAW sessions with your hardware.



1. A MIDI controller keyboard connects from its MIDI out to the Launch Control XL 3's MIDI **In**.

Connecting a MIDI keyboard to your synths via the Launch Control XL 3 allows you to route the incoming MIDI data to either MIDI Out ports on the Launch Control XL 3. For example, if you set Custom Mode 1 to route to DIN **Out**, both the MIDI keyboard and the Launch Control XL 3's controls route to the Peak. If you set Custom Mode to DIN **Out 2** when you change Custom Mode both the keyboard and Launch Control XL 3 control the drum machine connected to DIN **Out 2**.

2. A synthesiser (in this case Peak) is connected to the Launch Control XL 3's MIDI **Out** (this could be any other MIDI device with a MIDI input).
3. A drum machine is connected to the Launch Control XL 3's MIDI **Out 2** (this could be any other MIDI device with a MIDI input).
4. In this hybrid setup, we've also connected both the MIDI controller keyboard and the Launch Control XL 3 to the computer via USB.

This allows us to bring a DAW into the workflow and use software sounds or pre-recorded material mixed with the hardware instruments. You can use the MIDI keyboard to play or control your DAW session and the Launch Control XL 3 in either of the DAW modes to have hands on control the DAW session.



TIP

The Launch Control XL 3's three MIDI ports and USB capabilities make it useful in many setups, hardware, software, or hybrid.

Using your Launch Control XL 3 in non-musical applications

Although we've primarily designed the Launch Control XL 3 for music production it's well suited to controlling a range of non-musical software via MIDI. You can set up custom routing using Custom Modes, and map its knobs, faders and buttons to parameters in any software or hardware that accepts MIDI, for example:

- Video software like Resolume.
- Lighting software or DMX mixers via MIDI inputs.
- Controlling other creative software like Adobe Lightroom and Premiere Pro.

Controlling your DAW with the Launch Control XL 3

The Launch Control can control a range of DAWs (Digital Audio Workstations) using the encoders, faders, and buttons.

The encoders have two DAW modes, DAW Control and DAW Mixer, accessible using Shift + the two buttons in the bottom left. In FL Studio, these modes also change the function of the buttons.

When you connect your Launch Control XL 3 to your DAW, the encoders default to DAW Mixer mode.

Controlling Ableton Live with the Launch Control XL 3

The following sections explain the Launch Control XL 3's Ableton Live integration.


Connecting your Launch Control XL 3 to Ableton Live

When you connect your Launch Control XL 3 to Ableton Live it is automatically set up as a Control Surface.


If the Launch Control XL 3 isn't automatically detected, you need to set it up in the **Link, Tempo & MIDI** tab of Live's Settings menu.

1. Go to:
 - Windows: Options > Settings > **Link, Tempo & MIDI**
 - Mac: Live > Settings > **Link, Tempo & MIDI**
2. Set Control Surface to Launch Control XL 3.
3. Set the Input and Output dropdowns to LCXL3 DAW In and LCXL3 DAW Out.
Make sure you select the **DAW** Out and **DAW** In on macOS and **Port 2 (MIDIIN2)** on Windows.
4. Close the Settings window.

When correctly set up your Settings should look like this:

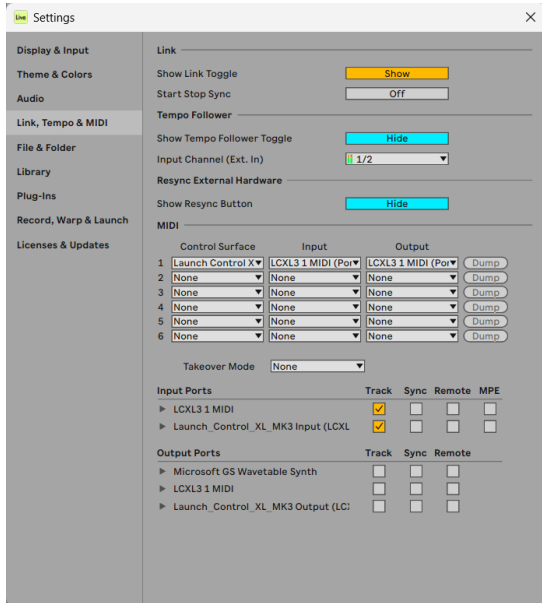

Windows

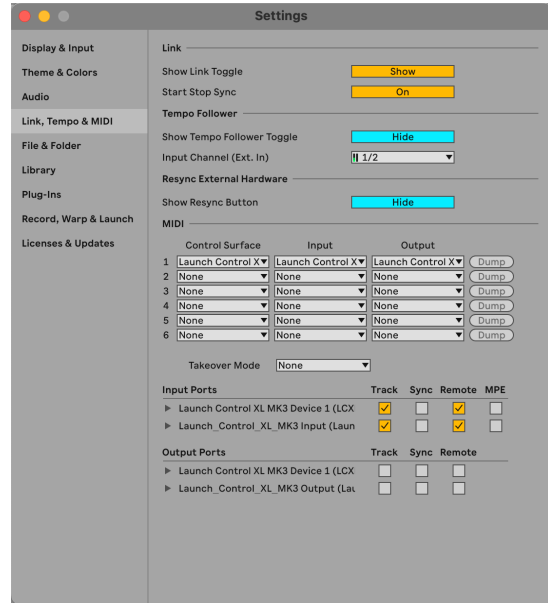

macOS

Navigating with Track buttons in Ableton Live

Press the **Track** buttons to move to the next/previous track in Ableton Live.

Track buttons light to show you when you're able to move track. For example, if you're on Track 1, the < **Track** button wouldn't light as you can only move to the next track.

You can jump in banks of eight, hold **Shift** and press the **Track** buttons to move the selection up or down eight tracks. You can also use this to get to return tracks.

Previewing controls in Ableton Live

Shift lets you preview controls. Hold **Shift** and move a control; the screen shows you the value without changing it.



TIP

You can preview controls in any mode on the Launch Control XL 3.

Using the encoders in Ableton Live

The Launch Control XL 3 has two DAW encoder modes.

To change modes, press **Mode** and press **DAW Mixer** (Solo/Arm) or **DAW Control** (Mute/Select) in the bottom left corner. Press **Mode** again to exit mode selection.

These modes change what the encoders map to. The faders and buttons always control the same elements.

Ableton Live's DAW Mixer encoder mode

In **DAW Mixer** mode, each encoder row controls a different set of mixer settings:

1. Send levels for the current track bank.
2. Send levels for the current track bank.
3. Pan value for the current track bank.




TIP

To change modes, press **Mode** and press **DAW Mixer** (Solo/Arm) or **DAW Control** (Mute/Select) in the bottom left corner. Press **Mode** again to exit mode selection.

Ableton Live Send controls in DAW Mixer mode

In **DAW Mixer** mode, the top two encoder rows control the Send levels for the current track bank.

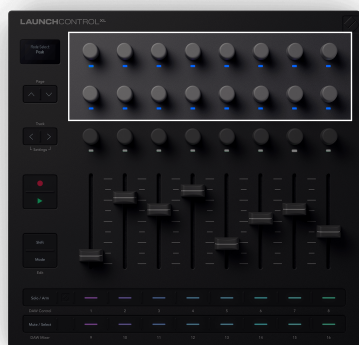


The encoders' LEDs light blue to match the colour of the sends in Live.

If you have more than two sends, the **Page** buttons navigate through the different Sends.


As you change Sends, the screen shows the Send's names.

Ableton Live Pan controls in DAW Mixer mode

In **DAW Mixer** mode, the third encoder row controls Pan for the current track bank.

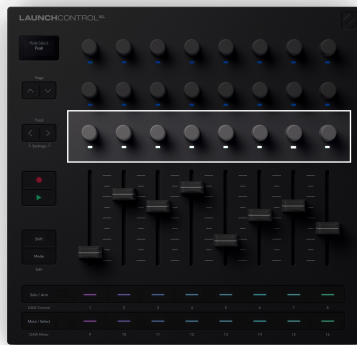

When you move a Pan encoder, the screen shows you the track name and Pan position, L for Left, C for Centre and R for right.

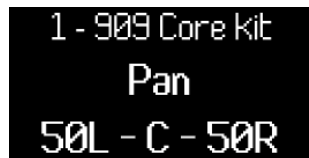

The encoder LED changes colour to show the Pan position:

1. Blue for left.
2. Dim white for centre.
3. Orange for right.



Ableton Live DAW Control encoder mode

In DAW Control mode, each encoder row controls a different set of settings:

1. Device controls - for the currently selected device.
2. Device controls - for the currently selected device.
3. Transport controls.



TIP

To change modes, press **Mode** and press the **DAW Mixer** (Solo/Arm) or **DAW Control** (Mute/Select) buttons in the bottom left corner of your Launch Control XL 3. Press the **Mode** button again to exit mode selection.



WHAT ARE ABLETON LIVE DEVICES?

Every track in Live can host a number of devices. Devices come in three different sorts: MIDI effects, audio effects, and instruments

For more information see [Ableton's Live user guide here](#).

Ableton Live Device encoder controls



TIP


Every track in Live can host a number of devices. Devices come in three different sorts: MIDI effects, audio effects, and instruments

- MIDI effects affect MIDI signals on MIDI tracks.
- Audio effects affect audio signals.
- Instruments, located in MIDI tracks, receive MIDI and output audio.

For more information see [Ableton's Live user guide here](#).

For more information see [Ableton's Live user guide here](#).

When your Launch Control XL 3 is in DAW Control mode, the top two encoder rows map to 16 controls in the currently selected device.

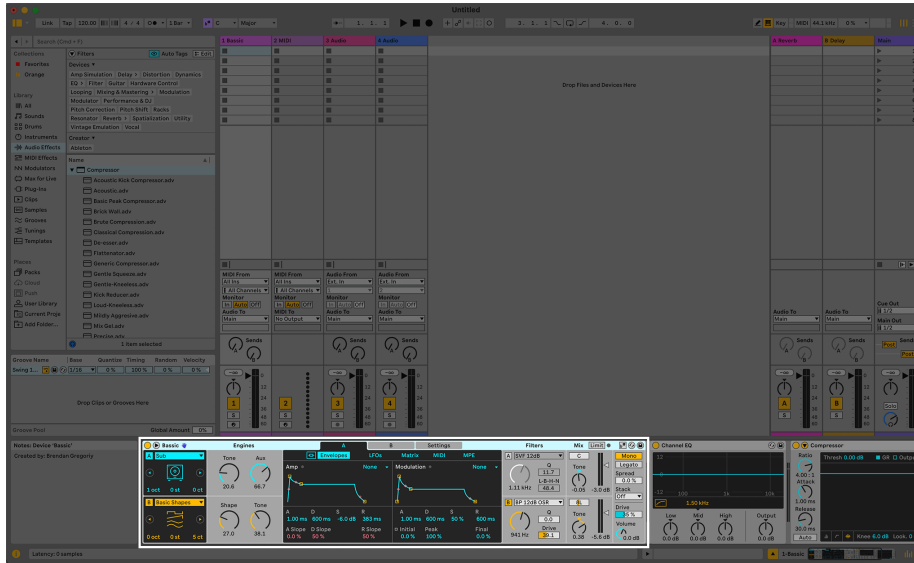

In this example, Launch Control XL 3 controls the device highlighted.


If your Device has more than 16 controls, move through them using the **Page** buttons.

Moving between Devices

If your Track has more than one Device, hold **Shift** and press a **Page** button to move to the next Device (**Page** down) or previous Device (**Page** up).



TIP

Ableton Live adds a small blue hand  icon to the top bar of the device you're controlling.

Ableton Live's Transport encoder controls

In **DAW Control** mode, the third encoder row controls Transport.

Transport mode brings controls of your DAW's arrangement view onto your encoders, giving you hands-on control of your project's navigation.

The encoder LEDs light to show which encoders are available and related.



Encoder	Function	Screen name	Encoder LED Colour
1	Arrangement view playback position	Playback Position	White
2	Zoom horizontal (to playback position)	Zoom Horizontal	White
3	Zoom vertical (Track Height)	Zoom Vertical	Turquoise
4	Loop Start point	Cycle Start	Yellow
5	Loop End Point	Cycle End	Yellow
6	Loop active	Cycle Active	Yellow
7	Marker Selection	Marker Select	White
8	Tempo	BPM	Orange

Playback Position

Encoder 1 controls Scrub, or Playback Position. The encoder moves the playhead left and right through your arrangement in beats.

The screen shows the current playhead position.

Ableton's Zoom Control

There are two encoders assigned to zoom in Live: Zoom Horizontal and Zoom Vertical.

Zoom Horizontal

In Arrangement view, Zoom Horizontal keeps the track heights the same but zooms in and out keeping the playback position central to the zoom.

In Session view, the Zoom Horizontal encoder moves between tracks.

Zoom Vertical

In Arrangement view, Zoom Vertical changes the track heights.

In Session view, the Zoom Vertical encoder adjusts the selected clips.

Loop Start and End

Encoders 4 and 5 control the Loop Start and Loop End points in your DAW.

When you change the Loop points, the screen temporarily shows the Loop point you've changed, and its position in Bars and Beats.

Loop on/off

Encoder 6 turns on/off the Loop switch in your DAW.

Marker Select

Encoder 7 moves your DAW's playhead between markers you've set up in your DAW.

Moving the encoder clockwise or anti-clockwise moves your playhead to the next or previous marker.

When you move markers, the screen temporarily shows the name of the marker you've moved to.

If you've not set up any markers in your project yet, the Marker Select encoder doesn't do anything and when you move it the screen shows 'No Markers':



Marker Select
Previous/Next

The way you add markers varies by DAW. To find out how to add markers in your DAW, read the user guide for your specific DAW.


Tempo

Encoder 8 controls the tempo of your DAW.

Using the Launch Control XL 3's faders in Ableton Live

The faders only have one function; to control the volume level of the current track bank.

In both DAW modes, the Launch Control XL 3 faders control the Track Volume of the current track bank.

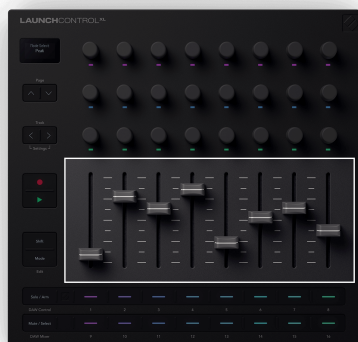

When you move a fader, the screen shows the track name and level in dB.



Using the buttons in Ableton Live

Each button row has two settings you can individually control.

- The top row controls **Solo** or **Arm**.
- The bottom row controls **Mute** or **Select**.

To change the function, press the far left button on the corresponding row.



Solo and Arm buttons

You can change the top button row between **Solo** and Record **Arm**.

Solo mode

In **Solo** mode, the buttons toggle the solo state of tracks.



Track 2 is soloed.

In **Solo** mode, the buttons light blue; bright blue when the track is soloed and dim blue when they aren't.



TIP

If your project is set to Cue mode, instead of Solo, the **Solo** function activates Cue. This allows you to preview tracks from a separate Cue output.

Learn more in Ableton Live's user manual here [Soloing and Cueing](#).

Record Arm mode

In **Arm** mode, the buttons toggle the record arm state of their respective tracks.



Track 3 above is Record armed.

In **Arm** mode, the buttons light red– dim red if the track isn't armed and bright red if the track is record armed.


When you change the record arm state, the screen shows the track name you changed.

Mute and Select buttons

You can change the bottom button row between **Mute** and track **Select**.

Mute mode

Mute mode changes the function of the bottom row so they show the mute status of each track. Pressing a button mutes, or unmutes, a track.

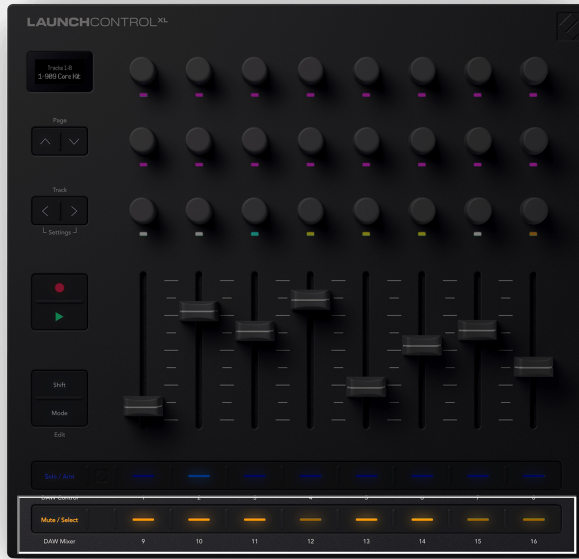


Tracks 4, 7, and 8 are muted (buttons 12, 15, and 16 are dim).

In **Mute** mode, the buttons light orange; bright orange when the track is active and dim yellow for muted tracks.

Select mode

In **Select** mode, the buttons select tracks in your DAW for playback and deeper device control.

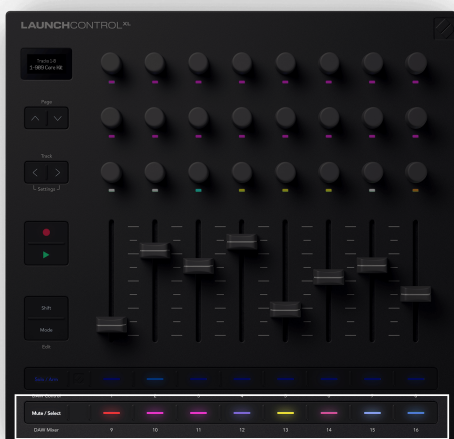

The **Select** button lights match the Track colours in Live.



The track colours in Live.


In **Select** Mode, the buttons light up as the tracks' colours.

The selected track lights full brightness, the other tracks are dim.

When you select a track, the screen shows the track's name.

Using the Play button in Ableton Live


Play controls Live's play function:

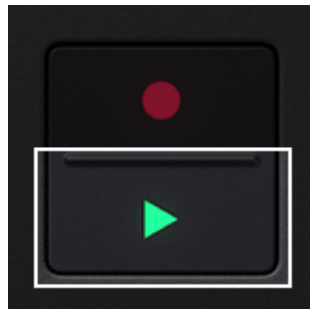

- If playback is stopped, play starts playback from the beginning of the session or the start marker.
- If playback is playing, play stops playback.
- Holding Shift and Play continues Play from the stop point.

Using the Record button in Ableton Live

Record toggles arrangement record on and off. When record is active in Live, the button is fully lit.

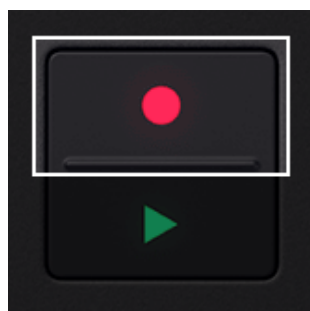

Recording active




TIP

By default, pressing record in Live starts the transport and recording.

You can change this, so pressing the record button arms recording, but won't start until you press play.

To do this, right click Ableton Live's record button and choose disabled Start Transport With Record.



Controlling Logic Pro with the Launch Control XL 3

The following sections explain the integration the Launch Control XL 3 has in Logic Pro.


Connecting your Launch Control XL 3 to Logic Pro

When you connect your Launch Control XL 3 to Logic Pro and you have the script installed it is automatically set up as a Control Surface.

If the Launch Control XL 3 isn't automatically detected, you need to set it up in Control Surface Setup.

1. Download the Launch Control XL 3 script for Logic Pro from the downloads page here: downloads.novationmusic.com
Install the script from your computer's downloads folder.
2. Open Logic Pro, the Launch Control XL 3 should be automatically setup.
If not, go to:
 - a. Logic Pro (in the top menu bar).
 - b. Control Surfaces.
 - c. Setup...
3. Click Launch Control XL 3 in the right-hand side of the window.
4. Set the Input and Output dropdowns to LCXL3 DAW In and LCXL3 DAW Out.
5. Close the Control Surface Setup window.

When set up, your MIDI Settings page should look like this:

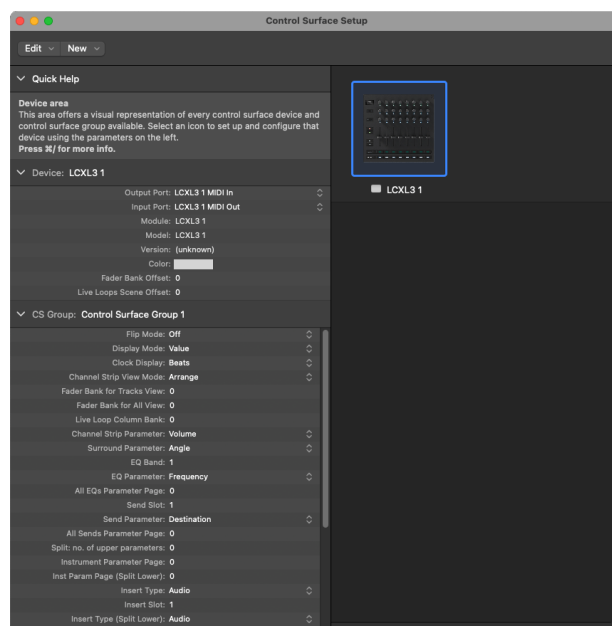


The ports can be set to either DAW or MIDI. Logic automatically assigns them to MIDI.

Navigating with Track buttons in Logic Pro

Press the **Track** buttons to move to the next/previous track in Logic Pro.

When you move tracks, your Launch Control XL 3 's screen temporarily shows the new track's name.



Selected Track
Track 1's Name

Track buttons light to show you when you're able to move track. For example, if you're on Track 1, the < **Track** button wouldn't light as you can only move to the next track.

Previewing controls in Logic Pro

Shift lets you preview controls. Hold **Shift** and move a control; the screen shows you the value without changing it.



TIP

You can preview controls in any mode on the Launch Control XL 3.

Using the encoders in Logic Pro

The Launch Control XL 3 has two DAW encoder modes.

To change modes, press **Mode** and press **DAW Mixer** (Solo/Arm) or **DAW Control** (Mute/Select) in the bottom left corner. Press **Mode** again to exit mode selection.

These modes change what the encoders map to. The faders and buttons always control the same elements.


Logic Pro's DAW Mixer encoder mode

In **DAW Mixer** mode, each encoder row controls a different set of mixer settings:

1. Send levels for the current track bank.
2. Send levels for the current track bank.
3. Pan value for the current track bank.

Logic Pro Send controls in DAW Mixer mode

In **DAW Mixer** mode, the top two encoder rows control the Send levels for the current track bank.

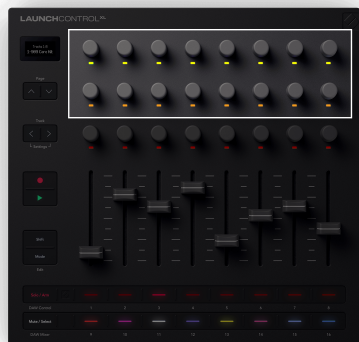

If you have more than two sends, the **Page** buttons navigate through the different Sends.



The encoders LEDs light yellow for the top row and amber for the second row. The colours don't change when you bank through your sends.

As you change Sends, the screen shows the Send's names.

Logic Pro Pan controls in DAW Mixer mode

In **DAW Mixer** mode, the third encoder row controls Pan for the current track bank.

The encoder LEDs light red when they're controlling Pan.

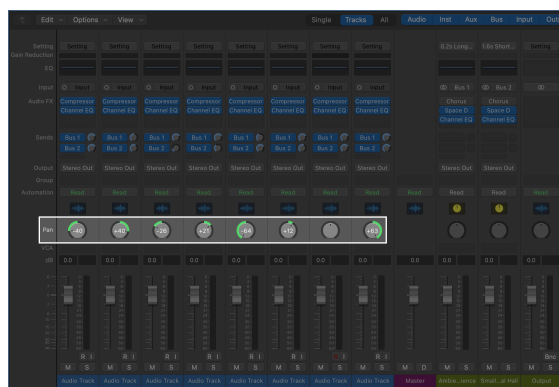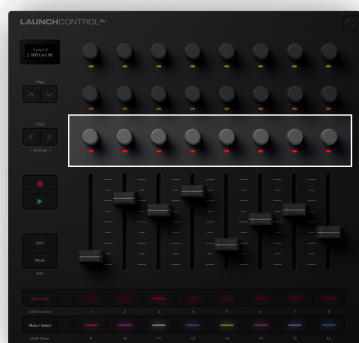

When you move a Pan encoder, the screen shows you the track name and Pan position, L for Left, C for Centre and R for right.

1 - 909 Core kit
Pan
50L - C - 50R

Logic Pro DAW Control encoder mode

In **DAW Control** mode, each encoder row controls a different set of Logic Pro settings:

Encoder row:

1. Smart controls for the currently selected plugin or Logic EQ controls.
2. Smart controls for the currently selected plugin or Logic EQ controls.
3. Transport controls.

Logic Pro Smart Control and EQ controls in DAW Control mode

By default, the top two encoder rows control Logic Pro's Smart Controls for the current plugin.

If the plugin/instrument has more smart controls, you can use the **Page** buttons to move pages.

As you press the **Page** buttons, the top two encoder rows change from Logic Pro's Smart controls to Logic Pro's EQ Controls.

When you move an encoder, your screen shows you the name of the track, the parameter, and the value.



TIP

You can access Logic Pro's Smart controls in the top left corner of Logic or using the shortcut 'B' on your Mac's keyboard.




EQ encoder control

To access the EQ encoder control, use the **Page** down button until the screen shows EQ.



Mixer EQ mode adds an EQ plugin to the selected track if one isn't already present.

When you're in EQ Mixer mode, the encoders map to the following EQ controls:

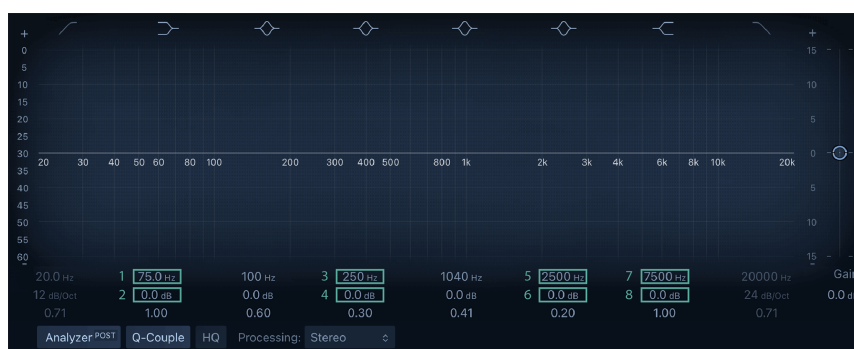

Encoder	Parameter	Screen Name
1	Band 2 Frequency	Low Shelf
2	Band 2 Gain	Low Shelf
3	Band 4 Frequency	Low Mid
4	Band 4 Gain	Low Mid
5	Band 6 Frequency	High Mid
6	Band 6 Gain	High Mid
7	Band 7 Frequency	High Shelf
8	Band 7 Gain	High Shelf

Logic Pro's Transport encoder controls

In **DAW Control** mode, the third encoder row controls Transport.

Transport mode brings controls of your DAW's arrangement view onto your encoders, giving you hands-on control of your project's navigation.

The encoder LEDs light to show which encoders are available and related.



Encoder	Function	Screen name	Encoder LED Colour
1	Arrangement view playback position	Playback Position	Light Teal
2	Zoom horizontal (to playback position)	Zoom Horizontal	Blue
3	Loop Start point	Loop Start	Yellow
4	Loop End Point	Loop End	Yellow
5	Loop active		Yellow
6	Marker Selection	Marker Select	White
7	N/A		
8	Tempo	BPM	Green

Playback Position

Encoder 1 controls Scrub, or Playback Position. The encoder moves the playhead left and right through your arrangement in beats.

The screen shows the current playhead position.

Zoom

In Transport Encoder mode, Encoder 2 increases and decreases the Zoom level.

Moving the Zoom encoder clockwise Zooms in, anti-clockwise Zooms out.

The screen temporarily shows the last Zoom change:



Loop Start and End

Encoders 4 and 5 control the Loop Start and Loop End points in your DAW.

When you change the Loop points, the screen temporarily shows the Loop point you've changed, and its position in Bars and Beats.

Marker Select

Encoder 7 moves your DAW's playhead between markers you've set up in your DAW.

Moving the encoder clockwise or anti-clockwise moves your playhead to the next or previous marker.

When you move markers, the screen temporarily shows the name of the marker you've moved to.

If you've not set up any markers in your project yet, the Marker Select encoder doesn't do anything and when you move it the screen shows 'No Markers':



The way you add markers varies by DAW. To find out how to add markers in your DAW, read the user guide for your specific DAW.



Tempo

Encoder 8 controls the tempo of your DAW.

Using the faders in Logic Pro

The faders only have one function; to control the volume level of the current track bank.

In both DAW modes, the Launch Control XL 3 faders always control the Fader Volume of the current bank of eight tracks.

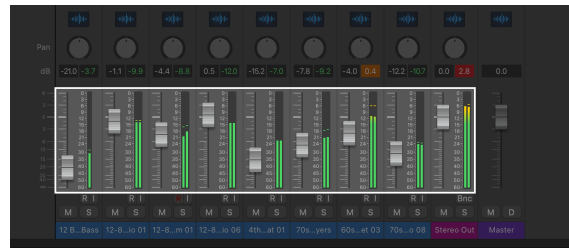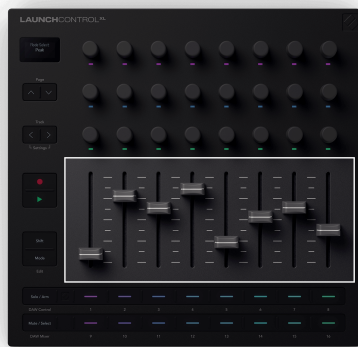

When you move a fader, the screen shows the track name and level in dB.




Using the buttons in Logic Pro

Each button row has two settings you can individually control.

- The top row controls **Solo** or **Arm**.
- The bottom row controls **Mute** or **Select**.

To change the function, press the far left button on the corresponding row.

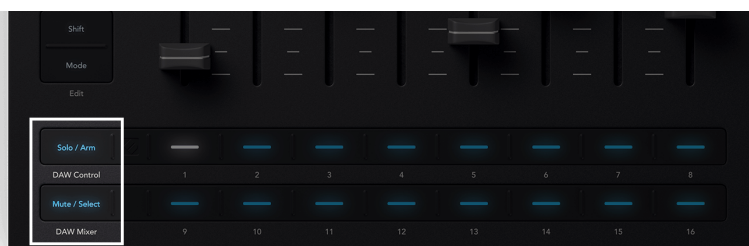

Solo and Arm buttons in Logic Pro

You can change the top button row between **Solo** and Record **Arm**.

Solo mode

In **Solo** mode, the buttons toggle the solo state of tracks.



Track 2 is soloed.

In **Solo** mode, the buttons light bright yellow when the track is soloed and dim yellow when they aren't.

Record Arm mode

In **Arm** mode, the buttons toggle the record arm state of their respective tracks.



Track 3 above is Record armed.

In **Arm** mode, the buttons light red– dim red if the track isn't armed and bright red if the track is record armed.

Mute and Select buttons in Logic Pro

You can change the bottom button row between **Mute** and track **Select**.

Mute mode

Mute mode changes the function of the bottom row so they show the mute status of each track. Pressing a button mutes, or unmutes, a track.




Tracks 4, 7, and 8 are muted (buttons 12, 15, and 16 are dim).

In **Mute** mode, the buttons light bright yellow when the track is muted and dim yellow for active tracks.

Select mode

In **Select** mode, the buttons select tracks in your DAW for playback and deeper device control.

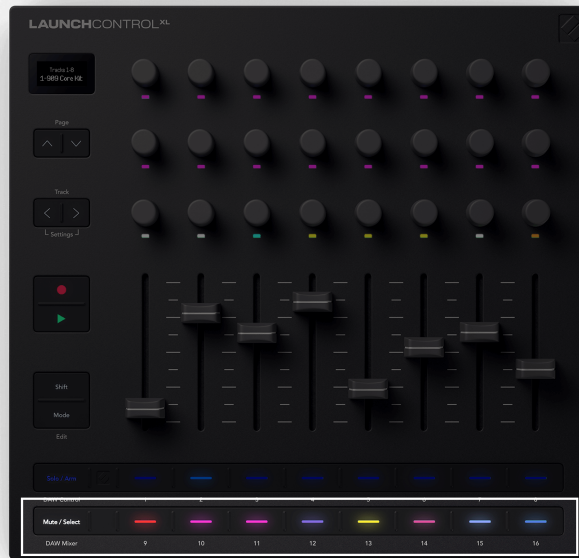

The **Select** button lights match the Track colours in Logic Pro.


In **Select** Mode, the buttons light up as the tracks' colours.

The selected track lights full brightness, the other tracks are dim.

When you select a track, the screen shows the track's name.

Using the Play button in Logic Pro

Play controls the play function.

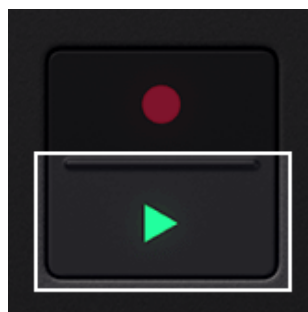

- If playback is stopped, play starts playback from the beginning of the session or the start marker.
- If playback is playing, play stops playback.
- Holding Shift and Play continues Play from the stop point.


Using the Record button in Logic Pro

Record starts the recording process.

To stop recording and playback, press the Play button.

To stop recording and continue playback (e.g. when punching in and out) press the record button again, or press Shift.

While you're recording, the Record button is fully lit.

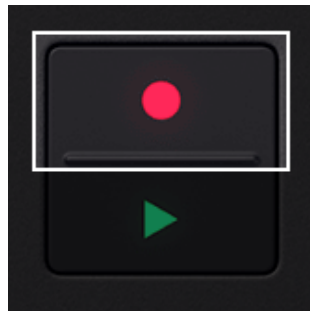

Controlling Cubase with the Launch Control XL 3

The following sections explain the integration the Launch Control XL 3 has in Cubase.


Connecting your Launch Control XL 3 to Cubase

Cubase is set up so when you connect a Launch Control XL 3 it's automatically detected as a MIDI Remote.


If the Launch Control XL 3 isn't automatically detected, you need to set it up in MIDI Remote menu.

1. Download the Launch Control XL 3 script for Cubase from the downloads page here: downloads.novationmusic.com
Install the script from your computer's downloads folder.
2. Open Cubase and go to:
 - a. Studio (in the top menu bar).
 - b. Studio Setup.
 - c. MIDI Remote.
3. Click Open MIDI Remote Manager
4. Set the Input and Output dropdowns to LCXL3 DAW In and LCXL3 DAW Out.
Make sure you select the **DAW** Out and **DAW** In on macOS and **Port 2** (MIDIIN2) on Windows.

When correctly set up, your MIDI Remote Manager page should look like this:

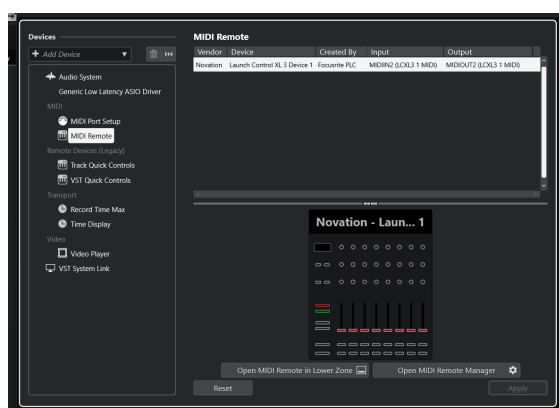

Windows

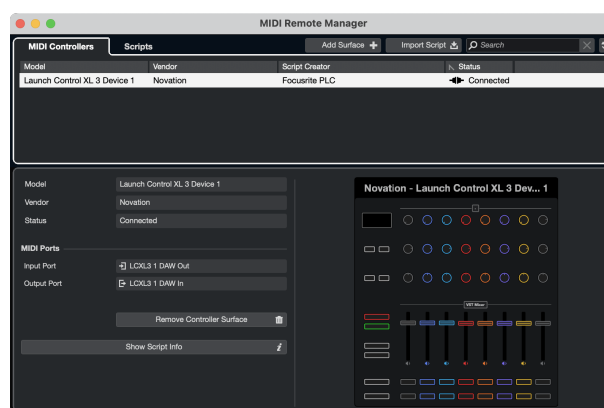

macOS

Navigating with Track buttons in Cubase

Press the Track buttons to move to the next/previous track in Cubase.

When you move tracks, your Launch Control XL 3's screen temporarily shows the new track's name.

Selected Track
Track 1's Name

Track buttons light to show you when you're able to move track. For example, if you're on Track 1, the < **Track** button wouldn't light as you can only move to the next track.

Previewing controls in Cubase

Shift lets you preview controls. Hold **Shift** and move a control; the screen shows you the value without changing it.



TIP

You can preview controls in any mode on the Launch Control XL 3.

Using the encoders in Cubase

The Launch Control XL 3 has two DAW encoder modes.

To change modes, press **Mode** and press **DAW Mixer** (Solo/Arm) or **DAW Control** (Mute/Select) in the bottom left corner. Press **Mode** again to exit mode selection.

These modes change what the encoders map to. The faders and buttons always control the same elements.


Cubase's DAW Mixer encoder mode

In **DAW Mixer** mode, each encoder row controls a different set of mixer settings:

1. Send levels for the current track bank.
2. Send levels for the current track bank.
3. Pan value for the current track bank.

Cubase Send controls in DAW Mixer mode

In **DAW Mixer** mode, the top two encoder rows control the Send levels for the current track bank.

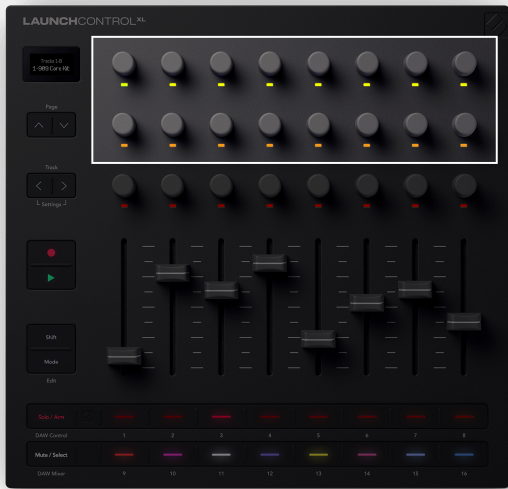


The encoders LEDs light yellow for the top row and amber for the second row. The colours don't change when you bank through your sends.

If you have more than two sends, the **Page** buttons navigate through the different Sends.


As you change Sends, the screen shows the Send's names.

Cubase Pan controls in DAW Mixer mode

In **DAW Mixer** mode, the third encoder row controls Pan for the current track bank.

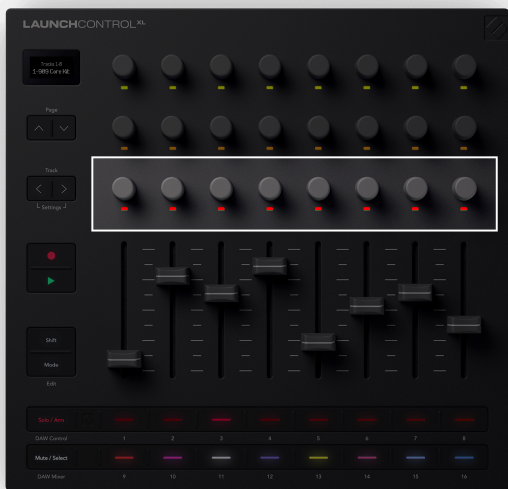

When you move a Pan encoder, the screen shows you the track name and Pan position, L for Left, C for Centre and R for right.

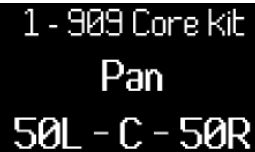

1 - 909 Core kit
Pan
50L - C - 50R

The encoder LEDs light red when they're controlling Pan.

Cubase DAW Control encoder mode

In DAW Control mode, each row of encoder controls a different set of settings relating to Cubase:

Encoder row:

1. Cubase's eight [Track Quick Controls](#) for the selected track.
2. Cubase's [Channel EQ](#) for the selected track.
3. Transport controls.

Cubase's Track Quick Controls in DAW Control mode

When the encoders are in DAW control mode, the top row maps to the eight Cubase Track Quick Controls for the currently selected track.

Cubase Quick Controls are per-track. The encoders map to the selected track's Quick Controls.



TIP

To set up Quick Control assignments for each track in Cubase see the [Track Quick Controls section in the Cubase User Guide](#).

You can see the Quick Controls assignments in the MIDI Remote section of Cubase.




When you move an encoder, the screen shows the Quick Control's name and value.



Cubase Channel EQ DAW Control mode

When the encoders are in DAW control mode the second row maps to the [Cubase Channel EQ](#) for the current track.


When your encoders are in Mixer EQ Mode, the encoders map to the following:

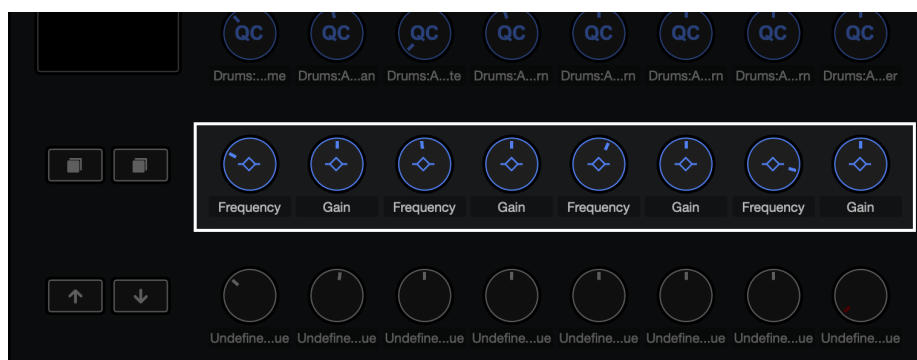

Encoder	Parameter	Screen Name
1	Band 1 Frequency	Lo Freq
2	Band 1 Gain	Lo Gain
3	Band 2 Frquency	LMF Freq
4	Band 2 Gain	LMF Gain
5	Band 3 Frequency	HMF Freq
6	Band 3 Gain	HMF Gain
7	Band 4 Frequency	Hi Freq
8	Band 4 Gain	Hi Gain



TIP


To open the Cubase channel strip, go to the MixConsole and click the Edit Channel Settings button  for the track you want to adjust.

Cubase's Transport encoder controls

In **DAW Control** mode, the third encoder row controls Transport.

Transport mode brings controls of your DAW's arrangement view onto your encoders, giving you hands-on control of your project's navigation.

The encoder LEDs light to show which encoders are available and related.

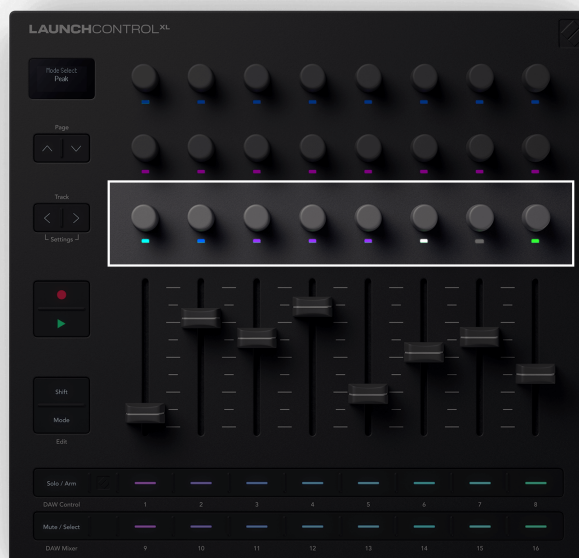

Encoder	Function	Screen name	Encoder LED Colour
1	Arrangement view playback position	Scrub	Light Teal
2	Zoom in/out	Zoom	Blue
3	Loop Start point	Left Locator	Purple
4	Loop End Point	Right Locator	Purple
5	Loop active	Cycle Activate	Purple
6	Marker Selection	Marker Select	White
7	N/A		
8	Tempo	Tempo	Green

Playback Position

Encoder 1 controls Scrub, or Playback Position. The encoder moves the playhead left and right through your arrangement in beats.

The screen shows the current playhead position.

Zoom

In Transport Encoder mode, Encoder 2 increases and decreases the Zoom level.

Moving the Zoom encoder clockwise Zooms in, anti-clockwise Zooms out.

The screen temporarily shows the last Zoom change:



Loop Start and End

Encoders 4 and 5 control the Loop Start and Loop End points in your DAW.

When you change the Loop points, the screen temporarily shows the Loop point you've changed, and its position in Bars and Beats.

Marker Select

Encoder 7 moves your DAW's playhead between markers you've set up in your DAW.

Moving the encoder clockwise or anti-clockwise moves your playhead to the next or previous marker.

When you move markers, the screen temporarily shows the name of the marker you've moved to.

If you've not set up any markers in your project yet, the Marker Select encoder doesn't do anything and when you move it the screen shows 'No Markers':

Marker Select
Previous/Next

The way you add markers varies by DAW. To find out how to add markers in your DAW, read the user guide for your specific DAW.


Tempo

Encoder 8 controls the tempo of your DAW.

Using the faders in Cubase

The faders only have one function; to control the volume level of the current track bank.

In both DAW modes, the Launch Control XL 3 faders always control the Volume Faders of the current bank of eight tracks.

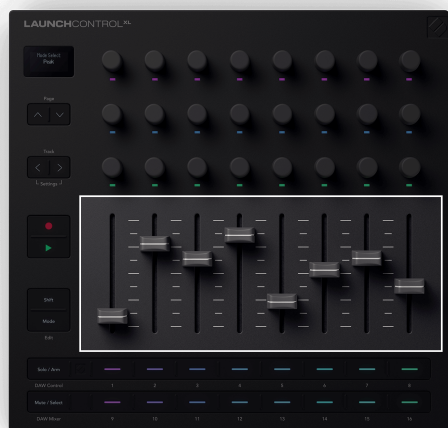

When you move a fader, the screen shows the track name and level in dB.

Electric Piano
Volume
-2.3 dB

Using the buttons in Cubase

Each button row has two settings you can individually control.

- The top row controls **Solo** or **Arm**.
- The bottom row controls **Mute** or **Select**.

To change the function, press the far left button on the corresponding row.



Solo and Arm buttons in Cubase

You can change the top button row between **Solo** and Record **Arm**.

Solo mode

In **Solo** mode, the buttons toggle the solo state of tracks.



Track 2 is soloed.

In Solo mode, the buttons light bright pink when the track is Soloed and dim pink when they aren't.

Record Arm mode

In **Arm** mode, the buttons toggle the record arm state of their respective tracks.



Track 3 above is Record armed.

In **Arm** mode, the buttons light red– dim red if the track isn't armed and bright red if the track is record armed.


When you change the record arm state, the screen shows the track name you changed.

Mute and Select buttons in Cubase

You can change the bottom button row between **Mute** and track **Select**.

Mute mode

Mute mode changes the function of the bottom row so they show the mute status of each track. Pressing a button mutes, or unmutes, a track.

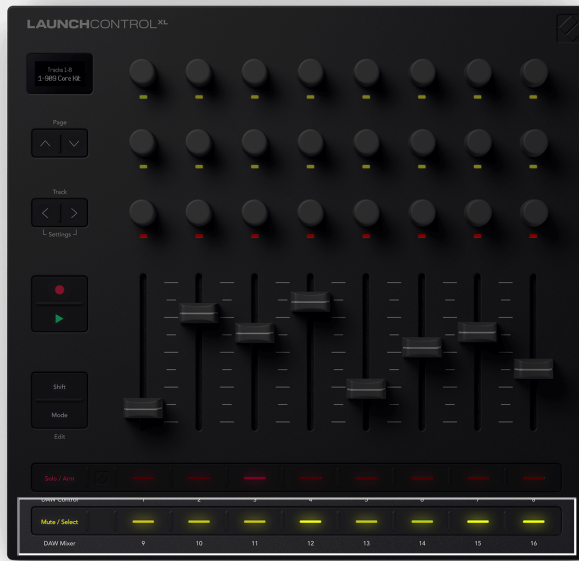


Tracks 4, 7, and 8 are muted (buttons 12, 15, and 16 are dim).

In Mute mode, the buttons light bright yellow when the track is muted and dim yellow for active tracks.

Select mode

In **Select** mode, the buttons select tracks in your DAW for playback and deeper device control.

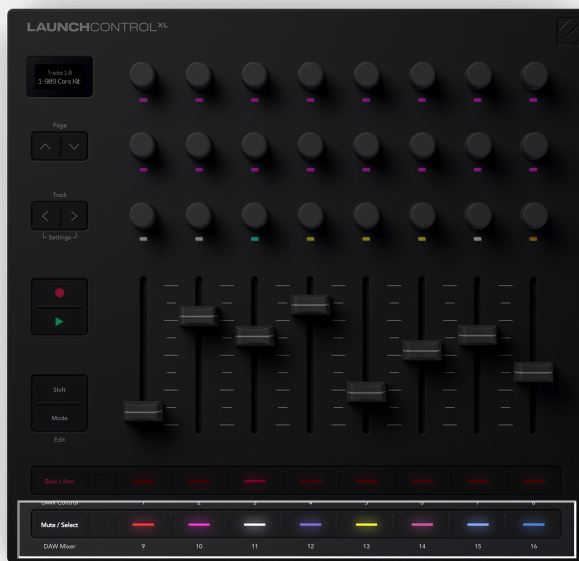


In **Select** Mode, the buttons light up as the tracks' colours.

The selected track lights full brightness, the other tracks are dim.

When you select a track, the screen shows the track's name.

Using the Play button in Cubase

Play controls the play function.

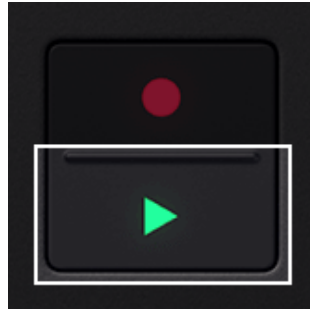


- If playback is stopped, play starts playback from the beginning of the session or the start marker.
- If playback is playing, play stops playback.
- Holding Shift and pressing play moves the playhead to the last stop point.

Using the Record button in Cubase

Record starts the recording process.

While you're recording, the Record button is fully lit.

If you press record again, the recording stops and Cubase carries on playing. To stop playback, press the play button.

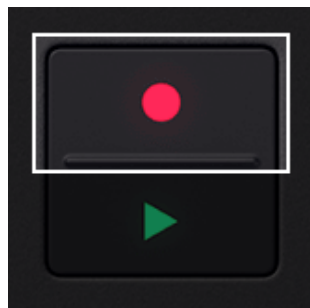

Recording active

Controlling FL Studio with the Launch Control XL 3

The following sections explain the integration the Launch Control XL 3 has in FL Studio.

Connecting your Launch Control XL 3 to FL Studio

FL Studio is set up so when you connect a Launch Control XL 3 it's automatically detected.

If the Launch Control XL 3 isn't automatically detected, you need to set it up in MIDI Settings.

1. Install the latest version of FL Studio to make sure you have the latest script installed.
2. Open FL Studio.
3. Go to: Options > MIDI Settings.
4. Set the following using the Port field and the Controller type drop down.

Output

Using the Port field set:


- **LCXL3 1 MIDI** to a port, e.g. 23.
- **LCXL3 DAW** (macOS) or **MIDIIN2 (LCXL3 1 MIDI)** (Windows) to a different port, e.g. 37

Input


Using the Controller Type drop-down set the following and match the port numbers to the Output above:

- **LCXL3 1 MIDI Out** to Novation Launch Control XL 3 MIDI and port 23.
- **LCXL3 DAW In** (macOS) or **MIDIIN2 (LCXL3 1 MIDI)** (Windows) Novation Launch Control XL 3 DAW and port 37.

When set up, your MIDI Settings page should look like this:

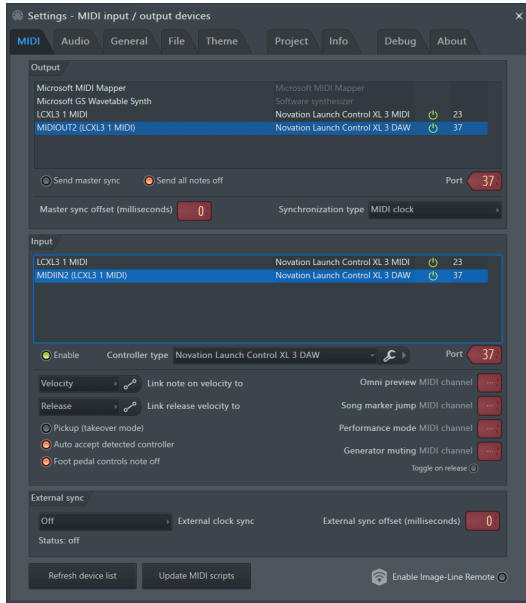

Windows

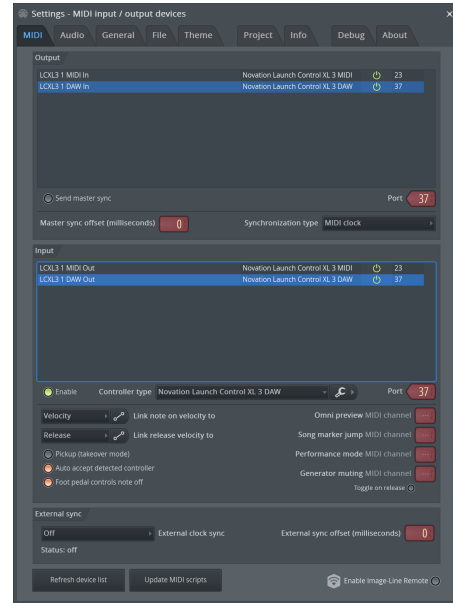

Mac

Navigating with Track buttons in FL Studio

The Track buttons behaviour changes depending on which mode you're using, DAW Control or DAW Mixer.

- In DAW Control mode, the Track buttons navigate FL Studio's Channel Rack. Holding Shift and pressing the Track buttons selects the next/previous channel.
- In DAW Mixer mode, the Track buttons navigate FL Studio's Mixer in banks of eight tracks. Holding Shift and pressing the Track buttons selects the next/previous tracks.

Previewing controls in FL Studio

Shift lets you preview controls. Hold **Shift** and move a control; the screen shows you the value without changing it.



TIP

You can preview controls in any mode on the Launch Control XL 3.

Using the DAW modes in FL Studio

In FL Studio, the two DAW modes on Launch Control XL 3 change the controls between FL Studio's two mixers, the main mixer and the Channel Rack.

- DAW Control mode controls FL Studio's Channel Rack.

- DAW Mixer mode controls FL Studio's Mixer

FL Studio's DAW Control mode

Launch Control XL 3's DAW Control mode assigns the controls to FL Studio's Channel Rack.

- The encoder rows control:
 1. Plugin parameters
 2. No controls assigned
 3. Channel Rack Pans.
- The faders control Channel Rack volume.
- button row 1 controls Channel Rack selection.
- button row 2 controls Channel Rack mutes.

Controlling FL Studio's Plugin parameters

In DAW Control mode, encoder row 1 controls up to eight parameters of the currently selected Channel Rack plugin.

The number of controls varies by plugin, but encoders with available parameters light below.

Controlling FL Studio's Channel Rack Pan

In DAW Control mode, encoder row 3 controls Channel Rack Pan. for the current bank.

If less than eight Channels are in the Channel Rack, only encoders with available pan controls light red.



Controlling FL Studio's Channel Rack volume

The faders control the Channel Volume of the current track bank.



When you move a fader, the screen shows the track name and Volume in dB.



Using the buttons in FL Studio's DAW Control mode

In DAW Control mode, the button rows control:

- Button row 1 controls the Channel Rack selection. Each button lights the colour of each Channel in the Channel Rack.
- Button row 2 controls Channel Rack mutes. Each button lights the colour of each Channel, bright when it's active, dim when muted.


FL Studio's DAW Mixer mode

Launch Control XL 3's DAW Mixer mode assigns the controls to FL Studio's Mixer.

- The encoder rows control:
 1. Mixer Track Parametric EQ
 2. FL Studio's Transport
 3. Mixer Pans.
- The faders control mixer volume.
- Button row 1 controls Solo/Arm.
- Button row 2 controls Mute/Select.

Controlling FL Studio's Track EQ

In DAW Mixer mode, encoder row 1 controls FL Studio's Mixer Track Parametric EQ.

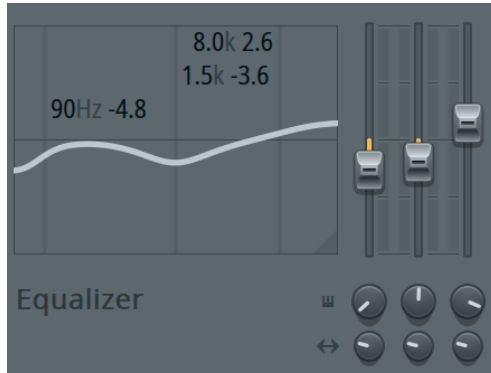

The first six encoders light purple, to show the available controls, and map to the following EQ controls:

Encoder	Parameter	Screen name
1	Band 1 Frequency	Low Shelf
2	Band 1 Level	Low Shelf
3	Band 2 Frequency	Peaking
4	Band 2 Level	Peaking
5	Band 3 Frequency	High Shelf
6	Band 3 Level	High Shelf
7	Not used	Not used
8	Not used	Not used

Controlling FL Studio's Transport

In DAW Control mode, the second encoder row controls Transport.

Transport mode brings controls of your DAW's arrangement view onto your encoders, giving you hands-on control of your project's navigation.

The encoder LEDs light to show which encoders are available and related.


Encoder	Function	Screen name	Encoder LED Colour
1	Arrangement view playback position		Turquoise
2	Zoom in/out	Zoom	Blue
3			
4			
5	Marker Selection	Marker	White
6			
7			
8	Tempo	Tempo	Green

Controlling FL Studio's Mixer Pan

In **DAW Mixer** mode, the third encoder row controls Pan for the current track bank.





When you move a Pan encoder, the screen shows you the track name and Pan position, L for Left, C for Centre and R for right.

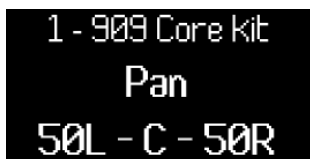

Controlling FL Studio's Mixer volume control

The faders control the mixer volume level of the current track bank.

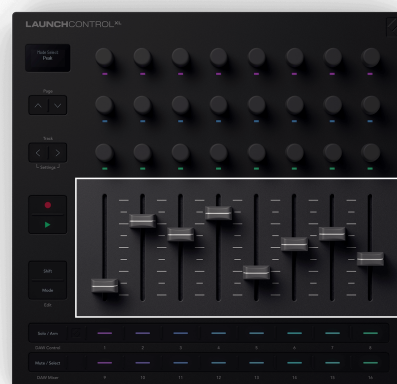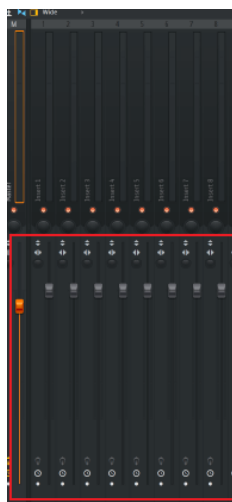

When you move a fader, the screen shows the track name and level in dB.

Electric Piano
Volume
-2.3 dB


Using the buttons in DAW Mixer mode

In DAW Mixer mode, each button row controls the corresponding controls in FL Studio's Mixer.

- button row 1 controls either Solo or Arm.
 - In Solo mode the Solo/Arm button lights white.
 - In Arm mode, the whole button row lights red.
- button row 2 controls either Mute or Select.
 - In Mute mode, the Mute/Select button lights white.
 - In Select mode, the Mute/Select button lights green.


Using the Play button in FL Studio

The Play button triggers FL Studio's Play function.

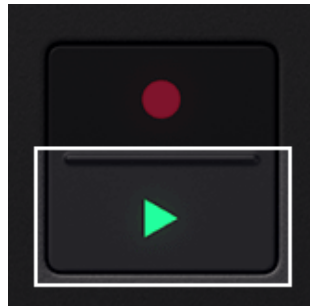

Using the Record button in FL Studio

The Record button triggers FL Studio's Record button.

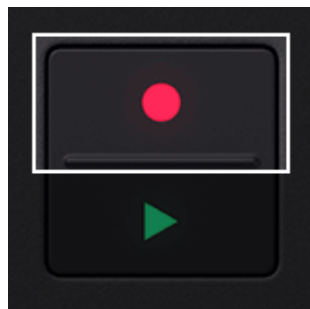

What this does, depends on how your Record function is set up in FL Studio. For more information see the FL Studio [user guide](#).

Launch Control XL 3's Settings page

Settings lets you adjust your Launch Control XL 3's workflow and hardware. The table below shows the available settings.

To access Settings, press and hold both **Track** <> buttons for 300 milliseconds.

When you're in Settings:

- To find a setting, press **Page** ▲▼ up and down.
- Adjust the setting's value using the top-left encoder or the Track ◆ buttons. The screen shows the current value.

To exit **Settings**, press the **Mode** button and your Launch Control XL 3 returns to its previous state.

Setting	Value range	Description	Default value
LED Brightness	1-10	Controls the LED brightness.	8
Screen Brightness	1-10	Controls the screen brightness.	8
Message Timer	1-10	Set how long temporary messages stay on screen.	3
MIDI Thru	On/Off	When on, it forwards all MIDI messages from the input to DIN output 2.	Off
Global Channel	1-16	Sets the global channel for Custom Mode controls.	1

Bootloader mode

Bootloader allows you to change some settings you don't need to change on the fly.

To enter bootloader

1. Unplug the USB cable from your Launch Control XL 3.
2. Hold both Page buttons.
3. Connect the USB cable to power it on.
4. Keep holding the Page buttons until the Launch Control XL 3 is on.

In bootloader mode, you can change the following:

1. Easy Start on/off using the record button.
2. Device ID - using button row 1. Useful when you're using multiple Launch Control XL 3's in your DAW.

To exit bootloader

- Press the Play button.

Launch Control XL 3's Specifications

Technical Specifications

Controls	
Screen	OLED Display
Encoders	24 encoders with RGB LED lights.
Faders	Eight 60mm throw faders.
buttons	16 buttons, two below each fader.
Navigation	Two encoder Page up and down buttons. Two Track left and right buttons.
Transport buttons	Record Play
Other buttons	Shift - for accessing secondary functions. Mode - to change the rest of the control surface controls.
Connectivity	1 x USB-C port - for power and data. 3 x MIDI ports - In, Out and Out2/Thru. Out and Out2/Thru support power over MIDI, up to 3.3V, 10mA. Kensington Lock port.

Weight and Dimensions

Weight	902g (1.99lbs)
Height	43mm (1.69") including knob caps
Width	250mm (9.84")
Depth	239mm (9.41")



A diagram of the Launch Control XL 3 with dimensions.


Launch Control XL 3 spares

Part Number	Description	Category
CBLE002141	FFC CABLE 40 WAYS P=0.5mm L=36mm Same side contacts (internal cable)	Cable
FFMB002415	Launch Control XL 3 Knob cap	Plastics
FFMB002414	Launch Control XL 3 Fader Cap	Plastics

Launch Control XL 3 appendix

Default Mode (16) parameters

You can't edit Mode 16, instead it's a default set of the following CCs that send on MIDI channel 16.

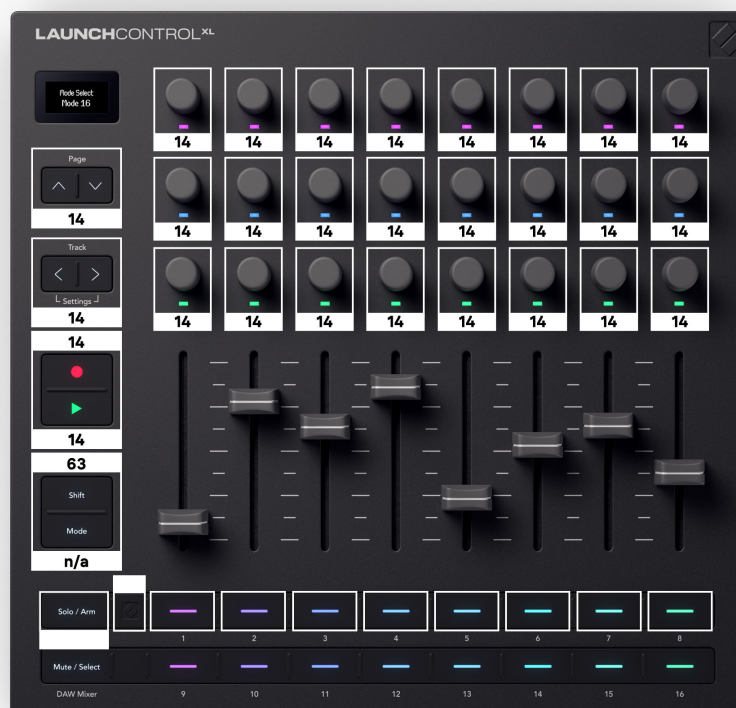

Novation Notices

Troubleshooting

For help getting started with your Launch Control XL 3, visit:

novationmusic.com/get-started

If you have any questions or need any help at any time with your Launch Control XL 3, visit our Help Centre. Here you can also contact our support team:

support.novationmusic.com

We recommend you check for updates to your Launch Control XL 3 so you have the latest features and bug fixes. To update your Launch Control XL 3's firmware, you need to use Components:

components.novationmusic.com

Trade Marks

The Novation trademark is owned by Focusrite Audio Engineering Ltd. All other brands, products, company names, and any other registered names or trade marks mentioned in this manual belong to their respective owners.

Disclaimer

Novation has taken all steps to ensure the information given here is correct and complete. In no event can Novation accept any liability or responsibility for any loss or damage to the owner of the equipment, any third party, or any equipment which may result from this manual or the equipment it describes. The information provided in this document may be changed at any time without warning. Specifications and appearance may differ from those listed and illustrated.

Copyright and Legal Notices

Novation is a registered trademark and Launch Control is a trademark of Focusrite Group PLC.

All other trademarks and trade names are the property of their respective owners.

2025 © Focusrite Audio Engineering Limited. All rights reserved.



ELECTROSTATIC DISCHARGE (ESD)

A strong electrostatic discharge (ESD) may affect the normal operation of this product. If this happens, reset the unit by removing and replugging the USB cable. Normal operation should return.

Credits

Novation would like to thank the following Launch Control XL 3 team members for their hard work in bringing you this product:

Mobashir Ahmed, Ben Bates, Taavi Bonny, Nick Bookman, Conor Boyd, Adam Briffa, Robert Briggs, Hannah Budworth, Mario Buoninfante, André Cerqueira, William Charlton, Jason Cheung, Richard Collard, Sam Counihan, Vidur Dahiya, Emma Davies, Kai Van Dongen, Ed Fry, Taren Gopinathan, Ryan Gray, Martin Haynes, Jake Helps, Jay Hutchins, Loz Jackson, Eddie Judd, Daniel Kay, Arnav Luthra, Paul Mansell, Ben McCurdy, Rudy McIntyre, Vini Moreira, Julian Mountford, Gagan Mudhar, Danny Nugent, Nick Van Peteghem, Pierre Ruiz, Hasan Saeed, Sophia Sanghera, Dan Stephens, Cerys Williams, Lewis Williams, Alex Wu, Greg Zielinski, Sandor Zsuga

And of course our beta testers!

Authored by Ed Fry.